# **Manual Supplement**

Manual Title: 1744/1743 Users Part Number: 2560353 Print Date: April 2006 Revision/Date: 1, 6/06 Supplement Issue:5Issue Date:3/11Page Count:4

This supplement contains information necessary to ensure the accuracy of the above manual.



On page 7, replace Table 2 with:

#### Table 2. Standard Equipment

| Equipment  | Model/Part<br>Number |
|--|----------------------|
| Power Quality Logger   | 1744/1743            |
| International IEC Power Plug Adapter Set   | 2441372              |
| RS232 Cable, Red, Null-Modem   | 2540511              |
| FS17XX IP65-TF, 3000A IP65 4-PH FLUKE 1743/4 THIN<br>FLEXI SET   | 3889418              |
| Dolphin Clip, Black (4x)   | 2540726              |
| Color Coding Wire Clips  | WC17XX               |
| Soft Case  | 2715509              |
| English Users Manual   | 2560353              |
| CD with Users Manual (English, German, French, Spanish,<br>Portuguese, Simplified Chinese, Italian), and PQ Log<br>software (same languages as the manual) | 2583493              |
| Power Cord Adapter for paralled connection to test leads   | 2651702              |
| USB Adapter  | 2539565              |

On page 4, add the following symbol to Table 1:



Do not apply around or remove from the Hazardous Live conductors.


### On page 7, replace Table 3 with:

| Description   | Model or<br>Part<br>Number |
|---|----------------------------|
| i1A/10A CLAMP PQ4, 4-PHASE 1A/10A MINI CURRENT<br>CLAMP SET FOR PQ    | 3024424                    |
| I5A/50A CLAMP PQ3, 3-PHASE 5A/50A MINI CURRENT<br>CLAMP SET FOR PQ    | 3024436                    |
| I5A/50A CLAMP PQ4, 4-PHASE 5A/50A MINI CURRENT<br>CLAMP SET FOR PQ    | 3024449                    |
| i20/200A CLAMP PQ3, 3-PHASE 20A/200A MINI CURRENT<br>CLAMP SET FOR PQ | 3024451                    |
| i20/200A CLAMP PQ4, 4-PHASE 20A/200A MINI CURRENT CLAMP SET FOR PQ    | 3024460                    |
| 3000/6000A-TF-4, 3000A/6000A 4-PH 36-INCH THIN FLEXI<br>SET           | 3889395                    |
| i1A/10A CLAMP PQ3, 3-PHASE 1A/10A MINI CURRENT<br>CLAMP SET FOR PQ    | 3024413                    |
| 1-PHASE 1A/10A MINI CURRENT CLAMP SET FOR PQ                          | 3345753                    |
| 1-PHASE 5A/50A MINI CURRENT CLAMP SET FOR PQ                          | 3345766                    |
| FS17XX-1PH-TF, 3000A 1PH FLUKE 1735 & 174X THIN<br>FLEXI              | 3889429                    |
| 1743/44 Poleset   | 3024485                    |
| C435 Hardcase   | 2654865                    |

#### Table 3. Optional Accessories

On page 15, under *Connecting the Logger*, add the following text and Figure:

• To avoid shock or personal injury, keep fingers behind the tactile barrier, see the figure.

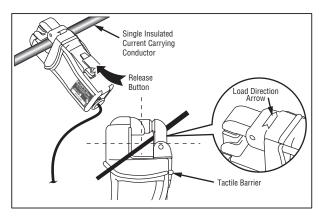

cab01.eps

Using the Optional Microclamps

On page 56, under Total power, delete the following text:

• 2 1/2 wattmeter method

### Change #4, 57884


On page 48, under *Environmental Specifications*, following Safety add:

Altitude 2000 m

On page 17, following the Note, add:

### **Operating Instructions**

- 1. Connect the Probe to the 1735 via the current input socket.
- 2. Wear protective equipment or de-energize the circuit and place the Probe around the conductor under test. To lock the coil, see the Figure.
- 3. Re-energize the circuit.
- 4. Observe and take measurements as required. Positive output indicates that the current flow is in the direction shown by the arrow on the Probe.
- 5. Wear protective gloves or de-energize the circuit before removal of the Probe.

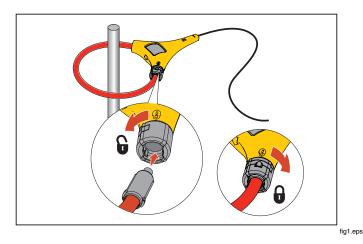

Locking the Coil