

ATyS p

Motorised Changeover Switch

Instruction Manual

FR

EN

DE

IT

ES

NL

PT

RU

PL

TR

ZH



www.socomec.com
To download, brochures, catalogues and technical manuals:



INDEX

1. GENERAL SAFETY INSTRUCTIONS	8
2. INTRODUCTION	9
3. THE ATYS FAMILY PRODUCT RANGE	10
3.1. THE ATYS RANGE KEY FEATURES	10
4. QUICK START	12
4.1. QUICK START ATYS P FRAME B3 TO B5 (125A TO 630A)	12
4.2. QUICK START ATYS P FRAME B6 TO B8 (800A TO 3200A)	16
5. GENERAL OVERVIEW	20
5.1. PRODUCT INTRODUCTION	20
5.2. PRODUCT IDENTIFICATION	21
5.3. ATS CONTROL MODULE INTERFACE	22
5.4. ENVIRONMENTAL	23
5.4.1. IP RATING	23
5.4.2. OPERATING CONDITIONS	23
5.4.2.1. TEMPERATURE	23
5.4.2.2. HYGROMETRY	23
5.4.2.3. ALTITUDE	23
5.4.3. STORAGE CONDITIONS	23
5.4.3.1. TEMPERATURE	23
5.4.3.2. STORAGE DURATION PERIOD	24
5.4.3.3. STORAGE POSITION	24
5.4.4. VOLUME AND SHIPPING WEIGHTS BY REFERENCE ATYS P	24
5.4.5. CE MARKING	25
5.4.6. LEAD FREE PROCESS	25
5.4.7. WEEE	25
5.4.8. EMC STANDARD	25
5.5. ATYS P ACCESSORIES AVAILABLE	26
5.5.1. CUSTOMER MOUNTED ACCESSORIES	26
5.5.2. FACTORY FITTED ACCESSORIES	26
6. INSTALLATION	27
6.1. PRODUCT DIMENSIONS	27
6.1.1. DIMENSIONS: FRAME B3 TO B5 (125A TO 630A)	27
6.1.2. DIMENSIONS: FRAME B6 & B7 (800A TO 1600A)	28
6.1.3. DIMENSIONS: FRAME B8 (2000A TO 3200A)	29
6.2. MOUNTING ORIENTATION	30
6.3. ASSEMBLY OF CUSTOMER MOUNTED ACCESSORIES	30

6.3.1. TERMINAL SHROUDS	30
6.3.2. TERMINAL SCREENS	30
6.3.3. BRIDGING BAR INSTALLATION	31
6.3.4. COPPER BAR CONNECTION KITS (2000A TO 3200A : FRAME B8)	32
6.3.5. INCOMING COPPER BAR CONNECTION KIT ASSEMBLY	33
6.3.6. OUTGOING BRIDGE CONNECTION ASSEMBLY	33
6.3.7. EXTERNAL POWER SUPPLY (400VAC - 230VAC)	34
6.3.8. EXTERNAL POWER SUPPLY (12/24VDC - 230VAC)	34
6.3.9. RAISED MOUNTING SPACERS	34
6.4. FACTORY FITTED ACCESSORIES	35
6.4.1. PADLOCKING KEY INTERLOCKS	35
6.4.2. ADDITIONAL AUXILIARY CONTACTS	35
6.5. ATYS P OPTIONAL MODULE INSTALLATION	36
7. CONNECTIONS	37
7.1. POWER CIRCUITS	37
7.1.1. CABLE OR BAR CONNECTIONS	37
7.1.2. POWER CONNECTION TERMINALS	37
7.1.3. POWER CONNECTION CROSS-SECTION	37
7.1.4. STANDARD CONNECTION PRIORITY SOURCE SUPPLY ON SWITCH I	38
7.1.5. SPECIFIC CONNECTION PRIORITY SOURCE SUPPLY ON SWITCH II	39
7.2. CONTROL CIRCUITS	40
7.2.1. TYPICAL ATYS P WIRING	40
7.2.2. ATYS P INPUT AND OUTPUT CONTACTS	41
7.2.2.1. MOTORISATION MODULE WIRING	41
7.2.2.2. ATS CONTROL MODULE WIRING	41
7.2.2.3. ATYS P (OPTIONAL MODULE) INPUT / OUTPUT WIRING CONNECTIONS	42
7.2.2.4. TERMINAL DENOMINATION, DESCRIPTION AND CHARACTERISTICS	42
7.3. VOLTAGE SENSING AND POWER SUPPLY KIT	44
7.3.1. STANDARD CONFIGURATION	44
7.3.2. SENSING AND POWER SUPPLY KIT INSTALLATION (4 WIRE CONFIGURATION)	45
7.3.3. SENSING KIT WIRING DIAGRAM (STANDARD)	45
7.3.4. SENSING KIT WIRING DIAGRAM (SPECIFIC)	46
8. OPERATING MODES	49
8.1. MANUAL OPERATION	50
8.1.1. EMERGENCY MANUAL OPERATION	50
8.1.2. PADLOCKING	50
8.2. ELECTRICAL OPERATION	51
8.2.1. DUAL POWER SUPPLY	51
8.2.2. VOLTAGE SENSING INPUTS	51
8.2.3. FIXED INPUTS	52
8.2.3.1. DESCRIPTION	52
8.2.3.2. REMOTE CONTROL LOGIC	53
8.2.3.3. TECHNICAL DATA	53
8.2.4. PROGRAMMABLE INPUTS	54
8.2.4.1. DESCRIPTION	54

8.2.4.2. TECHNICAL DATA	54
8.2.5. FIXED OUTPUTS - DRY CONTACTS.....	55
8.2.5.1. DESCRIPTION	55
8.2.5.2. POSITION AUXILIARY CONTACT	55
8.2.5.3. ATYS P PRODUCT AVAILABLE OUTPUT (MOTORISATION).....	55
8.2.5.4. TECHNICAL DATA	56
8.2.6. PROGRAMMABLE DRY CONTACT OUTPUT	57
9. PROGRAMMING	58
9.1. PROGRAMMING WITH EASY CONFIG SOFTWARE	58
9.1.1. DOWNLOAD AND INSTALL EASY CONFIG SOFTWARE	58
9.2. PROGRAMMING WITH THE ATYS P KEYPAD	60
10. THE LCD DISPLAY.....	60
10.1. PRESENTATION	60
10.2. DISPLAY MODE NAVIGATION AND VISUALISATION.....	61
10.3. IHM ATYS D10 / D20.....	61
11. LOCAL / REMOTE CONTROL (POSITIONS I – 0 – II)	62
12. AUTOMATIC MODE.....	62
12.1. MANUAL & AUTOMATIC MODE / MAINS RESTORATION CONDITIONS	62
12.2. PRIORITY SOURCE LOSS SEQUENCE M-G	63
12.3. PRIORITY SOURCE LOSS AND RESTORATION SEQUENCE M-M	64
12.4. PRIORITY SOURCE AUTOMATIC RESTORATION SEQUENCE.....	64
12.5. PRIORITY SOURCE RESTORATION SEQUENCE M-G	65
13. TEST MODES	66
13.1. TEST OFF LOAD.....	66
13.2. TEST ON LOAD.....	67
13.3. ENGINE EXERCISER (PERIODIC TEST)	67
14. COMMUNICATION.....	68
14.1. GENERAL INFORMATION	68
14.2. JBUS/MODBUS® PROTOCOL.....	68
15. PUTTING THE ATYS P INTO AUTO OPERATION.....	69
16. CHARACTERISTICS	69
17. PREVENTIVE MAINTENANCE.....	72
18. TROUBLE SHOOTING GUIDE.....	72
18.1. EVENTS DISPLAY	74
19. ACCESSORIES: ORDERING INFORMATION	75
19.1. TERMINAL SHROUDS.....	75

19.2. TERMINAL SCREENS	75
19.3. BRIDGING BARS	75
19.4. POWER TERMINAL CONNECTION KITS	76
19.5. CONTROL VOLTAGE TRANSFORMER	76
19.6. VOLTAGE SENSING KITS	77
19.7. PHASE FAILURE DEVICE	77
19.8. DOOR ESCUTCHEON PLATE	77
19.9. MOUNTING SPACERS	78
19.10. CURRENT TRANSFORMERS	78
19.11. OPTIONAL MODULES	78
19.12. REMOTE DISPLAY AND CONTROL UNITS	78
19.13. DC POWER SUPPLY	78
19.14. COMMUNICATION CABLE	79
20. FACTORY FITTED ACCESSORIES	79
20.1. ADDITIONAL AUXILIARY CONTACTS	79
20.2. PADLOCKING IN ALL 3 POSITIONS I – 0 - II	79
20.3. PADLOCKING WITH RONIS TYPE ACCESSORIES	79
21. ATYS FAMILY: ORDERING INFORMATION	80
ANNEXE I. PROGRAMMING WITH EASY CONFIG SOFTWARE	83
ANNEXE I - 1. GETTING STARTED – THE MAIN FUNCTIONAL KEYS	84
ANNEXE I - 2. SELECTING THE ATYS P PRODUCT	84
ANNEXE I - 3. STATUS AND CONTROL SCREEN	85
ANNEXE I - 4. SETTING SCREEN	85
ANNEXE I - 5. POWER MANAGEMENT SCREEN	88
ANNEXE I - 6. TIMERS SCREEN	89
ANNEXE I - 7. INPUT AND OUTPUT CONFIGURATION SCREEN	91
ANNEXE I - 8. ENGINE EXERCISER SCREEN	94
ANNEXE I - 9. SAVING THE CONFIGURED SETTINGS	95
ANNEXE I - 10. EVENT RECORDING SCREEN	95
ANNEXE I - 11. SUPER USER ADDED FUNCTIONALITY	98
ANNEXE II. PROGRAMMING WITH THE ATYS P KEYPAD	105
ANNEXE II - 1. GETTING STARTED - SOFTWARE VERSION	106
ANNEXE II - 2. KEYPAD OPERATIONAL MODES	106
ANNEXE II - 3. KEYPAD PROGRAMMING - GENERAL INFORMATION	107
ANNEXE II - 4. CONFIGURATION NAVIGATION SCREEN	108
ANNEXE II - 5. PARAMETER MODIFICATIONS	109

ANNEXE II - 6. SETUP MENU – KEYPAD NAVIGATION	110
ANNEXE II - 7. VOLTAGE LEVELS MENU – KEYPAD NAVIGATION	112
ANNEXE II - 8. FREQUENCY LEVELS MENU – KEYPAD NAVIGATION	113
ANNEXE II - 9. POWER LEVELS MENU – KEYPAD NAVIGATION	114
ANNEXE II - 10. TIMERS MENU – KEYPAD NAVIGATION	114
ANNEXE II - 11. I/O MENU – KEYPAD NAVIGATION	117
ANNEXE II - 12. COMMUNICATION MENU – KEYPAD NAVIGATION	122
ANNEXE II - 13. DATE AND TIME – KEYPAD NAVIGATION	123
ANNEXE III. MODBUS® COMMUNICATION ADDRESS AND DESIGNATION DETAILS.	125
ANNEXE III - 1. METROLOGY AFFECTED BY CURRENT AND VOLTAGE TRANSFORMERS	126
ANNEXE III - 2. ENERGY	126
ANNEXE III - 3. METROLOGY NOT AFFECTED BY CURRENT AND VOLTAGE TRANSFORMERS	127
ANNEXE III - 4. INPUT/OUTPUT STATE	127
ANNEXE III - 5. NETWORK SETTING	128
ANNEXE III - 6. HOUR/DATE SETTING	128
ANNEXE III - 7. ETHERNET MODULE JBUS INTERFACE	128
ANNEXE III - 8. ACTION SYSTEM	129
ANNEXE III - 9. STATUS	129
ANNEXE III - 10. ENGINE EXERCISER - CUSTOM TIME RANGE STATUS	131
ANNEXE III - 11. MEASUREMENT TABLE (NO CT/VT AFFECTED)	131
ANNEXE III - 12. ENERGIES AND TIME METERS	133
ANNEXE III - 13. TIMERS STATE	134
ANNEXE III - 14. OPTION MODULE STATE	136
ANNEXE III - 15. COMMANDS	137
ANNEXE III - 16. USER COMMANDS	137
ANNEXE III - 17. SETUP TIMER	138
ANNEXE III - 18. SETUP THRESHOLD FOR UPSTREAM VOLTAGES	139
ANNEXE III - 19. SETUP USER'S POWER THRESHOLD	139
ANNEXE III - 20. SETUP NETWORK	140
ANNEXE III - 21. SETUP INPUT/OUTPUT	141
ANNEXE III - 22. COMMUNICATION SETTINGS	153
ANNEXE III - 23. PRODUCT COUNTERS	154
ANNEXE III - 24. OUTPUT SET	154
ANNEXE III - 25. INPUT STATE	155
ANNEXE III - 26. SETUP PULSE AND 0/4-20MA OPTION MODULES	156
ANNEXE III - 27. SETUP CUSTOM TIME	158
ANNEXE III - 28. CUSTOM TIME VALIDATE	159

1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the ATyS p motorised changeover switch manufactured by SOCOMEC.
- Whether the ATyS p is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers recommendations, following good engineering practices and after having read and understood the details in the latest release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer to and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury and/or damage to equipment.
- This instruction manual must be made accessible so as to be easily available to anyone who may need to read it in relation with the ATyS p.
- The ATyS p meets the European Directives governing this type of product and includes CE marking on each product.
- No covers on the ATyS p should be opened (with or without voltage) as there may still be dangerous voltages inside the product such as those from external circuits.
- **Do not handle any control or power cables connected to the ATyS p when voltage may be present on the product directly through the mains or indirectly through external circuits.**
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carry out any maintenance or other work on live parts or other parts in the vicinity of exposed live parts, ensure that the switch including all control and associated circuits are de-energized.

 DANGER	 WARNING	 CAUTION
RISK: Electric shock, burns, death	RISK: Possible personal injury	RISK: Equipment damage

- As a minimum the ATyS p comply with the following international standards:

- IEC 60947-6-1	- IEC 60947-3
- GB 14048-11	- IS 13947-3
- EN 60947-6-1	- EN 60947-3
- VDE 0660-107	- NBN EN 60947-3
- BS EN 60947-6-1	- BS EN 60947-3
- NBN EN 60947-6-1	

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.

2. INTRODUCTION


ATyS p “Automatic Transfer Switching Equipment” (ATSE) is designed for use in power systems for the safe transfer of a load supply between a normal and an alternate source. The changeover is done in open transition and with minimum supply interruption during transfer ensuring full compliance with IEC 60947-6-1, GB 14048-11 and other international TSE standards as listed.

The ATyS p is a full load break (switch type) derived transfer switching equipment where the main components are proven technology devices also fulfilling requirements in IEC 60947-3 standards.

As a Class PC ATSE, the ATyS p is capable of “making and withstanding short circuit currents” assigned to IEC 60947-3 utilization categories of up to AC23A, GB 14048-11, IEC 60947-6-1 and equivalent standards with utilization categories of up to AC33B.

ATyS p motorised source changeover switches ensure:

- Power Control and Safety between a normal and an alternate source.
 - A complete product delivered as a fully assembled and tested solution.
 - Intuitive HMI for emergency / local operation.
 - Integrated and robust switch disconnection.
 - Window with clearly visible position indication I – 0 – II.
 - An inherent failsafe mechanical interlock.
 - Stable positions (I – 0 – II) non affected by typical vibration and shocks.
 - Constant pressure on the contacts non effected by network voltage.
 - Energy Efficient with virtually no consumption whilst on the normal, alternate or off positions.
 - Quick, easy and safe dual “on-load” emergency manual operation.
(Manual operation is functional with and without the motorization in place).
 - Extremely rugged, error free and built in padlocking facility.
 - Straight forward installation with effective ergonomics.
 - Minimal downtime with the possibility to perform easy maintenance.
 - Programmable secure motorization controls interface with remote control.
 - Up to 23 user configurable I/O with communication through MODBUS (Ethernet TCP or RS485) Optional
 - Webserver access to monitor most parameters available in the ATyS p.
 - Real time event recording with time stamp and export functionality.
 - Load power monitoring with Energy metering capability.
 - Engine exerciser for genset management applications.
 - ATS configuration through a keypad as well as through EasyConfig programming software.
 - Integrated auxiliary contacts for switch positions I – 0 – II.
 - Dual active “product availability” status feedback for motorisation and ATS controllers.
 - Ample accessories to suit specific requirements.
 - Fully integrated ATS controller specifically designed for Mains / Mains and Mains / Genset applications with power management and communication capabilities.
- Power supply continuity with power management and communication for most applications.

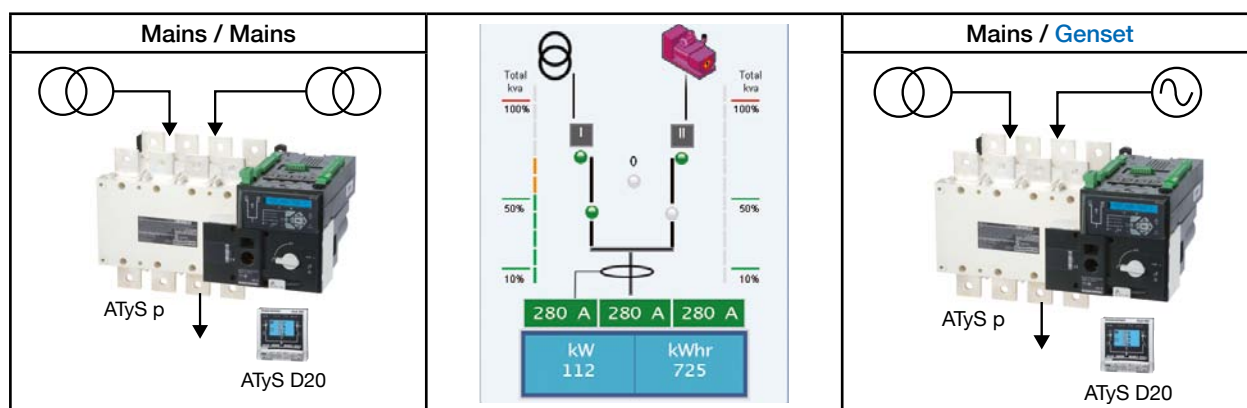

3. THE ATyS FAMILY PRODUCT RANGE

The ATyS p has been engineered by the SOCOMEC centre of excellence in France who boasts it's very own in-house 100MVA instantaneous power test lab accredited by COFRAC and working in partnership with: KEMA, CEBEC, UL, CSA, ASTA, Lloyd's Register of Shipping, Bureau Veritas, BBJ-SEP, EZU, GOST-R... and others.

SOCOMEC has been manufacturing power control and safety products since 1922. The first generation SOCOMEC "motorised changeover switches" were introduced in 1990 and today the ATyS brand has become trusted by major players in the power industry worldwide.

The ATyS Family includes a complete range of remotely operated transfer switch equipment (RTSE) as well as automatic fully integrated products and solutions (ATSE). Selecting the right ATyS will depend on the application as well as the nature of installation in which the ATyS will be installed.


This instruction manual includes details and instructions specific to the "ATyS p" ATSE only. For all other ATyS family of products please refer to the specific instruction manual related to that product.

(Available for download on www.socomec.com)

An overview of the complete ATyS range is presented below:

(The encircled device is the product detailed in this instruction manual).

Just the right ATyS for your application...

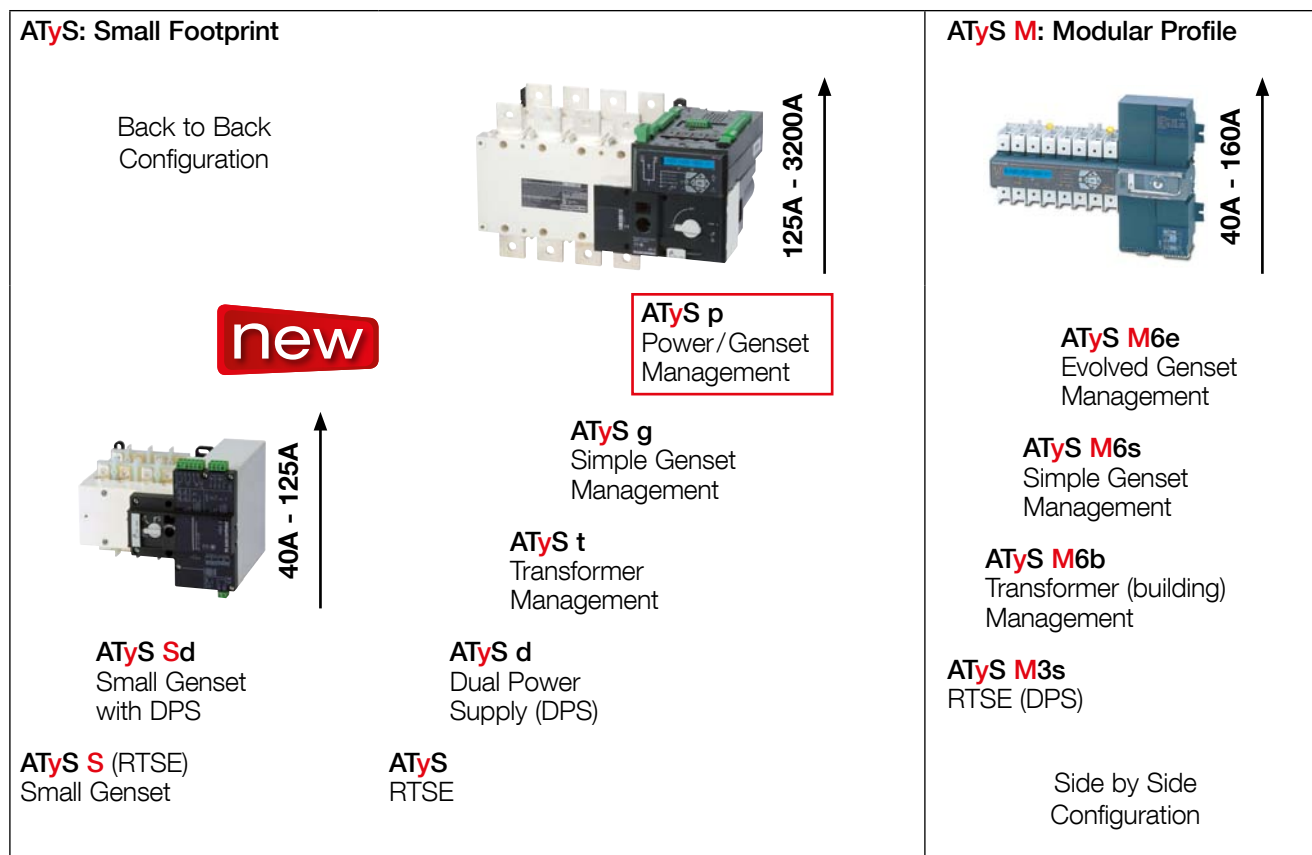

3.1. The ATyS Range Key Features

Selecting the right ATyS will depend on the application, the functionality required as well as the nature of the installation in which the ATyS will be installed. Below is an outline product selection chart listing the key features of each product to help to select the right ATyS for your needs.

	ATyS S	ATyS Sd	ATyS	ATyS d	ATyS t	ATyS g	ATyS p
Motorised Changeover with control driven by dry contacts	•	•	•	•	•	•	•
Manual Emergency Operation with external handle	•	•	•	•	•	•	•
Wide band AC control voltage supply	•	•	•	•	•	•	•
Wide band DC control voltage supply	•						
Watchdog relay to ensure product availability			•	•	•	•	•
Ratings from 40 – 125A as indicated or 125A - 3200A for •	40 – 125A	40 – 125A	•	•	•	•	•
Override controls and force switch to zero (off) position			•	•	•	•	•
Integrated position auxiliary contacts (I - O - II)	•	•	•	•	•	•	•
Source availability LED display				•	•	•	•
Remote Display module RJ45 connection for ATyS D10				•	•	•	
Integrated Dual power supply		•		•	•	•	•
Network - Network Applications	•	•	•	•	•		•
Network - Genset Applications	•	•	•	•		•	•
Genset - Genset Applications	•	•	•	•			
Pre-defined fixed I/O			• 5/1	• 5/1	• 9/2	• 11/3	• 5/2
Programmable I/O							• 6/1
Additional programmable I/O modules (Optional up to 4 modules)							• 8/8
Remotely operated Transfer Switching Equipment (RTSE Class PC)	•	•	•	•			
Automatic Transfer Switching Equipment (ATSE Class PC)					•	•	•
Remote + Manual Control	•	•	•	•			
Auto + Remote + Manual Control					•	•	
Auto + Remote + Local + Manual Control							•
Auto-configuration of voltage and frequency levels					•	•	•
Switch Position LED display					•	•	•
Security Sealing Cover					•	•	
Configuration through potentiometers and dip switches					•	•	
Test on load functionality						•	•
Test off load functionality						•	•
Programmable configuration with keypad and LCD display							•
Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh							•
Communication RS485 + Ethernet + Ethernet gateway (Optional)							•
Webserver Access through optional Ethernet module (Optional)							•
Easy Configuration software (Through Ethernet/Modbus)							•
Remote Terminal Unit RJ45 connection for ATyS D20							•
Data Logger for Event Recording with RTC (Through Ethernet/Modbus)							•
Programmable Engine Exerciser functionality (Through Ethernet/Modbus)							•
Multi level password access							•
Load Shedding function							•
Capacity Management functionality							•
Peak shaving functionality							•
4 - 20mA communication module (Optional)							•
KWh Pulsed output module (Optional)							•
Counters KWh, permutation...							•
LCD display for programming, metering, timers and counters							•
Possibility to add optional functionality							•

4. QUICK START

4.1. Quick Start ATyS p Frame B3 to B5 (125A to 630A)



QUICK START EN 125A - 630A

ATyS p

Motorised Source Changeover Switch
Automatic Transfer Switching Equipment

Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition.
- The product reference corresponds to the order.
- Contents should include:
Qty 1 x ATyS p
Qty 1 x Emergency handle and fixing clip
Quick Start instruction sheet

Warning

⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

⚠ Risk of damaging the device

- In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
- Control voltage transformer (400Vac -> 230Vac).
- DC power supply (12/24Vdc -> 230Vac).
- Mounting spacers to raise the product x 10mm.
- Phase barriers.
- Terminal shrouds / Terminal screens.
- Auxiliary contacts (Additional).
- Padlocking in 3 positions (I - 0 - II).
- Lockout accessories (RONIS - EL II AP).
- Door escutcheon frame.
- ATyS D20 Interface (remote control / display unit).
- RJ45 cable for ATyS D20 => ATyS p.
- Voltage sensing kit.
- Current transformers.
- Plug-in optional modules: RS485 MODBUS communication, 2 inputs/2 outputs, Ethernet communication, Ethernet communication + RS485 JBUS/MODBUS gateway, Analogue outputs, Pulse outputs.

For further details refer to the product instruction manual under chapter "Spares and Accessories"

www.socomec.com

To download, brochures, catalogues and technical manuals:



Printing informations: 1 color Black. White paper 90g/m².
Printing size: 420x297. Final size 210x297. This page visible first.



541 999 B - 09/13 - EN Non contractual document. Subject to change without notice.

Installation and Commissioning

STEP 1
Cabinet / Back Plate Installation

STEP 2
Power Terminal Connections

STEP 3
COMMAND / CONTROL terminal connections

STEP 4
Power SUPPLY and ATS Controller Terminal Connections

STEP 5
CHECK

STEP 6
PROGRAMMING
A - Software
B - Keypad

STEP 7A
AUT Mode
(Automatic Control)

STEP 7B
AUT Mode
(Remote Control)

STEP 7C
Manual Mode

STEP 7D
Padlocking Mode

STEP 4

Power Supply, Sensing and Control wiring (ATS Controller)

Connect the product with a cable of section of 1,5 to 2,5 mm².
Screw M3 - Tightening torque: min.: 0.5 Nm - max.: 0.6 Nm

ATS Power Supply Input II
Power supply II - L
Power supply II - N
208-277 VAC ±20%:
50/60 Hz

ATS Voltage Sensing Input Source supply II
S II - Phase 1
S II - Phase 2
S II - Phase 3
600 VAC (ph-ph) max
S II - Neutral
332 VAC (ph-n) max

Programmable Inputs
To opt. Module/Common
Progr. Inputs (208-209)
To opt. Module positive

Genset Start/Stop Signal
NC
Common
NO

ATS Power Supply Input I
Power supply I - L
Power supply I - N
208-277 VAC ±20%:
50/60 Hz

ATS Voltage Sensing Input Source supply I
S I - Phase 1
S I - Phase 2
S I - Phase 3
600 VAC (ph-ph) max
S I - Neutral
332 VAC (ph-n) max

ATS Module Control Inputs (Programmable)

ATS Module Output Contact (Programmable)


Remote interface
RJ45 - to ATyS D20

Current Transformer incoming cable connections


Slots for optional modules
See on the back "Optional modules"

STEP 1 Installation


Caution:
Ensure that the product is installed on a flat rigid surface.

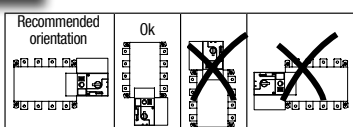

Door cut-out for front panel.

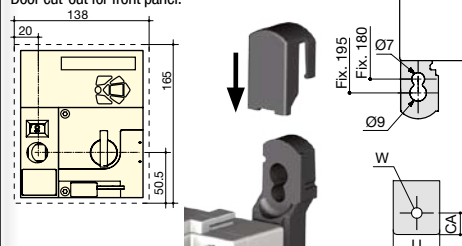

Dimensions in mm.

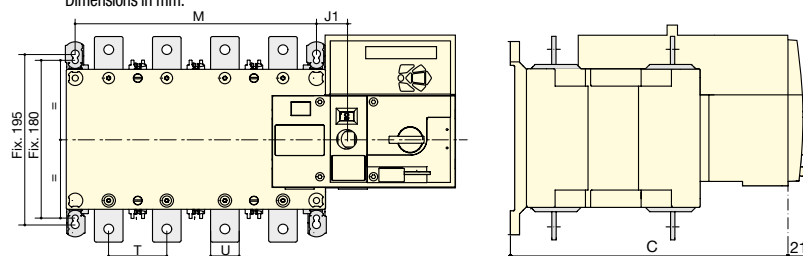

	125 A		160 A		200 A		250 A		315 A		400 A		500 A		630 A	
	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P
J 1	34	34	34	34	34	34	35	35	35	35	35	35	34	34	34	34
M	120	150	120	150	120	150	160	210	160	210	160	210	210	270	210	270
T	36	36	36	36	36	36	50	50	50	50	50	50	65	65	65	65
C	244	244	244	244	244	244	244	244	244	244	244	244	320	320	320	320
U	20	20	20	20	20	20	25	25	25	25	35	35	32	32	45	45
W	9	9	9	9	9	9	11	11	11	11	11	11	13	13	13	13
CA	10	10	10	10	10	10	15	15	15	15	15	15	20	20	20	20


STEP 2

Power Terminal Connections

To be connected using terminal lugs, rigid or flexible busbars.

	FRAME B3			FRAME B4			FRAME B5	
	125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A
Minimum cable section Cu (mm²) at lth	50	70	95	120	185	240	2x150	2x185
Minimum cable section Cu (mm²) at lth	-	-	-	-	-	-	2x30x5	2x40x5
Maximum cable section Cu (mm²)	50	95	150	150	240	240	2x300	2x300
Maximum Cu busbar width (mm)	20	20	32	32	32	32	50	50
Type of screw	M8	M8	M8	M10	M10	M10	M12	M12
Recommended tightening torque (N.m)	8.3	8.3	8.3	20	20	20	40	40
Maximum tightening torque (N.m)	13	13	13	26	26	26	45	45


Example: Control wiring for a 400VAC application having a 3 phase and neutral supply.

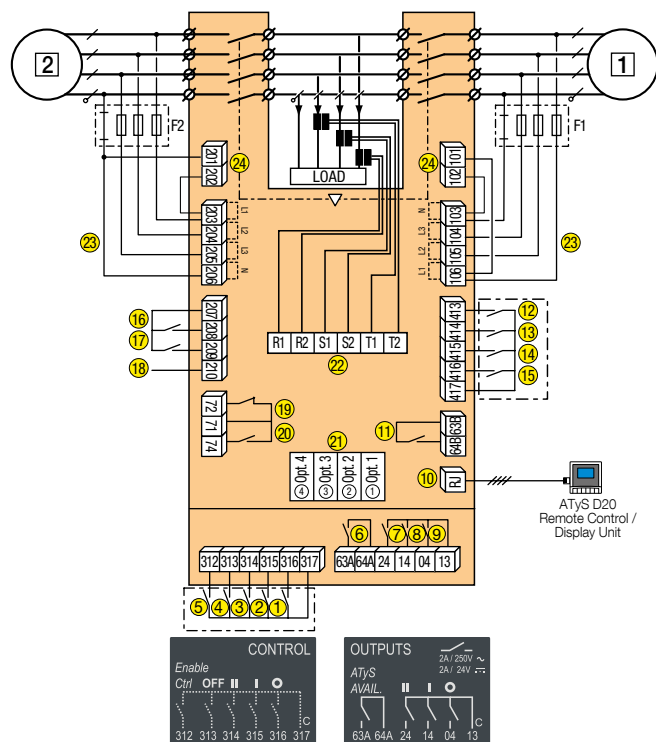

STEP 3

CONTROL / COMMAND Terminals

Ensure that the product is in Manual Mode.

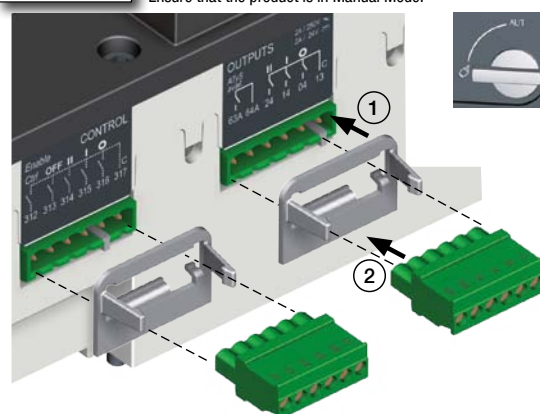

1. preferred source 2. alternate source

- Position 0 order
- Position 1 order
- Position 2 order
- Zero position priority order
- Remote Control Enable (Priority over Auto)
- Product Available output (Motor)
- Position II aux contact
- Position I aux contact
- Position 0 aux contact
- O/P to ATyS D20 remote unit
- Programmable Output Contact. By default set to ATS Product Available - Normally Open
- 12-15. Programmable Inputs 1-4
- 16-17. Programmable Inputs 5-6
18. Aux. Supply (207/210) to be used with ATyS optional I/O modules
- Signal to Start / Stop the Genset NC with S1 unavailable (71/72)
- Signal to Start / Stop the Genset NO with S1 unavailable (71/74)
- Option Module Slots 1 to 4
- Current Transformer incoming cable connections
- Voltage Sensing Inputs
- Power Supply Inputs


4.1. Quick Start ATyS p Frame B3 to B5 (125A to 630A) continued

STEP 5

Check

Whilst in manual mode, check the wiring and if ok power up the product.

LED "Power" Green: ON
LED Manual/Fault Red: ON

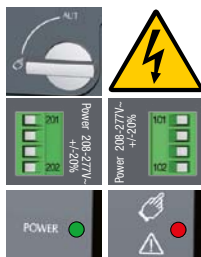

Optional Modules

Communication between the software and the ATyS p may be done through the Ethernet/Modbus TCP or Modbus RTU modules that are available as an option. The ETHERNET / MODBUS modules are to be installed in one of the slots provided in the ATyS p ATS control unit.

Easy Config may be used with a PC connected or through ETHERNET or MODBUS modules as well as isolated from the product and simply saved on a PC for download at any convenient time.

Note: The ATyS p may accept a total of 4 additional Input / Output modules offering an additional 8 programmable inputs and 8 programmable outputs. When including a MODBUS module the ATyS p accepts a total of 3 I/O modules and when including the ETHERNET module a total of 2 I/O modules.

Refer to the ATyS p accessory section for details.



STEP 6

Programming the ATyS p

The ATyS p is to be programmed powered up and after wiring verification tests. This may either be done through the front of the ATS Controller using the keypad or with the user-friendly Easy Config software.

For convenience, we recommend to use the Easy Config software. (Downloadable free from www.socomec.com).


The ATyS p is delivered with default setting values based on most used customer application requirements. The minimum configuration parameters that must be programmed are the type of network and application together with the voltage and frequency nominal values. ATyS p Auto Configuration makes the setup of Volts, Hz, Phase rotation and Neutral Position quick and easy.

A - Programming with Easy Config Software

To program the ATyS p using Easy Config software simply follow the setting boxes from left to right until all desired settings in each window have been completed. Help pop ups are included to show the minimum and maximum setting values allowed. The software includes most SOCOMEC products so before programming click NEW and select the product "ATyS p" from the list of products available.

When the ATyS p is powered and communicating, the software will include a screen to monitor and display the ATyS p status.

Control through software (such as changing switch position I-O-II) is also possible when in Super User Mode.

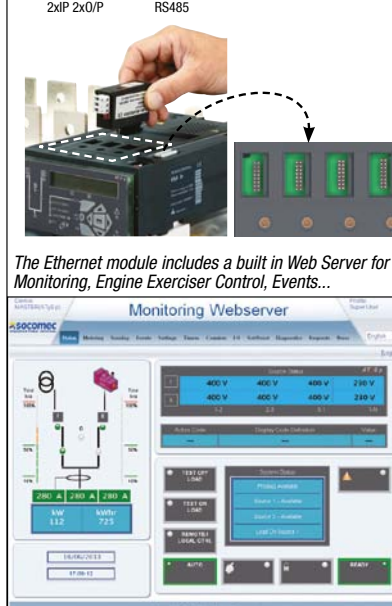

The Ethernet module includes a built in Web Server for Monitoring, Engine Exerciser Control, Events...

B - Programming with the ATyS p keypad

1 SETUP	2 VOLT. LEVELS	3 FREQ. LEVELS	4 PWR. LEVELS	5 TIMERS VALUE	6 I-O	7 COMM	8 DATE/TIME
NETWORK 4NBL	OV. U I 115%	OV. F I 105%	OV.P I 0000 KVA	1FT 0003 SEC	IN 1 --- NO	DHCP NO (9)	YEAR
AUTOCONF NO (7)	OV. U HYS I 110%	OV. F HYS I 103%	OV.P HYS I 0000 KVA	1RT 0180 SEC	IN 2 --- NO	IP 1-2 192.168.	MONTH
NEUTRAL AUTO	UND. U I 085%	UND. F I 095%	OV.P II 0000 KVA	2FT 0003 SEC	IN 3 --- NO	IP 3-4 .002.001	DAY
ROT PH. ---	UND. U HYS I 095%	UND. F HYS I 097%	OV.P HYS II 0000 KVA	2RT 0005 SEC (2)	IN 4 --- NO	GAT1-2 000.000.	HOUR
NOM. VOLT 400 V	UNB. U I 00%	OV. F II 105%	(1) When «APP» is set to «M-G»	2AT 0005 SEC (1)	IN 5 --- NO	GAT3-4 .000.000	MINUTE
NOM. FREQ 50 Hz	UNB. U HYS I 00%	OV. F HYS II 103%	(2) When «APP» is set to «M-M»	2CT 0180 SEC (1)	IN 6 --- NO	MSK1-2 255.255.	SECOND
APP M-G	OV. U II 115%	UND. F II 095%	(3) When one of the IP is set to «EON»	2ST 0030 SEC (1)	IN 7 --- NO (8)	MSK3-4 .255.000	
PRIO TON NO (1)	OV. U HYS II 110%	UND. F HYS II 097%	(4) When one of the O/P is set to «LSC»	ODT 0003 SEC	IN 8 --- NO (8)	ADDRESS 005	
PRIO EON NO (3)	UND. U II 085%		(5) When one of the O/P is set to «EES»	TOT UNL (1)	IN 9 --- NO (8)	BDRATE 9600	
PRIO NET 1 (2)	UND. U HYS II 095%		(6) With optional I/O modules	TOT 0010 SEC (1)	IN 10 --- NO (8)	STOP BIT 1	
RETRANS NO	UNB. U II 00%		(7) If the product is in manual mode	T3T 0000 SEC (1)	IN 11 --- NO (8)	PARITY NONE	
CT PRI 100	UNB. U HYS II 00%		(8) With Ethernet module	TFT UNL (1)	IN 12 --- NO (8)		
CT SEC 5				TFT 0600 SEC (1)	IN 13 --- NO (8)		
S1=SW2 NO				E1T 0005 SEC (3)	IN 14 --- NO (8)		
BACKLGHNT INT				E2T UNL (3)	OUT 1 POP NO		
CODE P 1000				E2T 0010 SEC (3)	OUT 2 --- NO (8)		
CODE E 0000				E3T 0005 SEC (3)	OUT 3 --- NO (8)		
BACKUP SAVE				E5T 0005 SEC (4)	OUT 4 --- NO (8)		
				E6T LIM (4)	OUT 5 --- NO (8)		
				E6T 0600 SEC (4)	OUT 6 --- NO (8)		
				E7T 0005 SEC (4)	OUT 7 --- NO (8)		
				LST 0004 SEC (5)	OUT 8 --- NO (8)		
				EET 0168 H (6)	OUT 9 --- NO (8)		
				EDT 1800 SEC (6)			



ATyS p devices may also be programmed through the ATS controller keypad. This programming method is necessary for products not equipped with Ethernet or Modbus communication modules that facilitate programming through Easy Config software described above. The keypad is a useful interface and programming method most especially when changing a few parameters or simply interrogating the product.

Programming access: Press and hold for 5 s "Validation" push button (17). Access through the keypad is possible in Automatic or Manual mode, when the product is in a stable position (I, O or II) with at least one supply source available. Programming is not accessible whilst any cycle sequence is running.

To change the configuration: Enter code (factory code = 1000) using navigation push buttons (14).

Programming exit: Press and hold for 5 s "Validation" push button (17).

Note 1: Values as listed above are the setting values by default.

Note 2: Ensure that the Default Network Setting and Application match the installation or change accordingly before using Auto Configuration.


3 phase / 4 wire	3 phase / 3 wire	2 phase / 3 wire	2 phase / 2 wire	1 phase / 2 wire
4NBL 4BL	3NBL 3BL	2NBL	2BL	1BL

Setup by Auto Configuration

(Volts, Hz, Neutral pos., Ph rotation)

Press 5s	
Go To	1 SETUP
Scroll to	AUTOCONF
Enter code	1000
Set to	YES
Press 60 ms	
LEDs flash	
Save : press 5s	



Note: Source I or source II must be available to set by Auto Configuration.

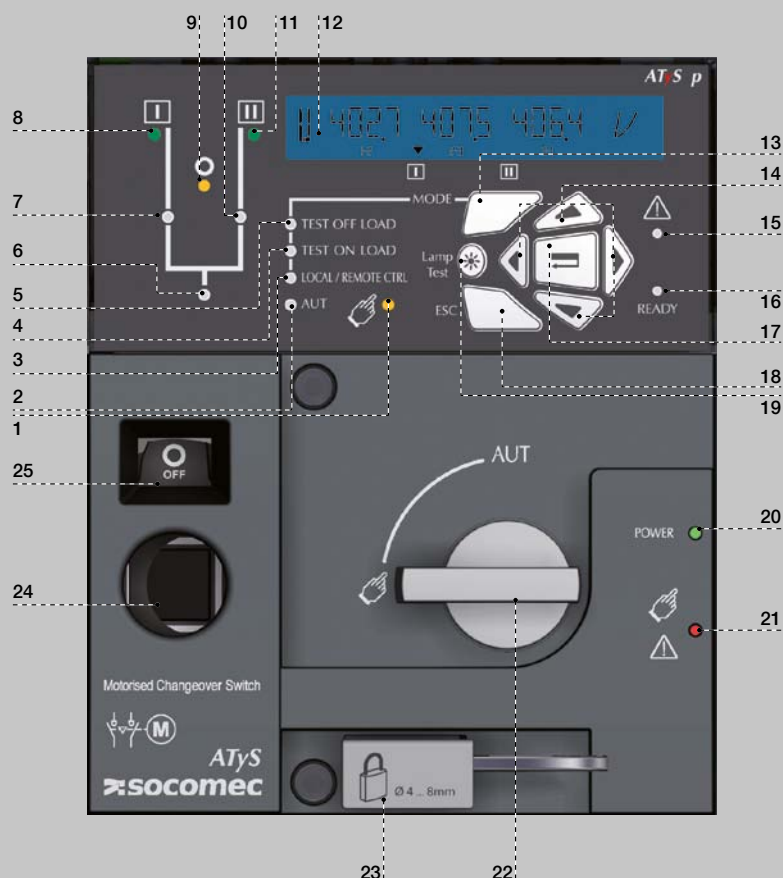


1. MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
2. AUTO Mode LED indication Green steady light when in Auto mode with no timers running. Green flashing light when in Auto with timers running.
3. LOCAL / REMOTE CONTROL Mode LED indication. Yellow steady light when in Local / Remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317. REMOTE Control is also achievable through Easy Config ATyS p software when connected to the product through Ethernet or MODBUS. (Optional modules). Local Control selectable and operable through the ATyS p keypad.
4. TEST ON LOAD CONTROL Mode LED indication. (Yellow steady light when in TOL/ EOL mode)
5. TEST OFF LOAD CONTROL Mode LED indication. (Yellow steady light when in TFL/ EFL mode).
6. Load Supply On LED. (Green when the load is supplied).
7. Switch 1 LED position indication. (Green when in position 1).
8. Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
9. Zero position LED indication. (Yellow when in position 0).
10. Switch 2 LED position indication. (Green when in position 2).
11. Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
12. LCD Display Screen : (Status, measurement, timers, counters, events, faults, programming)
13. MODE key to shift between operation modes.
14. Navigation Keys to browse through the ATyS p menus without software.
15. FAULT LED indication. (Red steady light in case of an ATS controller internal fault. Switch the product from Auto to Manual and back to Auto to reset a fault condition).
16. READY LED indication. (Green steady light : Product is powered and in AUTO, Watchdog OK, The Product is Available to changeover).
17. Enter Key used to enter Prog Mode (Press and hold for 5 seconds) and to validate the settings programmed through the keypad.
18. ESC key used to escape from a specific screen up to the main menu.
19. Lamp test key to check the LED's and LCD screen.
20. Green LED Indication: Power
21. Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
22. Auto / Manual mode selector switch (Key version available as an option)
23. Padlocking facility (Up to 3 padlocks of dia. 4 - 8mm)
24. Emergency manual operation shaft location (Accessible only in manual mode)
25. Switch position indication window: I (On switch I) 0 (Off) II (On switch II).

STEP 7A**AUT Mode
(Automatic Control)**

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position. LED "Power" Green: ON
LED Manual/Default: OFF

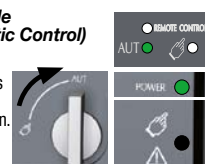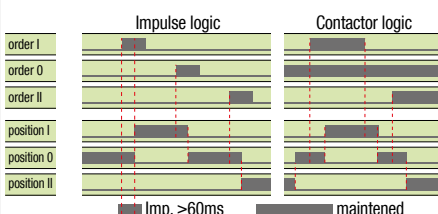**STEP 7B****AUT Mode
(Remote Control)**

To enable control, close contact 312 with 317. For contactor logic bridge contact 316 with 317. To operate: close the contact corresponding to the desired position. To force the product to 0 position "OFF" bridge contact 313 with 317.

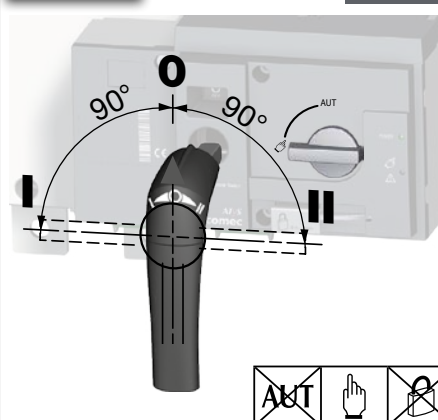**STEP 7C****Manual Mode****STEP 7D****Padlocking Mode
(as standard: in position 0)**

4.2. Quick Start ATyS p Frame B6 to B8 (800A to 3200A)



QUICK START EN 800A - 3200A

ATyS p

Motorised Source Changeover Switch
Automatic Transfer Switching Equipment

Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition.
- The product reference corresponds to the order.
- Contents should include:
Qty 1 x ATyS p
Qty 1 x Emergency handle and fixing clip
Quick Start instruction sheet

Warning

⚠ Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

⚠ Risk of damaging the device

- In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
- Control voltage transformer (400Vac -> 230Vac).
- DC power supply (12/24Vdc -> 230Vac).
- Mounting spacers to raise the product x 10mm.
- Phase barriers.
- Terminal shrouds / Terminal screens.
- Auxiliary contacts (Additional).
- Padlocking in 3 positions (I - 0 - II).
- Lockout accessories (RONIS - EL II AP).
- Door escutcheon frame.
- ATyS D20 Interface (remote control / display unit).
- RJ45 cable for ATyS D20 => ATyS p.
- Voltage sensing kit.
- Current transformers.
- Plug-in optional modules: RS485 MODBUS communication, 2 inputs/2 outputs, Ethernet communication, Ethernet communication + RS485 JBUS/MODBUS gateway, Analogue outputs, Pulse outputs.

For further details refer to the product instruction manual under chapter "Spares and Accessories"

www.socomec.com


To download, brochures, catalogues and technical manuals:



Printing informations: 1 color Black. White paper 90g/m².
Printing size: 420x297. Final size 210x297. This page visible first.



542 000 C - 09/13 - EN Non contractual document.
Subject to change without notice.

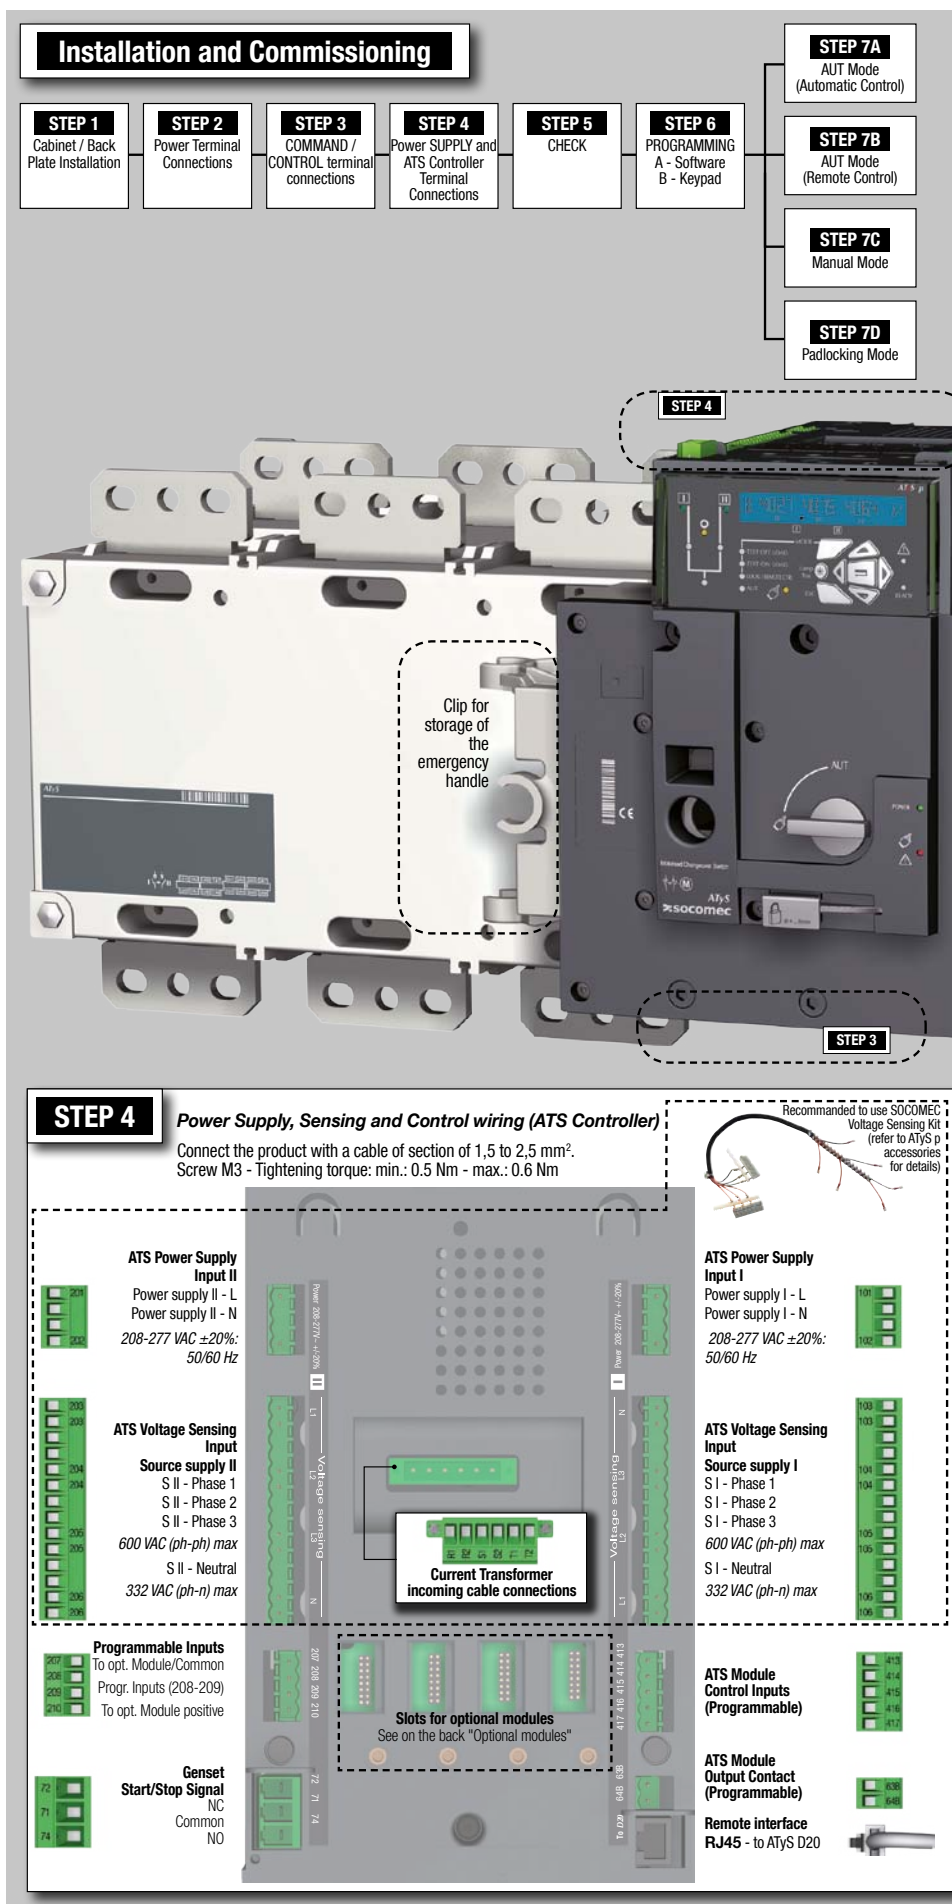


4.2. Quick Start ATyS p Frame B6 to B8 (800A to 3200A) continued

STEP 5

Check

Whilst in manual mode, check the wiring and if ok power up the product.

LED "Power" Green: ON
LED Manual/Fault Red: ON

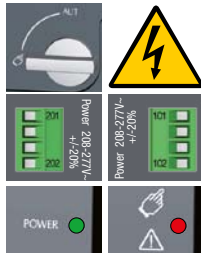

Optional Modules

Communication between the software and the ATyS p may be done through the Ethernet/Modbus TCP or Modbus RTU modules that are available as an option. The ETHERNET / MODBUS modules are to be installed in one of the slots provided in the ATyS p ATS control unit.

Easy Config may be used with a PC connected or through ETHERNET or MODBUS modules as well as isolated from the product and simply saved on a PC for download at any convenient time.

Note: The ATyS p may accept a total of 4 additional Input / Output modules offering an additional 8 programmable inputs and 8 programmable outputs. When including a MODBUS module the ATyS p accepts a total of 3 I/O modules and when including the ETHERNET module a total of 2 I/O modules.

Refer to the ATyS p accessory section for details.



STEP 6

Programming the ATyS p

The ATyS p is to be programmed powered up and after wiring verification tests. This may either be done through the front of the ATS Controller using the keypad or with the user-friendly Easy Config software.

For convenience, we recommend to use the Easy Config software. (Downloadable free from www.socomec.com).


The ATyS p is delivered with default setting values based on most used customer application requirements. The minimum configuration parameters that must be programmed are the type of network and application together with the voltage and frequency nominal values. ATyS p Auto Configuration makes the setup of Volts, Hz, Phase rotation and Neutral Position quick and easy.

A - Programming with Easy Config Software

To program the ATyS p using Easy Config software simply follow the setting boxes from left to right until all desired settings in each window have been completed. Help pop ups are included to show the minimum and maximum setting values allowed. The software includes most SOCOMEC products so before programming click NEW and select the product "ATyS p" from the list of products available.

When the ATyS p is powered and communicating, the software will include a screen to monitor and display the ATyS p status.

Control through software (such as changing switch position I-O-II) is also possible when in Super User Mode.

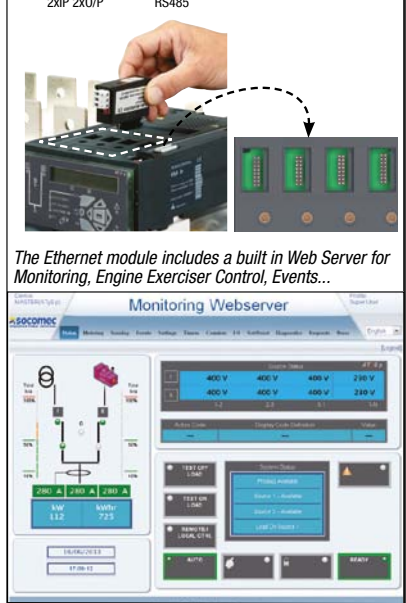

The Ethernet module includes a built in Web Server for Monitoring, Engine Exerciser Control, Events...

B - Programming with the ATyS p keypad

1 SETUP	2 VOLT. LEVELS	3 FREQ. LEVELS	4 PWR. LEVELS	5 TIMERS VALUE	6 I-O	7 COMM	8 DATE/TIME
NETWORK 4NBL	OV. U I 115%	OV. F I 105%	OV.P I 0000 KVA	1FT 0003 SEC	IN 1 --- NO	DHCP NO (9)	YEAR
AUTOCONF NO (7)	OV. U HYS I 110%	OV. F HYS I 103%	OV.P HYS I 0000 KVA	1RT 0180 SEC	IN 2 --- NO	IP 1-2 192.168.	MONTH
NEUTRAL AUTO	UND. U I 085%	UND. F I 095%	OV.P II 0000 KVA	2FT 0003 SEC	IN 3 --- NO	IP 3-4 .002.001	DAY
ROT PH. ---	UND. U HYS I 095%	UND. F HYS I 097%	OV.P HYS II 0000 KVA	2RT 0005 SEC (2)	IN 4 --- NO	GAT1-2 000.000.	HOUR
NOM. VOLT 400 V	UNB. U I 00%	OV. F II 105%	(1) When «APP» is set to «M-G»	2AT 0005 SEC (1)	IN 5 --- NO	GAT3-4 .000.000	MINUTE
NOM. FREQ 50 Hz	UNB. U HYS I 00%	OV. F HYS II 103%	(2) When «APP» is set to «M-M»	2CT 0180 SEC (1)	IN 6 --- NO	MSK1-2 255.255.	SECOND
APP M-G	OV. U II 115%	UND. F II 095%	(3) When one of the IP is set to «EON»	2ST 0030 SEC (1)	IN 7 --- NO (8)	MSK3-4 .255.000	
PRIO TON NO (1)	OV. U HYS II 110%	UND. F HYS II 097%	(4) When one of the O/P is set to «EOP»	ODT 0003 SEC	IN 8 --- NO (8)	ADDRESS 005	
PRIO EON NO (3)	UND. U II 085%		(5) When one of the O/P is set to «EES»	TOT UNL (1)	IN 9 --- NO (8)	BDRATE 9600	
PRIO NET 1 (2)	UND. U HYS II 095%		(6) With optional I/O modules	TOT 0010 SEC (1)	IN 10 --- NO (8)	STOP BIT 1	
RETRANS NO	UNB. U II 00%		(7) If the product is in manual mode	T3T 0000 SEC (1)	IN 11 --- NO (8)	PARITY NONE	
CT PRI 100	UNB. U HYS II 00%		(8) With Ethernet module	TFT UNL (1)	IN 12 --- NO (8)		
CT SEC 5				TFT 0600 SEC (1)	IN 13 --- NO (8)		
S1=SW2 NO				E1T 0005 SEC (3)	IN 14 --- NO (8)		
BACKLIGHT INT				E2T UNL (3)	OUT 1 POP NO		
CODE P 1000				E2T 0010 SEC (3)	OUT 2 --- NO (8)		
CODE E 0000				E3T 0005 SEC (3)	OUT 3 --- NO (8)		
BACKUP SAVE				E5T 0005 SEC (4)	OUT 4 --- NO (8)		
				E6T LIM (4)	OUT 5 --- NO (8)		
				E6T 0600 SEC (4)	OUT 6 --- NO (8)		
				E7T 0005 SEC (4)	OUT 7 --- NO (8)		
				LST 0004 SEC (5)	OUT 8 --- NO (8)		
				EET 0168 H (6)	OUT 9 --- NO (8)		
				EDT 1800 SEC (6)			



ATyS p devices may also be programmed through the ATS controller keypad. This programming method is necessary for products not equipped with Ethernet or Modbus communication modules that facilitate programming through Easy Config software described above. The keypad is a useful interface and programming method most especially when changing a few parameters or simply interrogating the product.

Programming access: Press and hold for 5 s "Validation" push button (17). Access through the keypad is possible in Automatic or Manual mode, when the product is in a stable position (I, O or II) with at least one supply source available. Programming is not accessible whilst any cycle sequence is running.

To change the configuration: Enter code (factory code = 1000) using navigation push buttons (14).

Programming exit: Press and hold for 5 s "Validation" push button (17).

Note 1: Values as listed above are the setting values by default.

Note 2: Ensure that the Default Network Setting and Application match the installation or change accordingly before using Auto Configuration.


3 phase / 4 wire	3 phase / 3 wire	2 phase / 3 wire	2 phase / 2 wire	1 phase / 2 wire
4NBL 4BL	3NBL 3BL	2NBL	2BL	1BL

Setup by Auto Configuration

(Volts, Hz, Neutral pos., Ph rotation)

Press 5s	
Go To	1 SETUP
Scroll to	AUTOCONF
Enter code	1000
Set to	YES
Press 60 ms	
LEDs flash	
Save : press 5s	

Note: Source I or source II must be available to set by Auto Configuration.

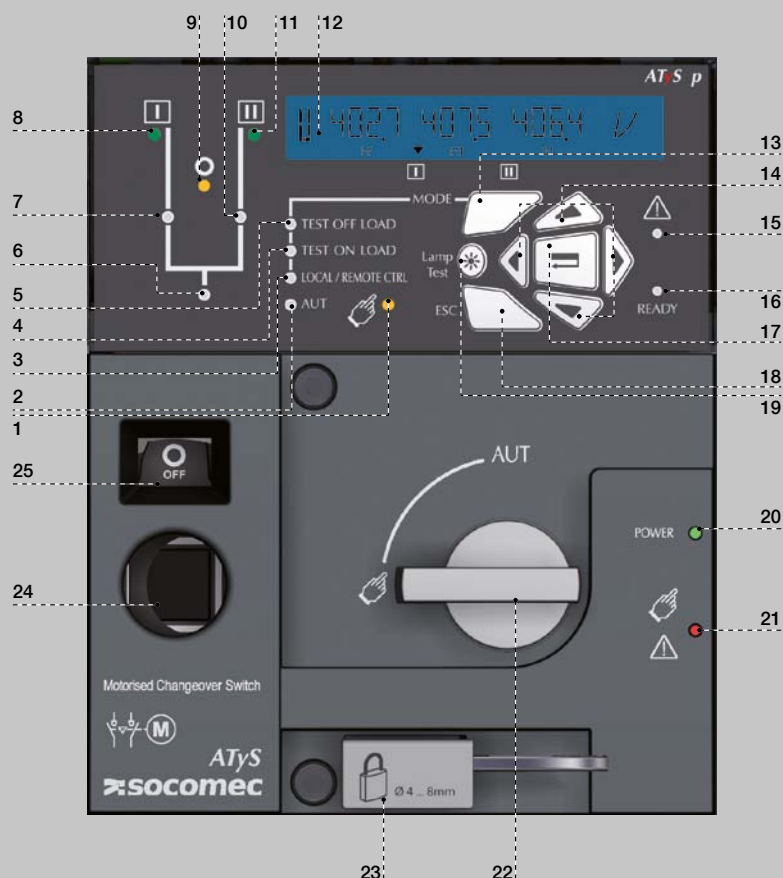


1. MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
2. AUTO Mode LED indication Green steady light when in Auto mode with no timers running. Green flashing light when in Auto with timers running.
3. LOCAL / REMOTE CONTROL Mode LED indication. Yellow steady light when in Local / Remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317. REMOTE Control is also achievable through Easy Config AtyS p software when connected to the product through Ethernet or MODBUS. (Optional modules). Local Control selectable and operable through the AtyS p keypad.
4. TEST ON LOAD CONTROL Mode LED indication. (Yellow steady light when in TOL/ EOL mode)
5. TEST OFF LOAD CONTROL Mode LED indication. (Yellow steady light when in TFL/ EFL mode).
6. Load Supply On LED. (Green when the load is supplied).
7. Switch 1 LED position indication. (Green when in position 1).
8. Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
9. Zero position LED indication. (Yellow when in position 0).
10. Switch 2 LED position indication. (Green when in position 2).
11. Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
12. LCD Display Screen : (Status, measurement, timers, counters, events, faults, programming)
13. MODE key to shift between operation modes.
14. Navigation Keys to browse through the AtyS p menus without software.
15. FAULT LED indication. (Red steady light in case of an ATS controller internal fault. Switch the product from Auto to Manual and back to Auto to reset a fault condition).
16. READY LED indication. (Green steady light : Product is powered and in AUTO, Watchdog OK, The Product is Available to changeover).
17. Enter Key used to enter Prog Mode (Press and hold for 5 seconds) and to validate the settings programmed through the keypad.
18. ESC key used to escape from a specific screen up to the main menu.
19. Lamp test key to check the LED's and LCD screen.
20. Green LED Indication: Power
21. Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
22. Auto / Manual mode selector switch (Key version available as an option)
23. Padlocking facility (Up to 3 padlocks of dia. 4 - 8mm)
24. Emergency manual operation shaft location (Accessible only in manual mode)
25. Switch position indication window: I (On switch I) O (Off) II (On switch II).

STEP 7A


AUT Mode (Automatic Control)

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position. LED "Power" Green: ON
LED Manuel/Default: OFF

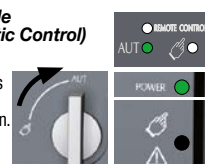

STEP 7B

AUT Mode (Remote Control)

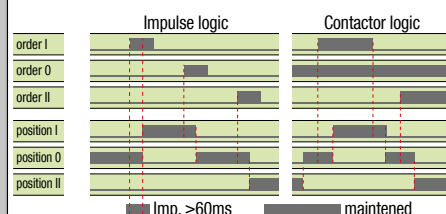


To enable control, close contact 312 with 317. For contactor logic bridge contact 316 with 317. To operate: close the contact corresponding to the desired position. To force the product to 0 position "OFF" bridge contact 313 with 317.




STEP 7C

Manual Mode

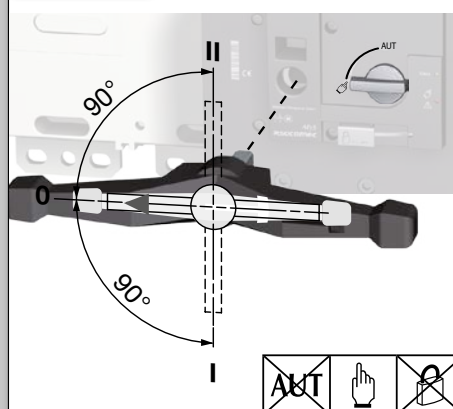


STEP 7D

Padlocking Mode (as standard: in position 0)

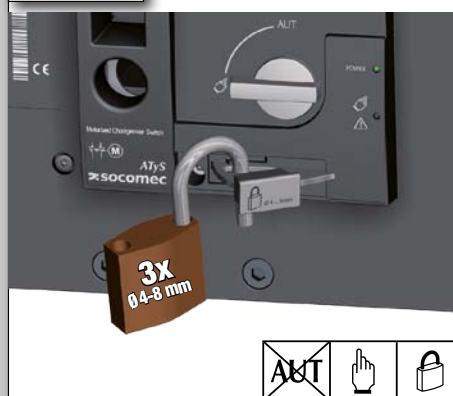


5. GENERAL OVERVIEW

5.1. Product introduction

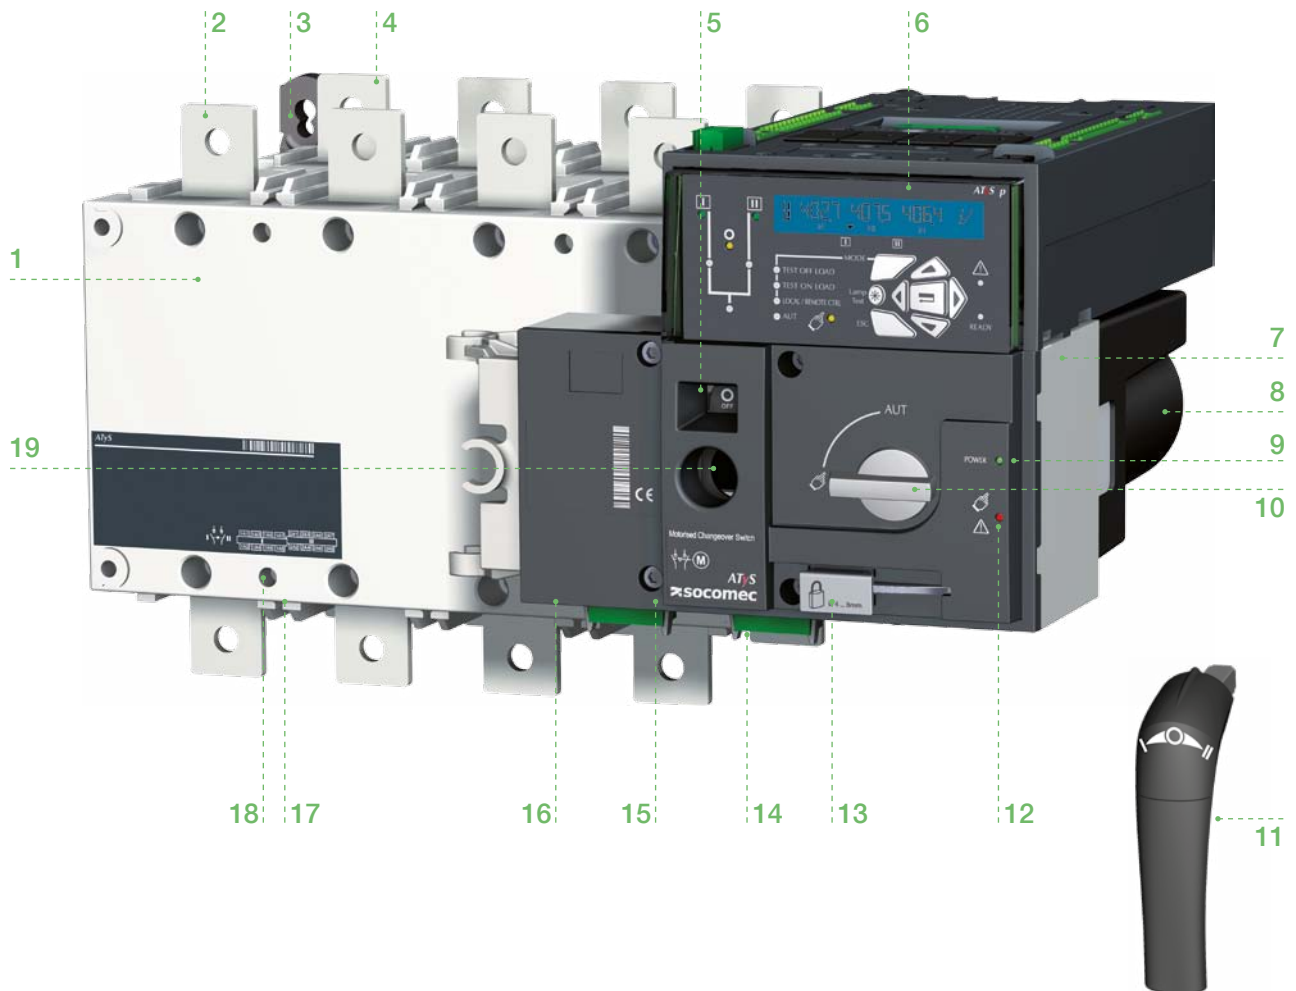


1. Power Section: Changeover switch assembly with inherent mechanical interlock
2. Front: Switch number 1 terminals (3 or 4 pole)
3. Back-plate mounting ATyS fixing lugs
4. Back: Switch number 2 terminals (3 or 4 pole)
5. Switch position indication window: I (On) – O (Off) – II (On)
6. ATS control module with integrated dual power supply
7. Motorized Control Unit
8. Motor housing
9. Green LED Indication: Power
10. Auto / Manual mode selector switch
11. Emergency manual operation "Direct Handle"
12. Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
13. Padlocking facility (Up to 3 padlocks of dia. 4 – 8mm)
14. Output contacts x 4 (Position indication I-O-II and product availability outputs)
15. Facility for locking all controls in the zero position using a RONIS EL11AP Lock
16. Input contacts x 5:
Position order I-O-II
Remote control enable
Override controls and force to Off position
17. Sliders for Terminal Shields
18. Fixing holes for terminal Shields
19. Emergency manual operation shaft location (Accessible only in manual mode)

5.2. Product identification

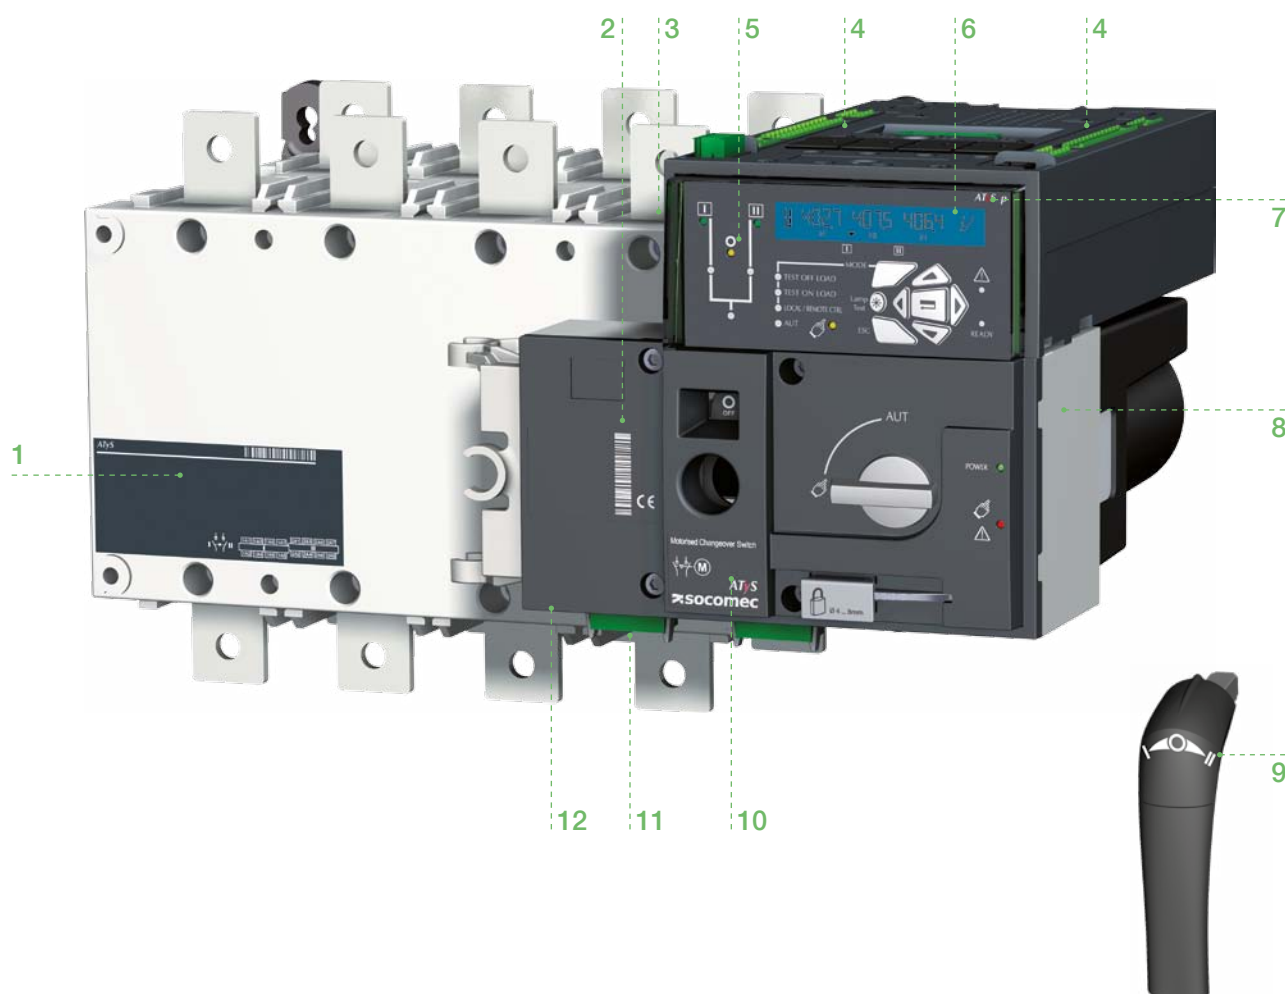

1. Main changeover switch identification label:
Electrical characteristics
Applicable standards and
Terminal incoming and outgoing wiring details.
2. Product serial number, barcode & CE marking.
3. Switch 1 (Front) and Switch 2 (back) identification labels
4. ATS controller terminal contact identification labels
5. Network status and switch position pictogram with LED's
6. ATyS p LCD Screen .
7. ATyS product type identification. (ATyS t, ATyS g or ATyS p)
8. Motor barcode and serial number
9. Emergency manual operation direction of rotation indication
10. ATyS p product current rating and reference number label
11. Output contacts identification label
12. Input contacts identification label

5.3. ATyS Control module interface

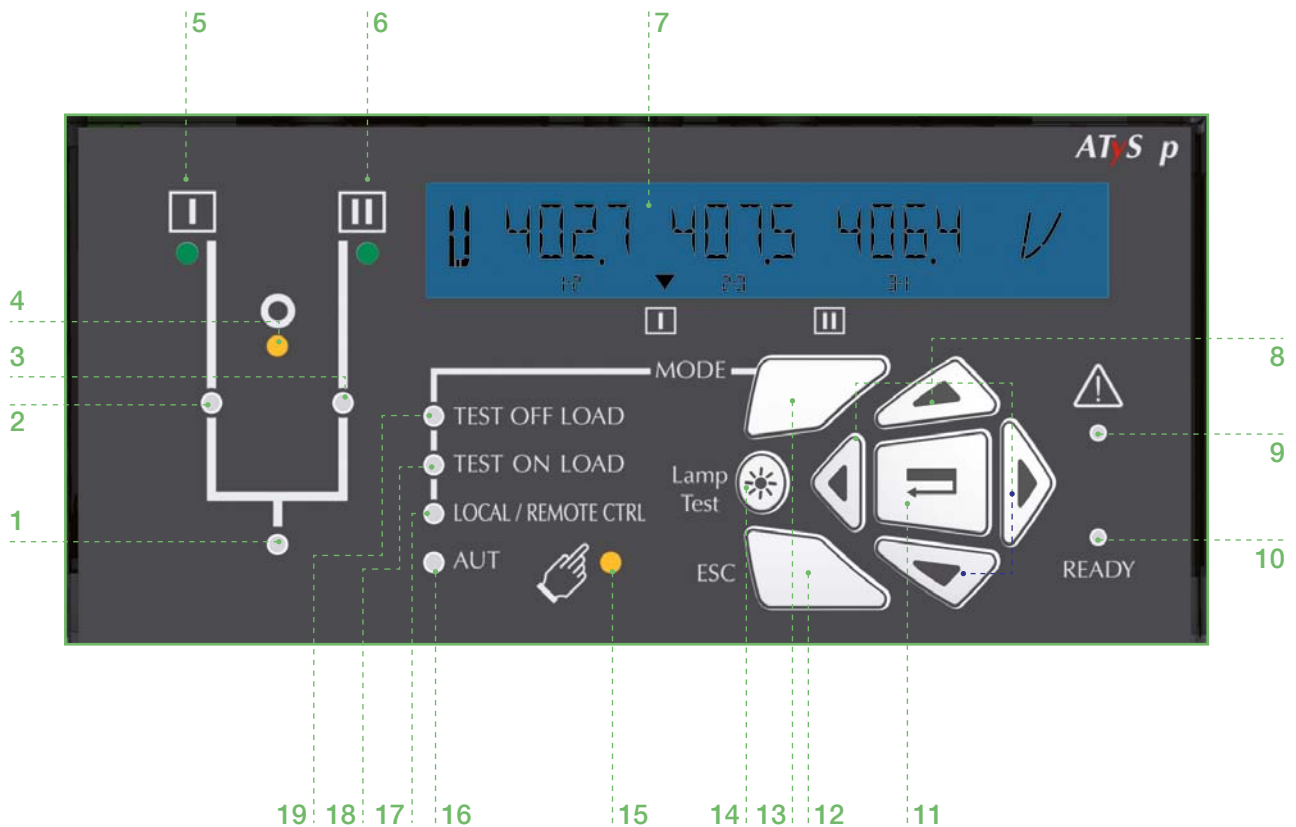

1. Load Supply On LED. (Green when the load is supplied).
2. Switch 1 LED position indication. (Green when in position 1).
3. Switch 2 LED position indication. (Green when in position 2).
4. Zero position LED indication. (Yellow when in position 0).
5. Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
6. Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
7. LCD Display Screen: (Status, measurement, timers, counters, events, faults, programming...)
8. ATyS p Keypad for direct access to the product configuration, programming and parameters.
9. Navigation Keys to browse through the ATyS p menus without software.
10. FAULT LED indication. (Red steady light in case of an ATS controller internal fault.
Switch the product from Auto to Manual and back to Auto to reset a fault condition).
11. READY LED indication. (Green steady light: Product is powered and in AUTO, Watchdog OK.
The Product is Available to changeover).
12. Enter Key used to enter Prog Mode (Press and hold for 5 seconds)
and to validate the settings programmed through the keypad.
13. ESC key used to escape from a specific screen up to the main menu.
14. MODE key to shift between operation modes.
15. Lamp test key to check the LED's and LCD screen.
16. MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
17. AUTO Mode LED indication
Green steady light when in Auto mode with no timers running.
Green flashing light when in Auto with timers running.
18. LOCAL / REMOTE CONTROL Mode LED indication.
Yellow steady light when in Local / Remote control mode.
Local Control selectable and operable through the ATyS p keypad.
Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed
with terminal 317. Remote control orders are received through closing 314 to 316 with 317.
REMOTE Control is also achievable through EasyConfig ATyS p software when connected to the product through
Ethernet or MODBUS. (Optional modules)
19. TEST ON LOAD CONTROL Mode LED indication. (Yellow steady light when in TOL mode).
20. TEST OFF LOAD CONTROL Mode LED indication. (Yellow steady light when in TFL mode).

5.4. Environmental

The ATyS p product meets the following environmental requirements:


5.4.1. IP Rating



- IP2X against direct contact for the ATyS p motorization control unit.
- IP2X against direct contact for the power section with the connections in place and when including suitable, correctly installed incoming and outgoing terminal shields.
- IP 0 for the bare power section without terminal shields in place.

5.4.2. Operating Conditions

5.4.2.1. Temperature



- From -20 to +40°C without derating
- From -20 to +70°C when applying a Kt derating correction factor

Kt: Correction Factor	Temperature
0.9	40 °C ... 50 °C
0.8	50 °C ... 60 °C
0.7	60 °C ... 70 °C

* Simplified derating method: $I_{thu} \leq I_{th} \times K_f$

* A more precise calculation may be done for specific applications. Should this be required please contact SOCOMEC.

5.4.2.2. Hygrometry



- 80% humidity without condensation at 55°C
- 95% humidity without condensation at 40°C

5.4.2.3. Altitude




- Up to 2000m in altitude without derating
- For higher altitude the Ka correction factors below apply

Ka: Correction Factor	2000 m < A ≤ 3000 m	3000 m < A ≤ 4000 m
Ue	0.95	0.8
Ie	0.85	0.85

5.4.3. Storage Conditions



5.4.3.1. Temperature




- From -40 to +70°C

5.4.3.2. Storage duration period

- Maximum storage up to a period of 12 months
- (Recommendation: To be stored in dry, non corrosive and non saline atmospheric conditions)

5.4.3.3. Storage position

- ≤ 630 A: a maximum of 3 boxes may be stocked vertically
 ≥ 800 A: a maximum of 1 box may be stocked vertically

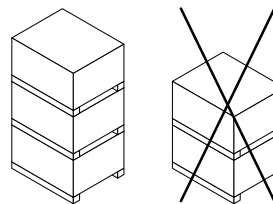

5.4.4. Volume and shipping weights by reference ATyS p

Frame Size	Rating	N° of Poles	Reference Number	Weight (kg)		Volume (cm) inc Packing
				Net	Gross	
B3	125A	3	95 73 3 012	6,8	10,1	360x480x370
		4	95 73 4 012	8,0	11,3	360x480x370
	160A	3	95 73 3 016	6,8	10,1	360x480x370
		4	95 73 4 016	8,0	11,3	360x480x370
	200A	3	95 73 3 020	6,8	10,1	360x480x370
		4	95 73 4 020	8,0	11,3	360x480x370
B4	250A	3	95 73 3 025	7,7	11,0	360x480x370
		4	95 73 4 025	8,5	11,8	360x480x370
	315A	3	95 73 3 031	7,8	11,1	360x480x370
		4	95 73 4 031	8,9	12,2	360x480x370
	400A	3	95 73 3 040	7,8	11,1	360x480x370
		4	95 73 4 040	8,9	12,2	360x480x370
B5	500A	3	95 73 3 050	12,5	15,8	536x378x427
		4	95 73 4 050	14,4	17,7	536x378x427
	630A	3	95 73 3 063	13,0	16,3	536x378x427
		4	95 73 4 063	15,1	18,4	536x378x427
B6	800A	3	95 73 3 080	29,0	45,0	730x800x600
		4	95 73 4 080	33,3	49,3	730x800x600
	1000A	3	95 73 3 100	29,5	45,5	730x800x600
		4	95 73 4 100	34,0	50,0	730x800x600
	1250A	3	95 73 3 120	30,0	46,0	730x800x600
		4	95 73 4 120	34,7	50,7	730x800x600
B7	1600A	3	95 73 3 160	34,2	50,2	730x800x600
		4	95 73 4 160	40,5	56,5	730x800x600
B8	2000A	3	95 73 3 200	51,8	67,8	730x800x600
		4	95 73 4 200	62,7	78,7	730x800x600
	2500A	3	95 73 3 250	51,8	67,8	730x800x600
		4	95 73 4 250	62,7	78,7	730x800x600
	3200A	3	95 73 3 320	62,1	78,1	730x800x600
		4	95 73 4 320	76,4	92,4	730x800x600

5.4.5. CE marking

The ATyS p complies with the European directive for:

- The Electromagnetic compatibility no. 2004/108/CE dated 15th of December 2004.
- Low voltage directive no. 2006/95/CE dated 12th of December 2006.



5.4.6. Lead free process

- The ATyS p complies with the European directive for RoHS.



5.4.7. WEEE

The ATyS p is built in accordance with 2002/96/CE directive:



5.4.8. EMC standard

The ATyS p is designed and built in accordance with IEC 60947-1 standards

(Products intended to be installed in an "Industrial, Commercial and/or Residential Environment" therefore respecting both Class A as well as Class B EMC requirements).

Description	Std (IEC)	Requirement (criteria)
Conducted	CISPR 11	Class B
Radiated	CISPR 11	Class B
ESD contact	61000-4-2	4KV (B)
ESD air	61000-4-2	8KV (B)
Electromagnetic field	61000-4-3	10V/m (A)
RF Conducted	61000-4-6	10V (A)
Burst	61000-4-4	2KV (B) power 1KV (B) control
Surge Common	61000-4-5	2KV (B)
Surge differential	61000-4-5	1KV (B)

5.5. ATyS p ACCESSORIES AVAILABLE

5.5.1. Customer mounted accessories

BRIDGING BARS To connect switch I & II load terminals together. VOLTAGE SENSING AND POWER SUPPLY KIT Allows voltage sensing and power supply connections from switch terminals to power supply and control module. Secure cables tray, no specific cable protection required (fuse type). TERMINAL SHROUDS (125 TO 630 A) Incoming and outgoing protection against direct contact with the connection terminals or parts. Cannot be mounted in the rear position at the same time as the voltage sensing and power outlet kit or the bridging bars. Can be mounted top or bottom, in front or in rear position. TERMINAL SCREENS Incoming and outgoing protection against direct contact with the connection terminals or parts. REMOTE INTERFACES ATyS D20 • Remote Display: Allows source supply state and switch positions to be displayed remotely. • Remote Control: Allows remote configuration, control and metering (from front panel) on which the device is mounted. Typically door mounted or $\leq 3\text{m}$ away from the ATyS. DOOR ESCUTCHEON PLATE An accessory to be fixed onto a cabinet door to frame the controller part of flush mounted ATyS p transfer switches. CURRENT TRANSFORMERS An extensive range of CT's is available from SOCOMEC. Refer to the SOCOMEC general catalogue for details. COMMUNICATION CABLE RJ 45 communication cable (3m long) for use with the ATyS D20 remote display/controller or Ethernet modules. DC POWER SUPPLY (DC -> AC) Allows a standard 230Vac ATyS p to be supplied through a DC Aux Power supply.	CONTROL VOLTAGE TRANSFORMER Allows a standard 230 V AC device to be supplied with 400 VAC. MOUNTING SPACERS (125 TO 630 A) Raises the device's terminals 10 mm away from the backplate or frame OPTIONAL MODULES Communication modules (3 Types) Configuration, Monitoring and control of the changeover switch via Ethernet / Ethernet Gateway (RJ45 connection) or MODBUS, (2 or 3-wire RS485 link). Besides communication, the Ethernet module includes Webserver monitoring integrated in the module. This gives remote user friendly access (through internet) to ATyS p setting parameters, history of events, metering, engine exerciser settings without the need for additional software. Configuration of the ATyS p is recommended to be done using the SOCOMEC Easy Config software used with a standard laptop/computer having an RJ45 connection (to use with the Ethernet module) or a USB connection (used with a USB/RS485 converter) for MODBUS modules. Input / Output Extension Module 2 Inputs/2 Outputs on each module with a maximum of 4 modules on each ATyS p. (Attn: When used with an Ethernet module the remaining space available is for 2 I/O modules. Similarly when used with a Modbus module the remaining space available is for 3 I/O modules. 4-20mA analogue output module 3I, In, 3V, 3U, F, $\pm \Sigma P$, $\pm \Sigma Q$, ΣS (Attn: To be configured through a communication module) Pulsed output module 2 configurable pulse outputs (type, weight and duration) on $\pm \text{kWh}$, $\pm \text{kvarh}$ and kVAh (Attn: To be configured through a communication module) Others: Refer to the end of this instruction manual or the latest SOCOMEC product catalogue. (Downloadable from www.socomec.com)
--	--


5.5.2. Factory fitted accessories

SUPPLEMENTARY AUXILIARY CONTACT (AC) Pre-breaking and signaling of positions I and II: 1 additional auxiliary contact NO / NC auxiliary contact in each position. Included as standard for ratings from 2000 to 3200A. For Low level AC: please consult SOCOMEC. KEY LOCK AUTO / MANUAL SELECTOR SWITCH The ATyS p mode selector switch is delivered with a rotary handle as standard. This can be factory replaced with a key lock when the ATyS is ordered accordingly. Refer to the style chart at the end of this document.	RONIS KEY PADLOCKING ACCESSORIES Locking of the electrical and the manual operation by means of a RONIS EL11AP lock. Possibility of locking in another position, if the "Padlocking in the 3 positions" option is ordered. Not compatible with flush mounting. PADLOCKING IN 3 POSITIONS Allows locking of the operation in the 3 positions I, 0 and II.
---	--

6. INSTALLATION

6.1. Product dimensions

6.1.1. Dimensions: Frame B3 to B5 (125A to 630A)

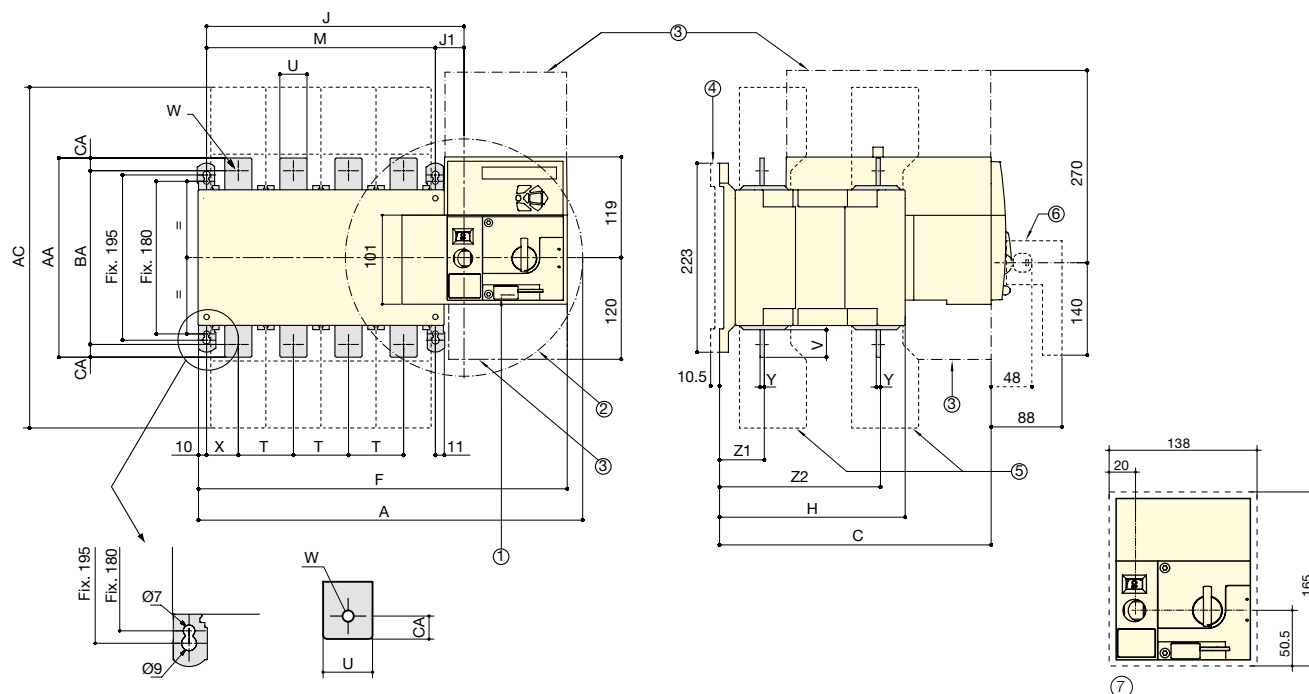

1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 – 8mm
2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
3. Connection and disconnection area
4. Mounting stand off with spacer accessory
5. Phase Barriers
6. Emergency removable handle
7. Flush mounting cutout dimensions for front door




CAUTION

To consider the space required for manual operation and wiring.
(When using the ATyS p emergency handle: note 2).

Rating (A)	Overall dimensions			Terminal shrouds	Body						Switch mounting		Connection													
	A 3p.	A 4p.	C		AC	F 3p.	F 4p.	H	J 3p.	J 4p.	J1	M 3p.	M 4p.	T	U	V	W	X 3p.	X 4p.	Y	Z1	Z1	AA	BA	CA	
125	304	334	244	233	286.5	317	151	154	184	34	120	150	36	20	25	9	28	22	3.5	38	134	135	115	10		
160	304	334	244	233	286.5	317	151	154	184	34	120	150	36	20	25	9	28	22	3.5	38	134	135	115	10		
200	304	334	244	233	286.5	317	151	154	184	34	120	150	36	20	25	9	28	22	3.5	38	134	135	115	10		
250	345	395	244	288	328	378	152	195	245	35	160	210	50	25	30	11	33	33	3.5	39.5	133.5	160	130	15		
315	345	395	244	288	328	378	152	195	245	35	160	210	50	25	30	11	33	33	3.5	39.5	133.5	160	130	15		
400	345	395	244	288	328	378	152	195	245	35	160	210	50	35	35	11	33	33	3.5	39.5	133.5	170	140	15		
500	394	454	321	402	377	437	221	244	304	34	210	270	65	45	50	13	42.5	37.5	5	53	190	260	220	20		
630	394	454	321	402	377	437	221	244	304	34	210	270	65	45	50	13	42.5	37.5	5	53	190	260	220	20		

All dimensions in mm







6.1.2. Dimensions: Frame B6 & B7 (800A to 1600A)

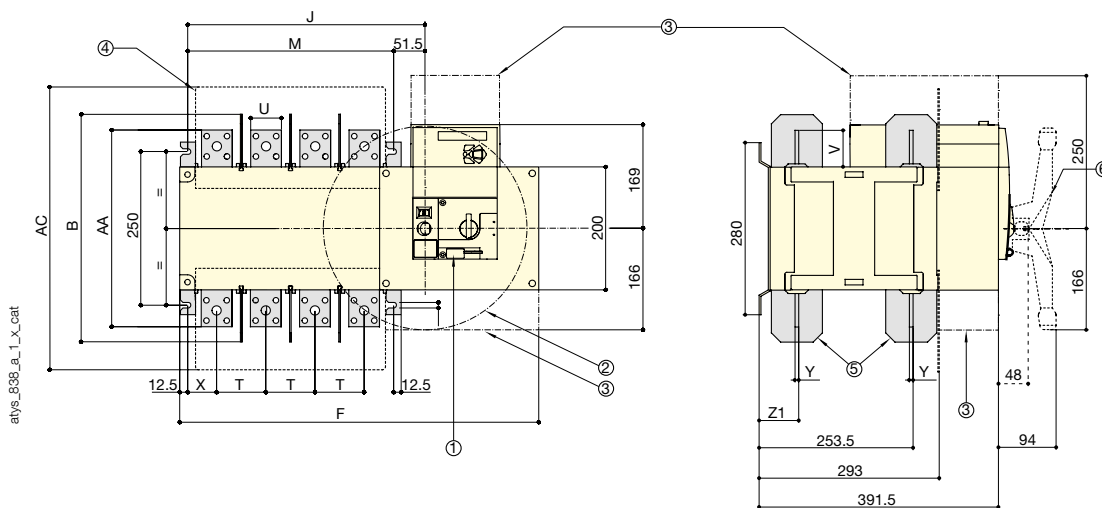

800 to 1000 A

1250 A

1600 A

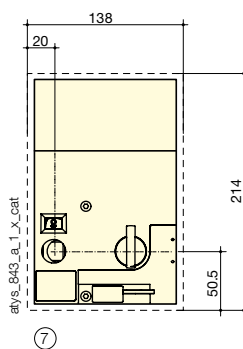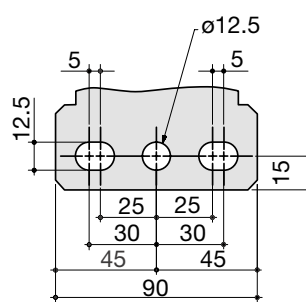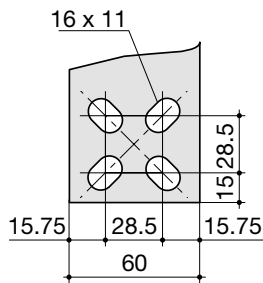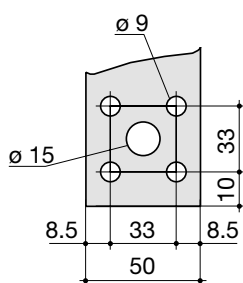

1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 – 8mm
2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
3. Connection and disconnection area
4. Mounting stand off with spacer accessory
5. Phase Barriers
6. Emergency removable handle
7. Flush mounting cutout dimensions for front door




To consider the space required for manual operation and wiring.
(When using the ATyS p emergency handle: note 2).


Rating (A)	Overall dimensions	Terminal screens	Body				Switch mounting		Connection						
	B	AC	F 3p.	F 4p.	J 3p.	J 4p.	M 3p.	M 4p.	T	U	V	X	Y	Z1	AA
800	370	461	504	584	307	387	255	335	80	50	60.5	47.5	7	66.5	321
1000	370	461	504	584	307	387	255	335	80	50	60.5	47.5	7	66.5	321
1250	370	461	504	584	307	387	255	335	80	60	65	47.5	7	66.5	330
1600	380	531	596	716	399	519	347	467	120	90	44	53	8	67.5	288

All dimensions in mm

6.1.3. Dimensions: Frame B8 (2000A to 3200A)

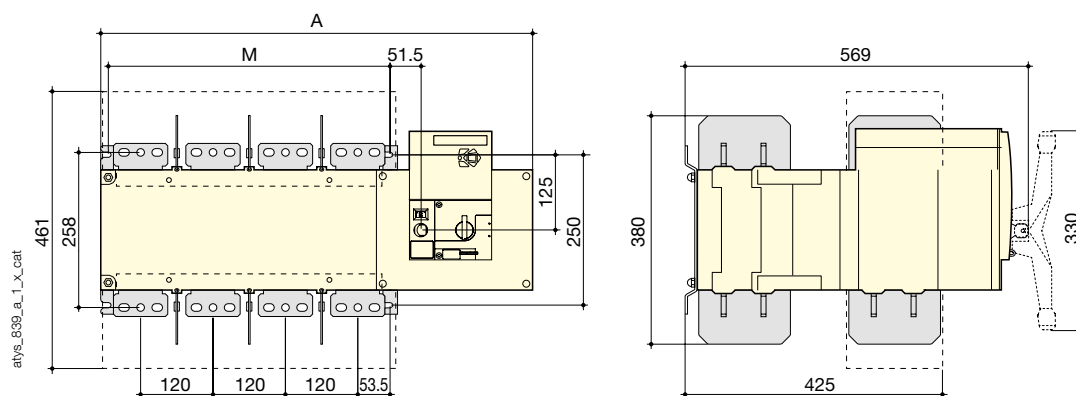

2000 to 3200 A

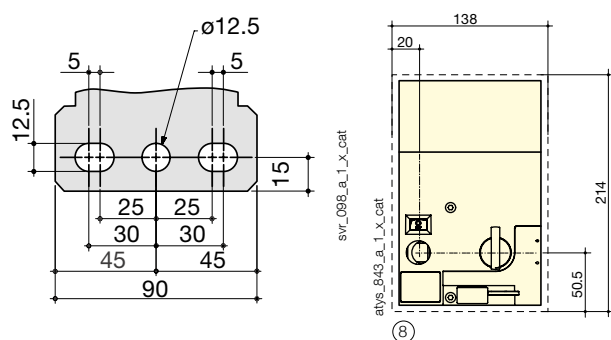

1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 – 8mm
2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
3. Connection and disconnection area
4. Mounting stand off with spacer accessory
5. Phase Barriers
6. Emergency removable handle
7. Frame B8, (Dual frame) factory fitted power terminal connections
8. Flush mounting cutout dimensions for front door







To consider the space required for manual operation and wiring.
(When using the ATyS p emergency handle: note 2).

Rating (A)	Overall dimensions		Switch mounting	
	A 3p.	A 4p.	M 3p.	M 4p.
2000 ... 3200	596	716	347	467

All dimensions in mm

6.2. Mounting orientation

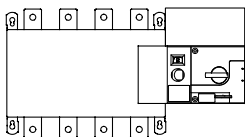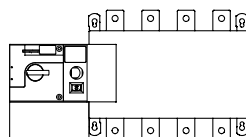				
125A to 630A	Recommended	OK	Not Allowed	Not Allowed
800A to 3200A	Recommended	Not Allowed	OK	Not Allowed


CAUTION

Always install the product on a flat and rigid surface.


6.3. Assembly of customer mounted accessories

 DANGER	Never handle any customer mounted accessories while there may be the risk of voltage being or becoming present.
---	---

6.3.1. Terminal shrouds


Available from 125A to 630A
Frame B3 to Frame B5:

- Upstream, downstream, front or rear mounting.
- When fitted with bridging bars only the front terminal shrouds are to be installed.

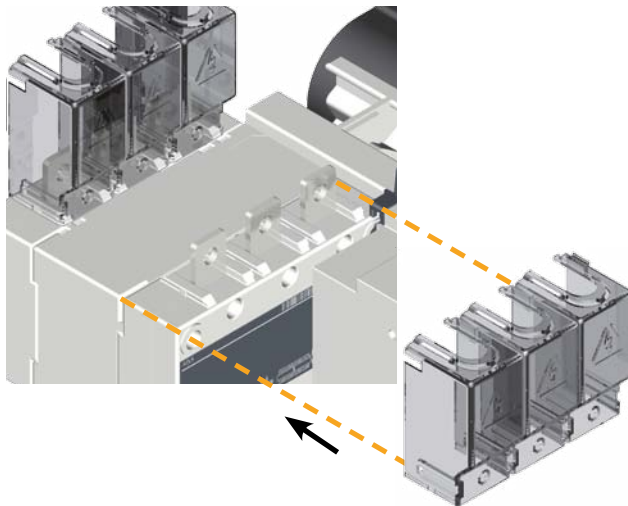


6.3.2. Terminal screens


125A to 630A

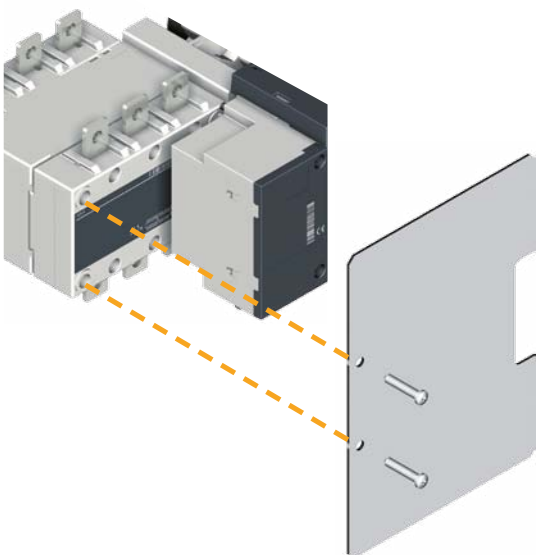

630A to 1600A

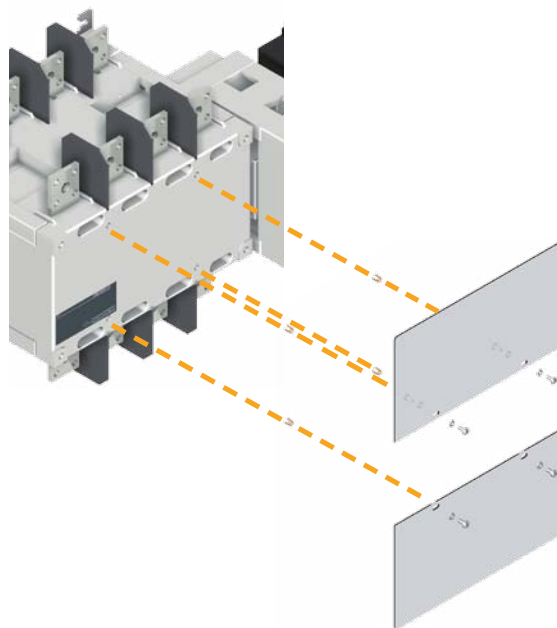


2000A to 3200A

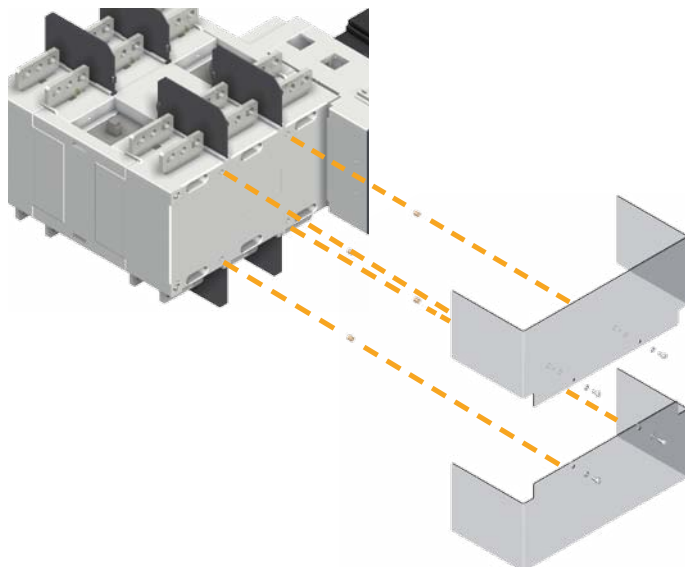


6.3.3. Bridging bar installation

125A to 630A

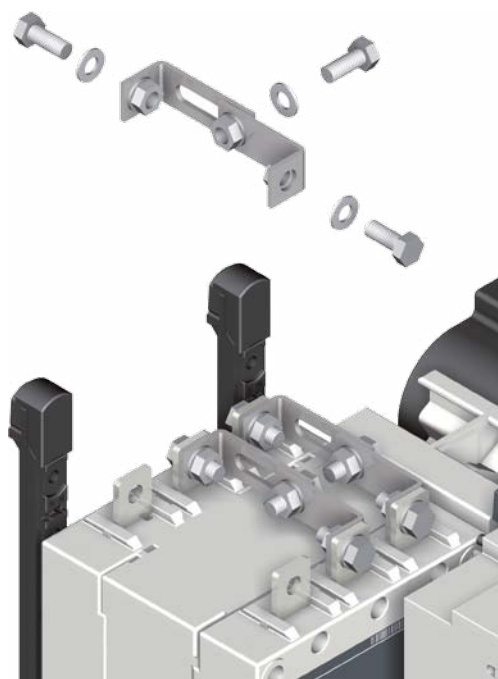

800A to 1600A

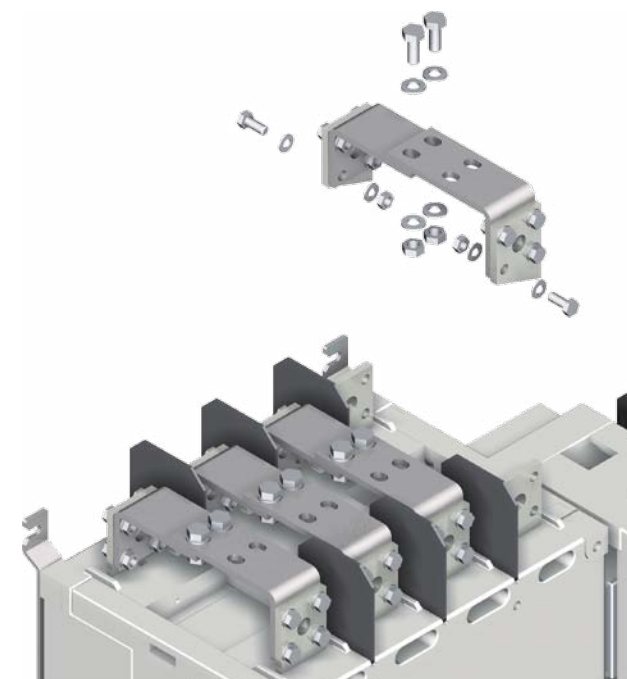

It is possible to mount the bridging bars on either side of the switch.

Recommended tightening torque:

M6: 4,5 N.m
M8: 8,3 N.m
M10: 20 N.m
M12: 40 N.m



Maximum tightening torque:

M6: 5,4 N.m
M8: 13 N.m
M10: 26 N.m
M12: 45 N.m

6.3.4. Copper bar connection kits (2000A to 3200A : Frame B8)


 Conditions of use of these products may lead to a derating.

 [SOCOME C "Application guide"](#)
 www.socomec.com

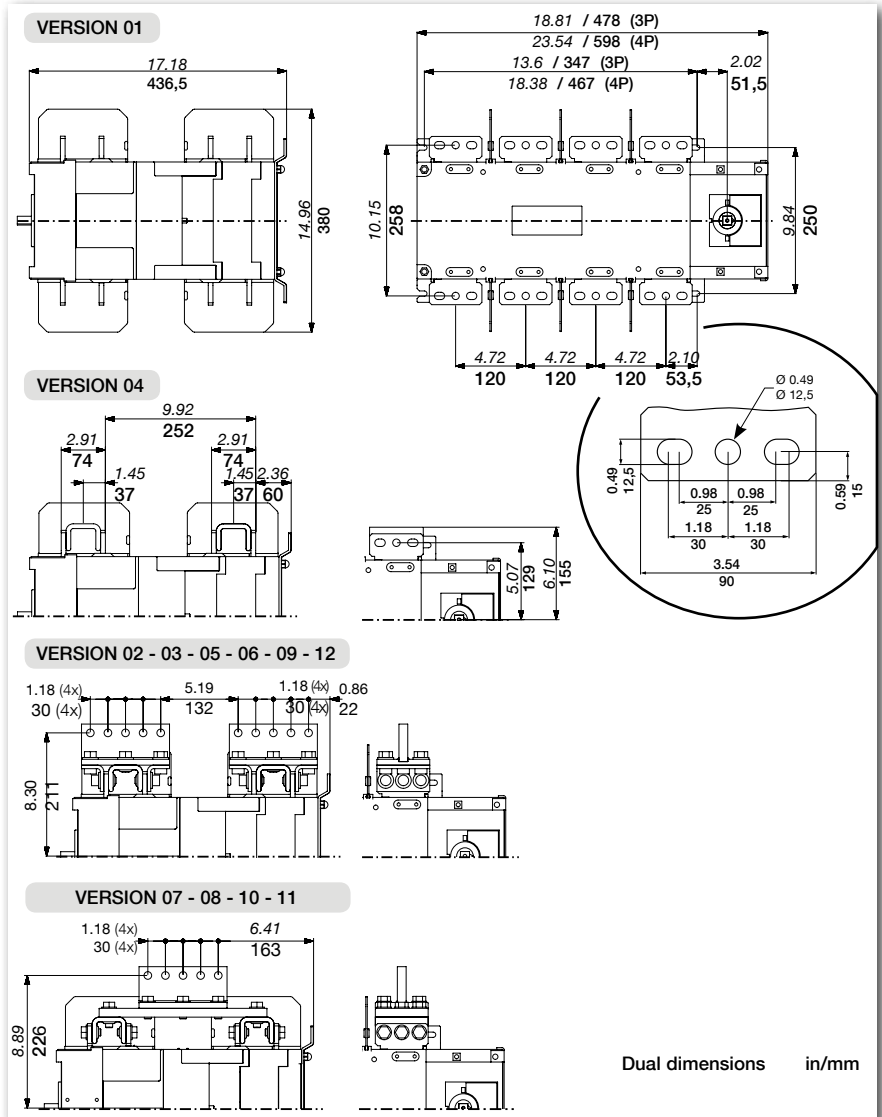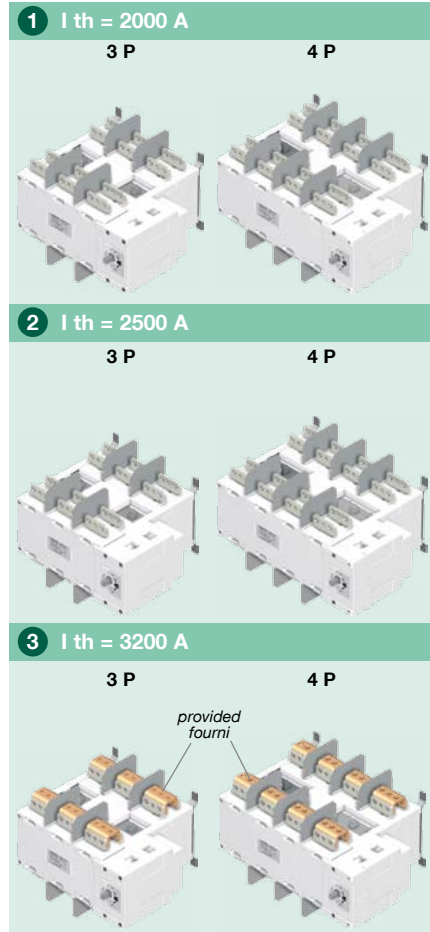

Data for Bolts, Nuts and Washers for Busbar Connections.

 **TO BE SUPPLIED BY OTHERS**

Connection reference numbers and contents:		
 x 1 <i>included with 3200A product as standard</i> 2619 12000	 x 6 708 lb-in 80 Nm 2699 1200	 x 1 +  x 6 708 lb-in 80 Nm 2629 1200
 x 2 +  x 6 708 lb-in 80 Nm 2639 1200	 x 1 +  x 6 708 lb-in 80 Nm 4109 0250	 x 1 +  x 6 708 lb-in 80 Nm 4119 0320


VERSION	H M12-35 6.8 - 6 x	12 x	6 x
01	H M12-35 6.8 - 6 x	12 x	6 x
02	H M12-55 6.8 - 3 x	6 x	3 x
03	H M12-55 6.8 - 5 x	10 x	5 x
04	A H M12-35 6.8 - 3 x	3 x	-
	B H M12-45 6.8 - 3 x	3 x	-
05	H M12-65 6.8 - 3 x	6 x	3 x
06	H M12-65 6.8 - 5 x	10 x	5 x
07	H M12-55 6.8 - 3 x	6 x	3 x
08	H M12-55 6.8 - 5 x	10 x	5 x
09	H M12-55 6.8 - 10 x	20 x	10 x
10	H M12-65 6.8 - 3 x	6 x	3 x
11	H M12-65 6.8 - 5 x	10 x	5 x
12	H M12-65 6.8 - 10 x	20 x	10 x

Note: Reference numbers and quantity given above and below are for one connection and per pole.
 For a full set multiply the quantity indicated by the number of poles (3 or 4 pole) and then multiply by 2 (N° of switches)


6.3.5. Incoming copper bar connection kit assembly

2000A – 2500A (Minimum Cu bar section 2x100x10mm)


VERSION 01

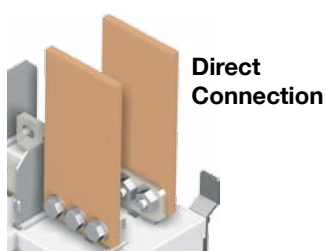

VERSION 02

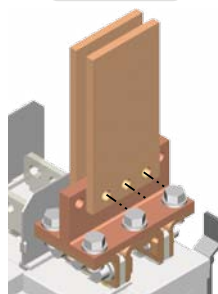

VERSION 03

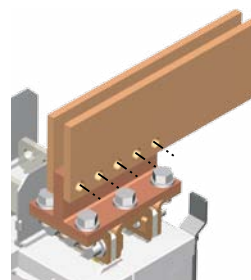


V2 & V3


Kit :
2619 1200 x 1
2629 1200 x 1
2639 1200 x 1

3200A (Minimum Cu bar section 3x100x10mm)


VERSION 04

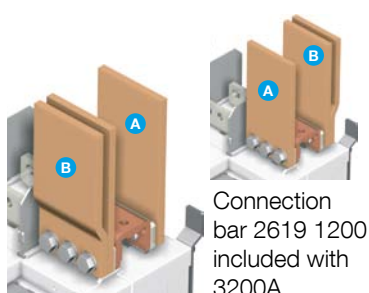

VERSION 05

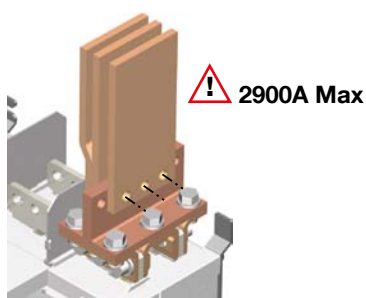

VERSION 06

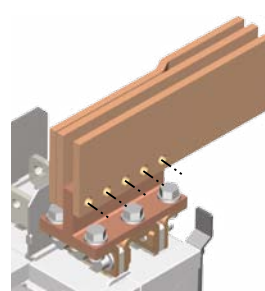


V5 & V6

Kit :
2629 1200 x 1
2639 1200 x 1


6.3.6. Outgoing bridge connection assembly

2000A – 2500A (Minimum Cu bar section 2x100x10mm)


VERSION 07

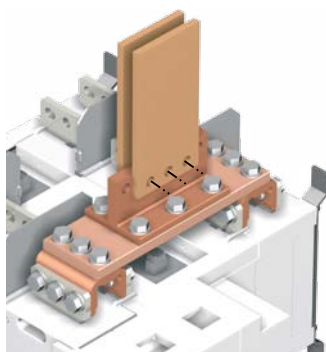

VERSION 08

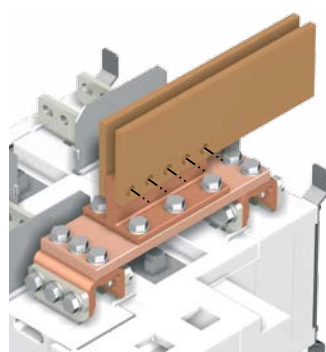

VERSION 09

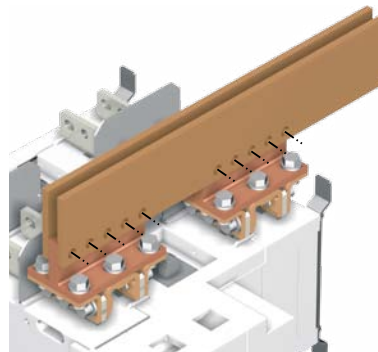

V7 & V8

Kit :
2619 1200 x 2
2699 1200 x 2
2629 1200 x 1
4109 1250 x 1


V9

Kit :
2619 1200 x 2
2629 1200 x 2
2639 1200 x 2


3200A (Minimum Cu bar section 3x100x10mm)

VERSION 10


⚠ 2900A Max

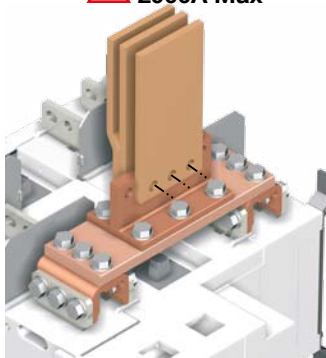

VERSION 11

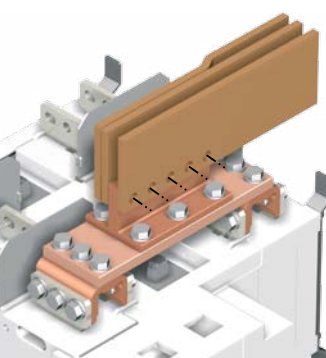

VERSION 12

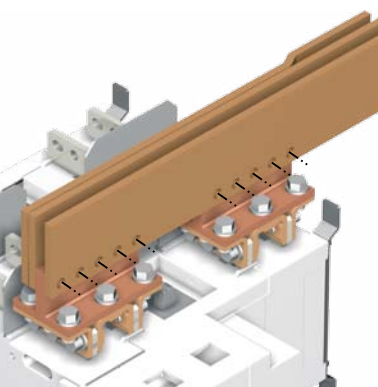

V10 & V11


Kit :
2619 1200 x 2
2699 1200 x 2
2629 1200 x 1
4109 0320 x 1

V12

Kit :
2619 1200 x 2
2629 1200 x 2
2639 1200 x 2

6.3.7. External Power supply (400VAC - 230VAC)


Power Transformer intended for 400VAC, Phase to Phase voltage applications that do not provide the availability of a neutral conductor. Transformer data: 400VAC – 230VAC: 200VA. The ATyS p will require 2 transformers to be connected as shown.

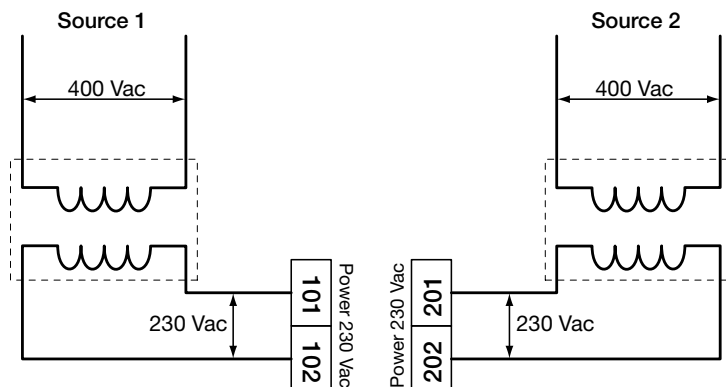

6.3.8. External Power supply (12/24VDC - 230VAC)

DC power supply available in 12Vdc as well as 24Vdc intended to allow a standard ATyS (125-1600A) to be powered from an appropriate DC supply. (Usually the battery of the backup generator source).

This converter is to be positioned as close as possible to DC power source.

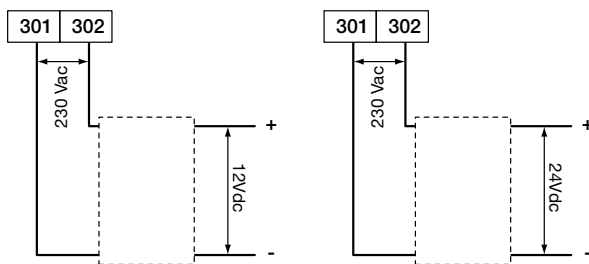

6.3.9. Raised mounting spacers

Available for 125A to 630A ratings only
Frames B3, B4 and B5

1 set including 2 spacers raises the device's terminals 10mm away from the bottom of the enclosure or frame on which the device is mounted. These may also be used to replace the original mounting spacers.




6.4. Factory fitted accessories

6.4.1. Padlocking key interlocks


Intended for locking the electrical control and the backup control in position 0 using a RONIS EL11AP lock (factory fitted). As standard, key locking is in the 0 position.

Optionally and when including the option “padlocking in 3 positions” key locking will be in positions I, 0 or II

125A to 630A

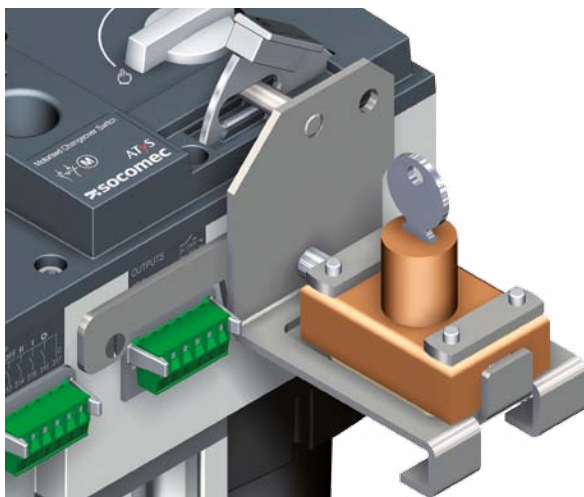

800A to 3200A


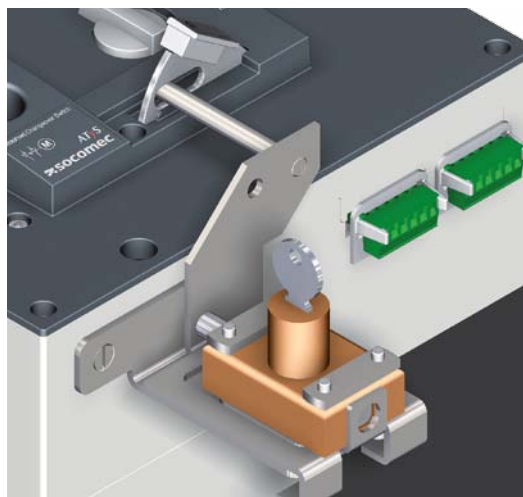


6.4.2. Additional auxiliary contacts


Intended for pre breaking and signaling of positions I and II:

One additional NO / NC auxiliary contact for each position (factory fitted).

125A to 630A (Optional)

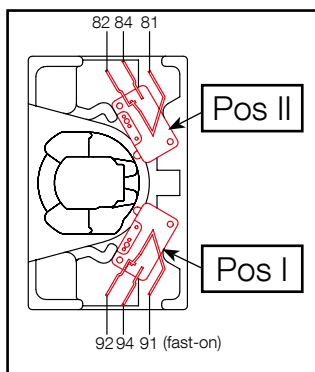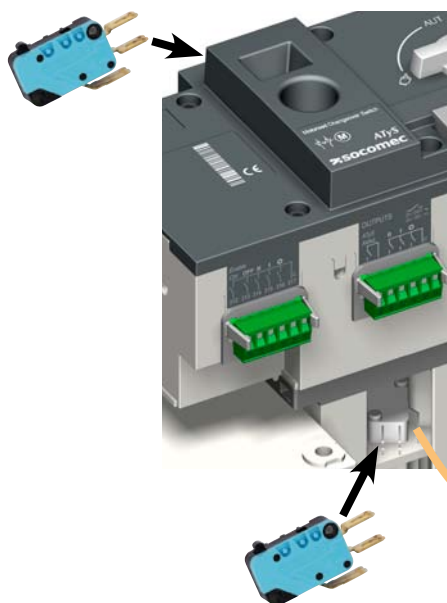

800A to 1600A (Optional) 2000A to 3200A (Standard)

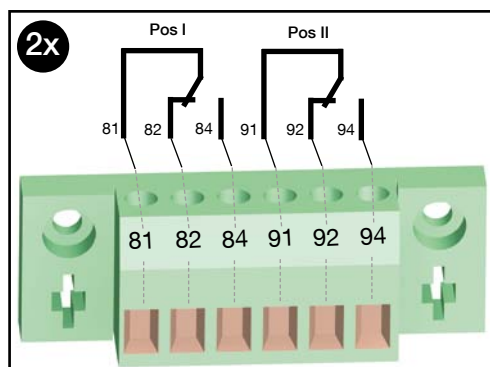

6.5. ATyS p Optional module installation



RS485 JBUS/MODBUS® communication

- RS485 link with JBUS / MODBUS® protocol (speed up to 38400 bauds).



2 inputs - 2 outputs

- Each module has 2 programmable inputs and 2 programmable outputs available.



Ethernet communication

- Ethernet link with MODBUS/TCP or JBUS/MODBUS RTU over TCP.
- Embedded Ethernet Webserver software.



Ethernet communication with RS485 JBUS/MODBUS gateway

- Ethernet link with MODBUS/TCP or JBUS/MODBUS RTU over TCP.
- Connection of 1 to 247 RS485 JBUS/MODBUS slaves.
- Embedded Ethernet Webserver software.



Analogue outputs

- Outputs assignable to:
3I, In, 3V, 3U, F, $\pm \Sigma P$, $\pm \Sigma Q$, ΣS .



Pulse outputs




- 2 configurable pulse outputs (type, weight and duration) on $\pm$ kWh, $\pm$ kvarh and kVAh.

The ATyS p includes four slots on the top part of the ATS controller that are dedicated to fixing of optional modules.

The modules are available as an option so as to suit the various user requirements.

Depending on the option mix selected an ATyS may accept a maximum of any 4 single module units or 2 single module + 1 double module. (Double modules are for Ethernet).

The modules may be mounted in any slot (1-4) and configured according to their location.

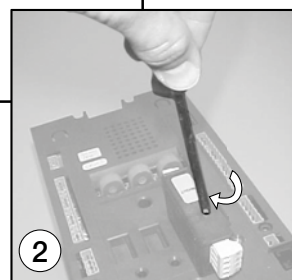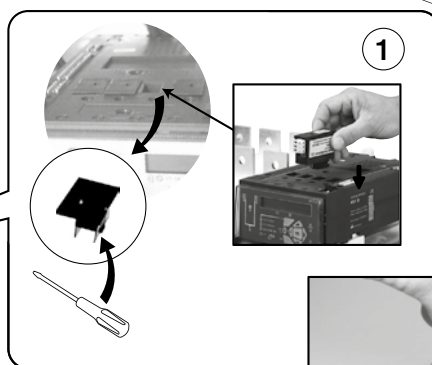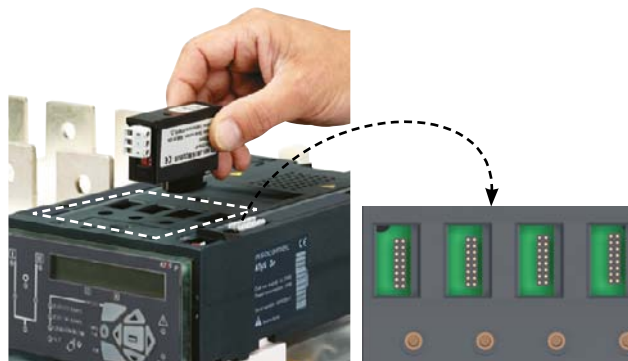



CAUTION

Connect the modules with the power off.
Ensure that the option fixing bolts are tightened correctly.
A 3 minute power outage is required to recognize an optional module.

7. CONNECTIONS

7.1. Power circuits

7.1.1. Cable or bar connections

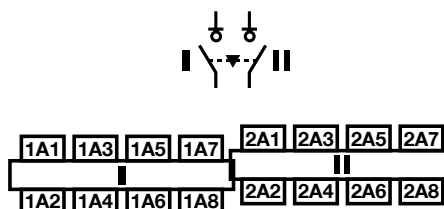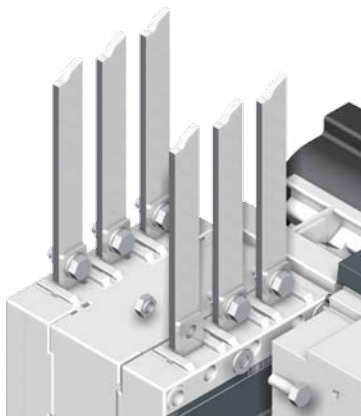

Recommended tightening torque:

- M6: 4,5 N.m
- M8: 8,3 N.m
- M10: 20 N.m
- M12: 40 N.m

Maximum tightening torque:

- M6: 5,4 N.m
- M8: 13 N.m
- M10: 26 N.m
- M12: 45 N.m

7.1.2. Power connection terminals

125A to 630A

Refer to section "Product dimensions", page 27 for power connection terminal details.

7.1.3. Power connection cross-section

	B3		B4				B5		B6			B7	B8		
	125A	160A	200A	250A	315A	400A	500A	630A	800A	1000A	1250A	1600A	2000A	2500A	3200A
Minimum cables section Cu (mm ²), lth	50	70	95	120	185	240	2x150	2x185	2x240	-	-	-	-	-	-
Minimum bars section Cu (mm ²), lth	-	-	-	-	-	-	2x30 x5	2x40 x5	2x50 x5	2x60 x5	2x80 x5	2x100 x5	3x100 x5	4x100 x5	3x100 x10
Maximum cables section Cu (mm ²)	50	95	150	150	240	240	2x300	2x300	2x300	4x185	4x185	6x185	-	-	-
Maximum bars width Cu (mm)	20	20	32	32	32	32	50	50	63	63	63	100	100	100	100


Note for all ratings: Take into account the connection cable lengths and/or others environmental specific operating conditions.

7.1.4. Standard Connection Priority Source Supply On Switch I


The product is delivered from the factory with the following configuration:

- Connectors 101 to 106 are associated with switch I
- Connectors 201 to 206 are associated switch II.

Priority (main) supply connected to Switch I

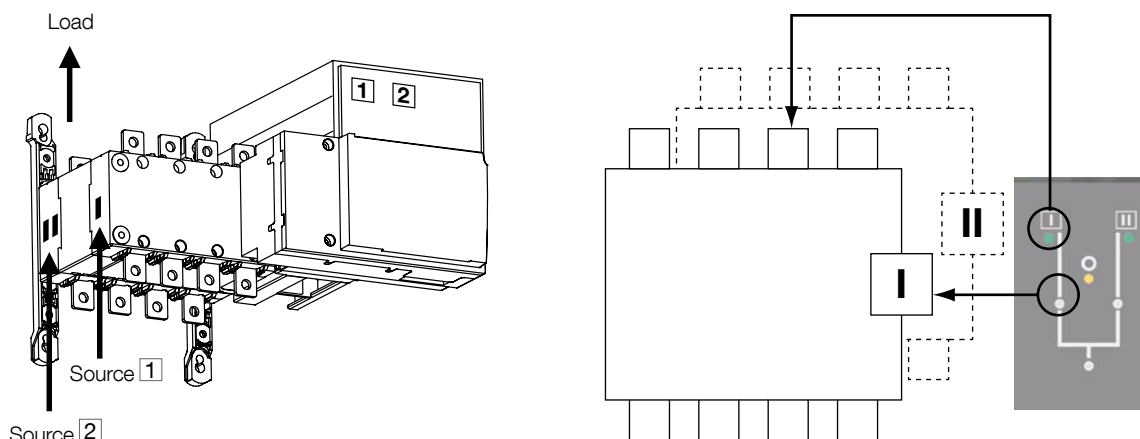

Aux Supply-2
Power-230V
208-277 Vac $\pm 20\%$
(166-332Vac)



201

202



Aux Supply-1
Power-230V
208-277 Vac $\pm 20\%$
(166-332Vac)

101

102



Voltage Sensing
Source II - 1Ph / 3Ph
(0 - 332 / 575 (600Vac)



L1 - 203
L1 - 203

L2 - 204
L2 - 204

L3 - 205
L3 - 205

N - 206
N - 206



Voltage Sensing
Source I - 1Ph / 3Ph
(0 - 332 / 575 (600Vac)

N - 103
N - 103

L3 - 104
L3 - 104

L2 - 105
L2 - 105

L1 - 106
L1 - 106



CAUTION


It is recommended to connect power and sensing with the ATyS voltage sensing and power supply kit available as an accessory.
In this case ensure to mount the kit before connecting the power cables.

7.1.5. Specific Connection Priority Source Supply On Switch II



Certain applications or installation constraints may require that the main supply is connected to switch II instead of switch I. This is possible to cater for with certain precautions.

The ATyS p includes the facility to adapt the switch priority supply using the configuration in the software that will swap the main supply and switch logic. When this is done pay attention to the LED switch position display that will no longer correspond to the identification labels on the switch. The LED's will correspond to the switch that is energized however the main supply will be displayed under II. In this case it is important to update the ATS controller sticker so as to correspond with the actual wiring and configuration.



Priority (main) supply connected to Switch II

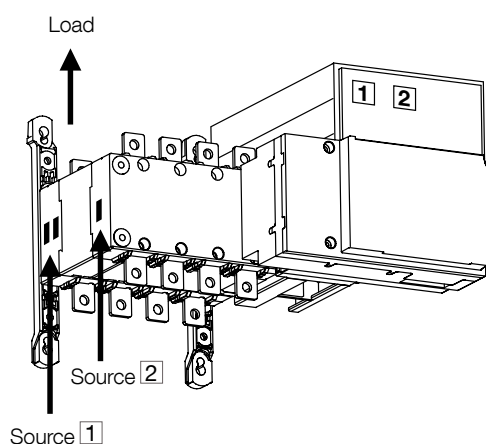

Change from:

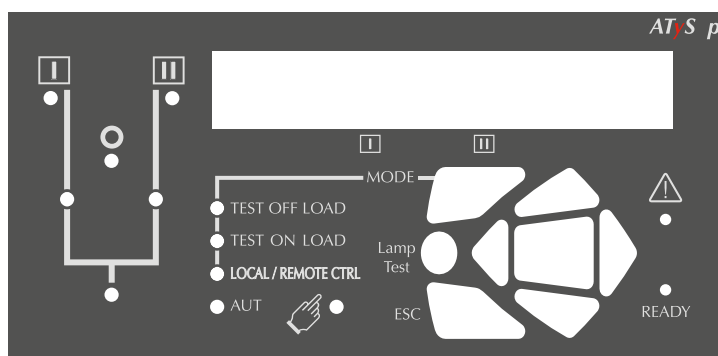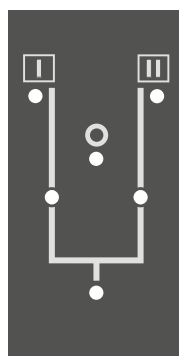

to:

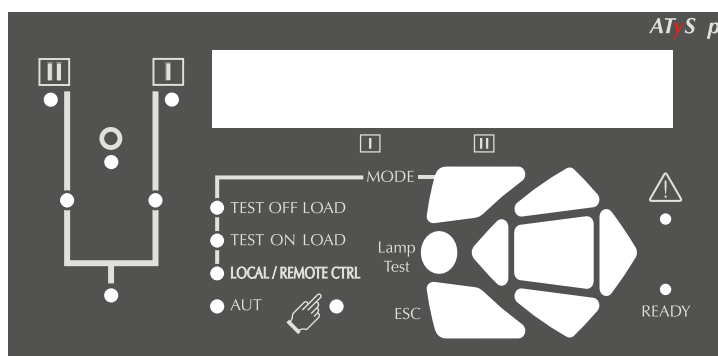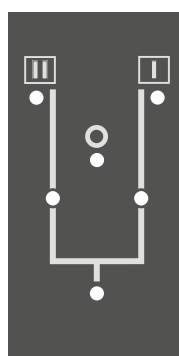


CAUTION

When reversing the switch priority (main supply connected to switch II) update the LED numbering on the front of the ATS to correspond with the actual wiring, configuration and LED indication.
Inverse (I – II -> II – I)

7.2. Control circuits

7.2.1. Typical ATyS p wiring

Example: Control wiring for a 400VAC application having a 3 phase and neutral supply.

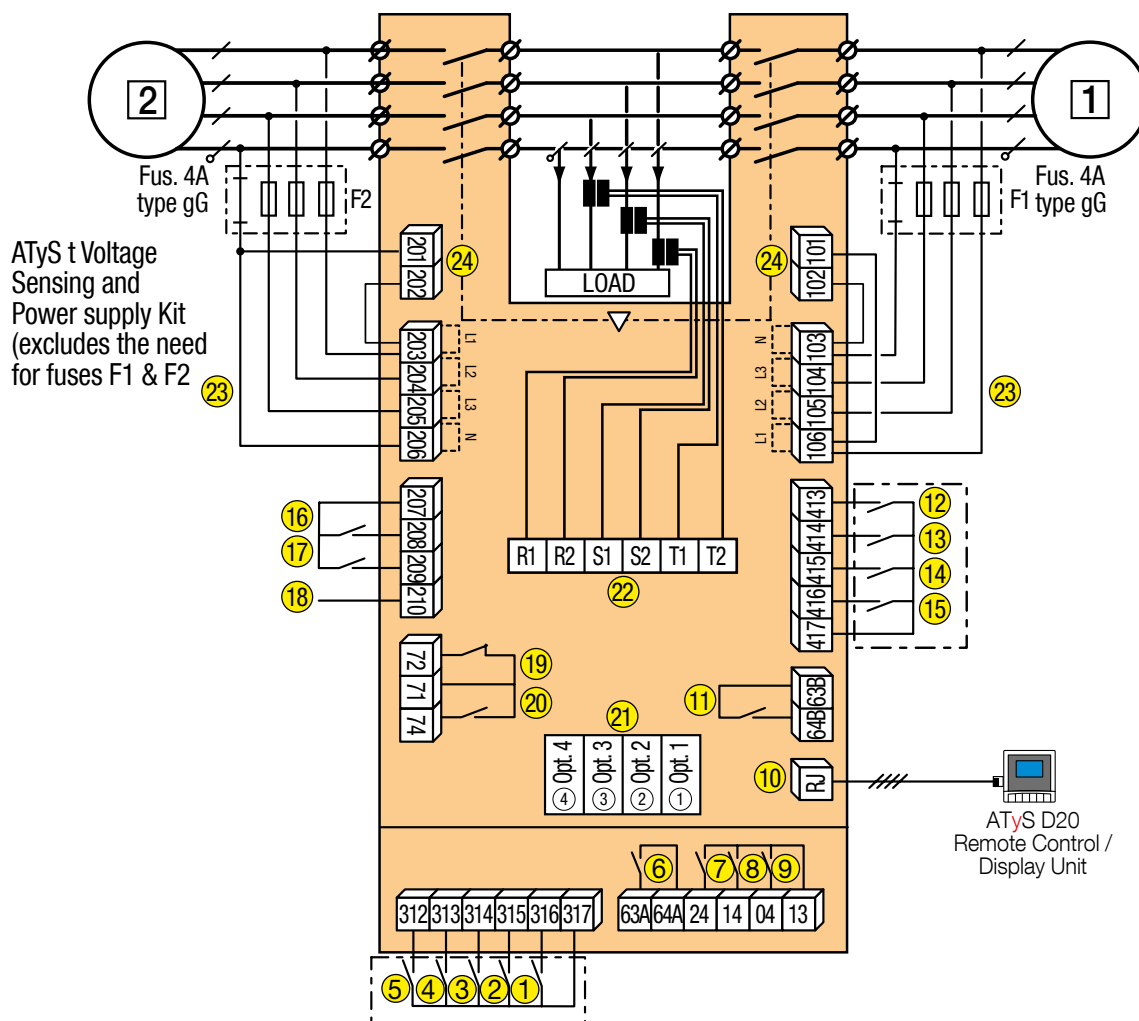

- 1 preferred source 2 alternate source
 1. Position 0 order
 2. Position 1 order
 3. Position 2 order
 4. Zero position priority order
 5. Remote Control Enable (Priority over Auto)
 6. Product Available output (Motor)
 7. Position II aux contact
 8. Position I aux contact

9. Position 0 aux contact
 10. O/P to ATyS D20 remote unit
 11. Programmable Output Contact.
 By default set to ATS Product Available -
 Normally Open
 12-15. Programmable Inputs 1-4
 16-17. Programmable Inputs 5-6
 18. Aux. Supply (207/210) to be used with ATyS
 optional I/O modules

19. Signal to Start / Stop the Genset NC with S1
 unavailable (71/72)
 20. Signal to Start / Stop the Genset NO with S1
 unavailable (71/74)
 21. Option Module Slots 1 to 4
 22. Current Transformer incoming cable
 connections
 23. Voltage sensing inputs
 24. Power supply Inputs



CAUTION


Verify that the Auxiliary power supply feeding terminals 101 and 102 / (201 and 202) are within the limits of 208VAC -> 277VAC $\pm 20\%$




DANGER

Do not handle any control or power cables connected to the ATyS when voltage may be present.

7.2.2.1. Motorisation module wiring

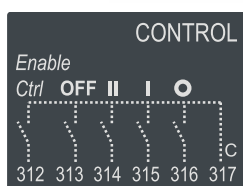


Control Enable:	312	Prod Avail Common	63A
Override to OFF:	313	Prod Avail O/P:	64A
Sw to Pos II I/P:	314	Pos II Aux Contact:	24
Sw to Pos I I/P:	315	Pos I Aux Contact:	14
Sw to Pos 0 I/P:	316	Pos 0 Aux Contact:	04
Common:	317	Common:	13

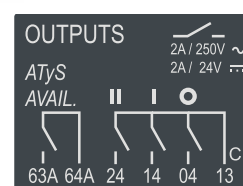[illegible]

7.2.2.3. ATyS p (Optional Module) Input / Output Wiring Connections

The ATyS p can accept a total of 4 plug in I/O modules. (Attn: If using communication modules the total slots available for extension I/O modules may be reduced to a maximum of 3 with MODBUS RTU and 2 with the Ethernet module installed).

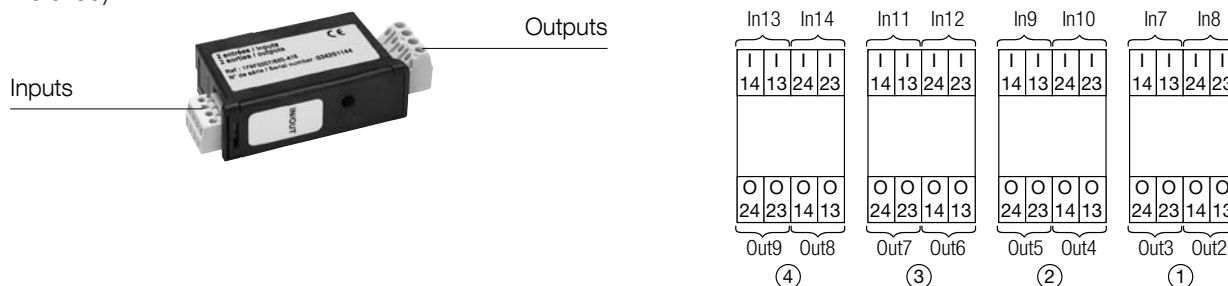

7.2.2.4. Terminal denomination, description and characteristics.

Denomination	Terminal	Description	Characteristics	Recommended Cable Section
Motorisation Module Output Contacts	04	Aux Contact Position 0 - Normally Open Contact	Dry Contacts 5A AC1 / 250V	1,5 – 2,5mm
	13	Common for Aux Contacts positions I - 0 - II		
	14	Aux Contact position I: Normally Open Contact		
	24	Aux Contact position II: Normally Open Contact		
	63A 64A	Motorisation module available output. Closed when the ATyS p is in Auto mode and motorisation is operational. (No Fault powered and ready to changeover)		
ATS Output Contact	63B 64B	Programmable output dry contacts. (By default set as POP à ATS control module available output, closed when the ATyS p is in Auto mode and ATS is operational. (No Fault, powered and ready for a changeover sequence)	Dry Contacts 5A AC1 / 250V	1,5 – 2,5mm
Genset Start/ Stop Signal	71 72 74	Signal to Start / Stop the Genset: Common for 72 & 74 Signal to Start / Stop the Genset: NC contact. (71/72) Signal to Start / Stop the Genset: NO contact. (71/74)	Dry Contacts 5A AC1 / 250V	1,5 – 2,5mm
Additional Aux Contact <i>Included with 2000A to 3200A</i> <i>Optional for 800A to 1600A</i>	81 82 84 91 92 94	Common for Aux Contacts positions I Aux Contact position I: Normally Closed Contact Aux Contact position I: Normally Open Contact Common for Aux Contacts positions II Aux Contact position II: Normally Closed Contact Aux Contact position II: Normally Open Contact	Dry Contacts 5A AC1 / 250V	1,5 – 2,5mm
ATS Power supply Input I	101 102	Power supply I – L Power supply I – N	208 - 277VAC ± 20% : 50/60Hz	1,5 – 2,5mm
ATS Voltage Sensing Input Source Supply I	103 - N 104 - L3 105 - L2 106 - L1	S I - Neutral voltage sensing input S I – Phase 3 voltage sensing input S I - Phase 2 voltage sensing input S I - Phase 1 voltage sensing input	600 VAC (ph-ph) max 332VAC (ph-n) max	1,5 – 2,5mm
ATS Power supply Input II	201 202	Power supply II– L Power supply II – N	208 - 277VAC ± 20% : 50/60Hz	1,5 – 2,5mm
ATS Voltage Sensing Input Source Supply II	203 - L1 204 - L2 205 - L3 206 - N	S II - Phase 1 voltage sensing input S II - Phase 2 voltage sensing input S II – Phase 3 voltage sensing input S II - Neutral voltage sensing input	600 VAC (ph-ph) max 332VAC (ph-n) max	1,5 – 2,5mm

Denomination	Terminal	Description	Characteristics	Recommended Cable Section
ATS Module Programmable Inputs	207 -	Common control terminal for inputs 5 & 6, 208 – 209 and negative for optional module extension I/O supply	Attn: To be used with dry contacts fed from 207 ONLY.	1,5 – 2,5mm
	208	Programmable Input number 5		
	209	Programmable Input number 6		
	210 +	+ dc Power supply for optional module extension I/O supply	To Ext I/O Only	
Motorisation Module Control Inputs	312	Remote Control Mode Enable when closed with 317	Attn: Do not connect to any Power supply Max cable length 100m	1,5 – 2,5mm
	313	Position 0 order if closed with 317. (Priority order input forcing the product to remote control mode and 0 position)		
	314	Position II order if closed with 317		
	315	Position I order if closed with 317		
	316	Position 0 order if closed with 317		
	317	Common control terminal for 312 - 316 ATyS (Specific Voltage Supply)		
ATS Module Programmable Inputs	413	Programmable Input number 1	Do not connect to any power supply. Attn: To be used with dry contacts fed from 417 ONLY.	1,5 – 2,5mm
	414	Programmable Input number 2		
	415	Programmable Input number 3		
	416	Programmable Input number 4		
	417	Common supply for programmable inputs 1 to 4 (413 - 416)		
Remote Interface	RJ	Output to ATyS D20 remote control & display module	Up to 3m	RJ 45
I/O Extension Modules 2xInput 2xOutput (Optional)	I 13+	Programmable Input	To be powered from terminals 207 – 210 10 – 30Vdc	1,5 – 2,5mm
	I 14 -			
	I 23 +	Programmable Input		
	I 24 -			
	O 13	Programmable Output	Dry Contacts 5A AC1 / 250V	1,5 – 2,5mm
	O 14			
	O 23	Programmable Output		
	O 24			
MODBUS Module (Optional)	0	RS 485 MODBUS Communication module terminals		
	-			
	+			
Current transformers	R1	Current Transformer:- I1	CT Input 5A or 1A	1,5mm²
	R2			
	S1	Current Transformer:- I2		
	S2			
	T1	Current Transformer:- I3		
	T2			



**CAUTION**

Do not connect terminals 312 to 317, 413 to 417 or 207 to 209 to any power supply. These order inputs are powered through terminal 207 (317 or 417 respectively) and external dry contacts ONLY.


7.3. Voltage sensing and power supply kit

The ATyS p voltage sensing kit is available as an accessory and is designed to tap directly of the power section on Switch I and Switch II terminals without the need to add protection fuses. The sensing kit is designed with optimised cable lengths and utilises silicon conductors held safely in an isolated mechanical support. Further more and to further reduce any risk of short circuit the kit includes a conductor support and a second insulation coating for the leads.

Frame B4 - B5 - 250A - 630A

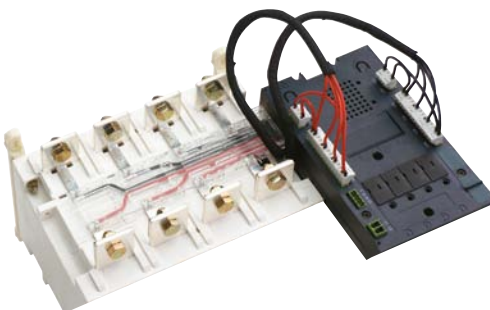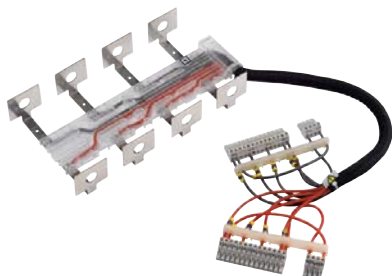

Frame B6 - B8 - 800A - 3200A

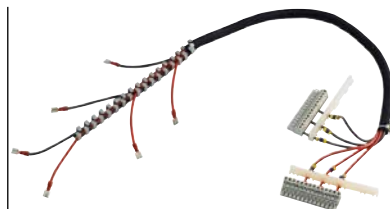

CAUTION

Ensure to mount the kit onto the product before connecting the power cables.

Be careful not to damage the contacts during kit mounting and during power cables connections (Tighten the cables carefully).


7.3.1. Standard configuration

The sensing and power supply kit is delivered from the factory with the following configuration possibilities as standard:

- 3 phases network 4 wires or 3 wires
- Top or bottom cables entry
- Neutral conductor on the left or right (4 wire)
- Source supply I connected to switch I.
- Source supply II connected to switch II

In order to auto detect the position of the neutral conductor the power section should be wired as follows:


- For neutral on the right: L1; L2; L3; N
- For neutral on the left: N; L3; L2; L1

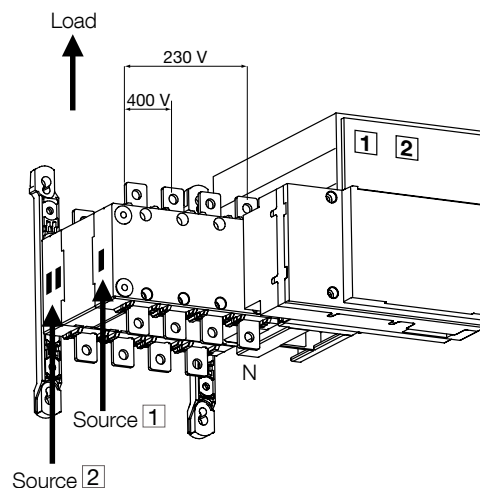


CAUTION

Pay attention when wiring the power cables (Respect to the sensing kit legend)
3 wire kits (those without a neutral) do not include for the power supply to terminals.
(101-102 and 201 – 202)
Ensure that you have ordered the correct reference prior to installation.
(Refer to the accessory section for details).

7.3.2. Sensing and power supply kit installation (4 wire configuration)

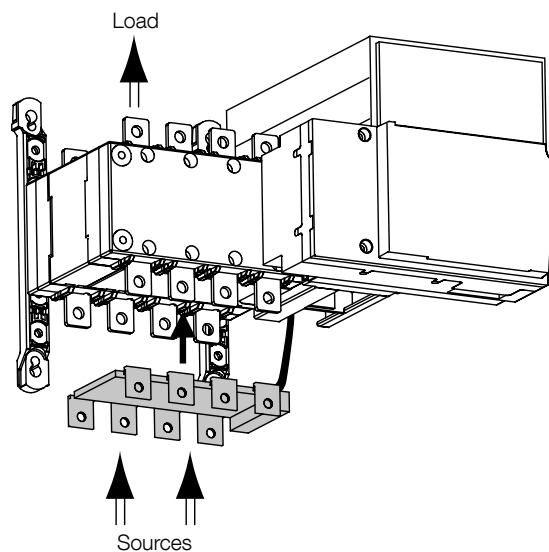

≤ 630A Bottom view

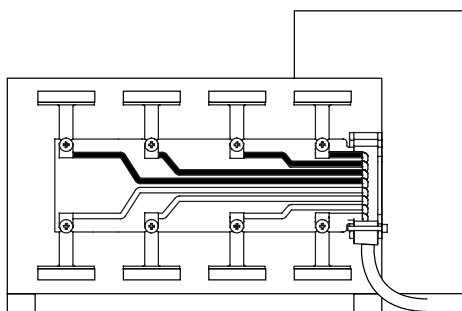


CAUTION

Ensure to mount the kit onto the product before connecting the power cables.

Be careful not to damage the contacts during kit mounting and during power cables connections (Tighten the cables carefully).

≥ 800A Bottom view

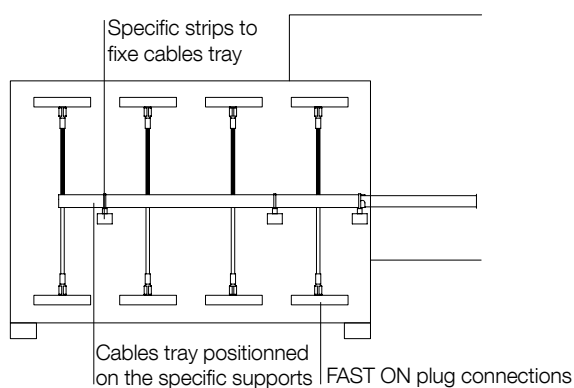

7.3.3. Sensing kit wiring diagram (standard)

Standard configuration:

Bottom incoming with Top Outgoing

- Black Wires -> Switch I
- Red Wires -> Switch II

Specific Configuration:

Top Incoming with Bottom Outgoing


- Black Wires -> Switch II
- Red Wires -> Switch I

Wiring numbers:

Wire numbering has been determined in accordance to the power switch terminals

Example:


Black and red wire numbers 1-2 are always connected to terminals 1 or 2 from switch I or II

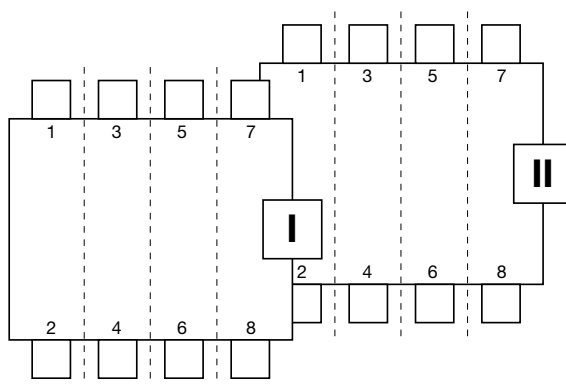

Note: There are specific kits available for systems with neutral on the left and neutral on the right. Refer to the accessories section for ordering and reference details.

≤ 630A Bottom view

≥ 800A Bottom view

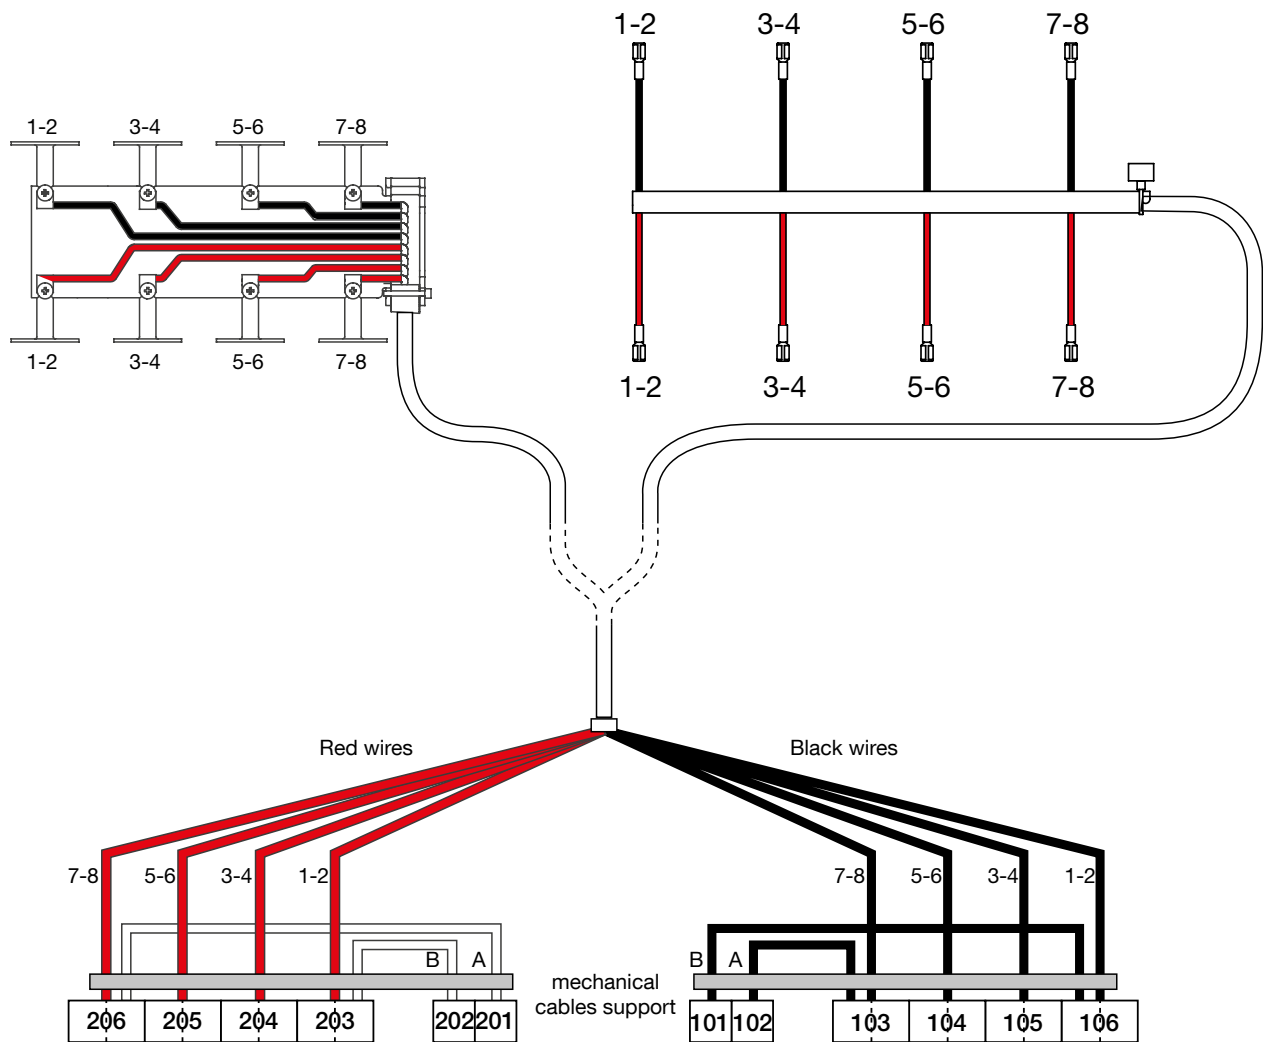

7.3.4. Sensing kit wiring diagram (specific)

The kit can be adapted to other configurations however may require certain connection changes.

STEP 1: Network	230 / 400 / 480 VAC Networks	No Action
	127 / 230 / 277 VAC Networks	Change A&B wire positions
STEP 2: Supply Cable Entry	Bottom Entry	Position the kit on the Bottom
	Top Entry	Position the kit on Top
STEP 3: Priority Supply wired to Switch number (I) and it's associated connector co-ordination.	Priority Supply connected to Switch I	Plug the connectors in accordance to the controller numbering.

Refer to following paragraphs for steps description

(1) Not required in case of pre-set neutral on the left kit from factory.

> STEP 1: Network

Power inputs (terminals 101-102 & 201-202) are 220/240/277 VAC (208 - 277VAC) $\pm$ 20%. It is necessary to adapt the power input cable connections according to the network configuration. (Power supply to be taken between phase to phase or between phase and neutral).




CAUTION

Verify that the power supply between terminals 101 – 102 and 201 – 202 (nominal auxiliary voltage supply) is within 208-277VAC $\pm$ 20%.


• Standard kit:

Network 380/415 VAC $\pm$ 20% with neutral conductor (no kit modification required):

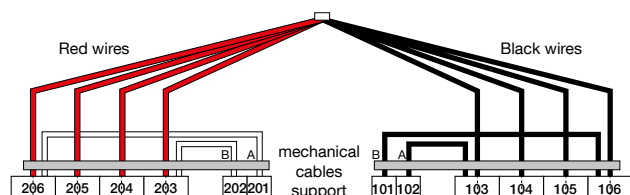

• Kit Modification:


For network 220/240 VAC $\pm$ 20%, power supply cables A-B to connect between phases

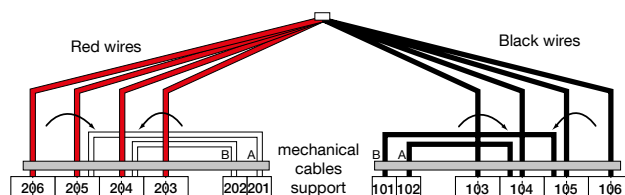

> STEP 2: Sources (cables) entry


The standard kit is delivered from factory for sources bottom entry (bridging bars on the top).

• Bottom sources (cable) entry

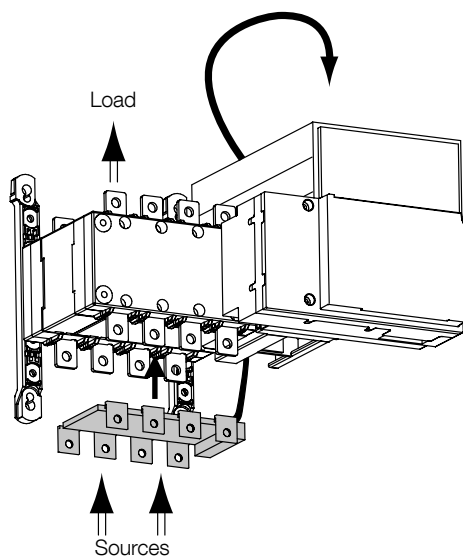

- Black wires on switch I
- Red wires on switch II

• Top sources (cable) entry

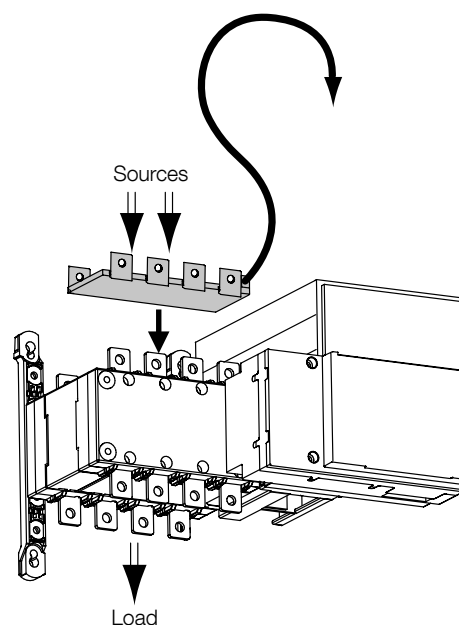

- Black wires on switch II
- Red wires on switch I






CAUTION



Verify kit orientation before mounting the kit.
Kit output cables always on the right hand side (control module side).

> STEP 3: Supply source wiring and terminal connectors

- Standard configuration: source 1 on switch I

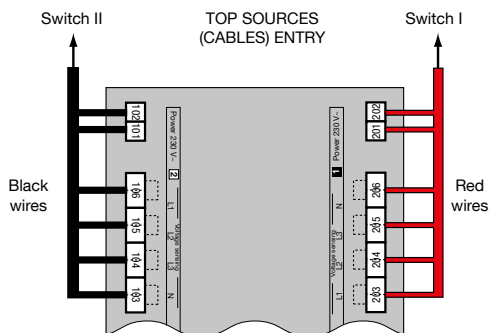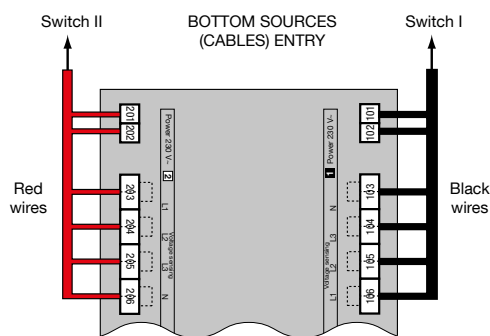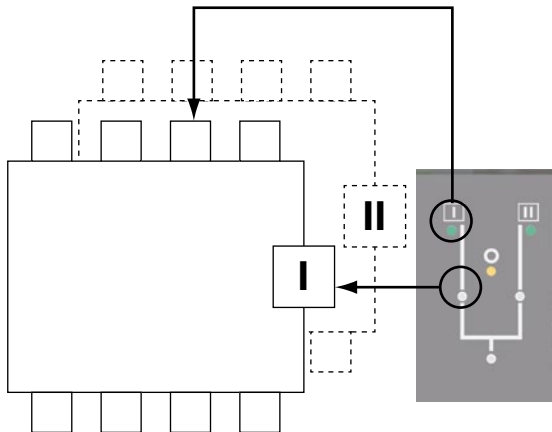

- Source 1 on switch II

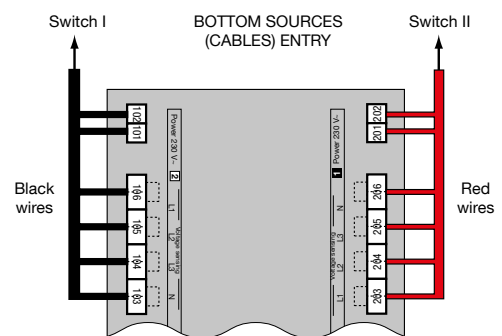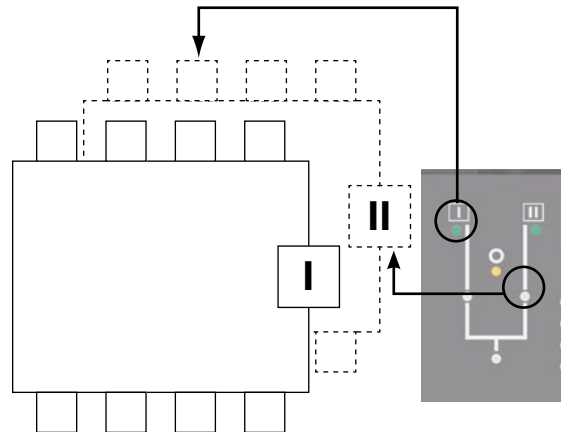


8. OPERATING MODES

The ATyS p includes 3 safe and distinct operating modes through a selector switch located on the front of the product. As standard the ATyS p is delivered with a selector switch however a key lock type selector switch is available on option. (To be specified at order by the addition of “-K” at the end of the standard reference).

The modes of operation are as follows:

- Auto Mode: “Auto / Remotely operated transfer switching”
- Manual Mode: “Local emergency manual operation”
- Locked Mode: “Secure locked padlocking facility”

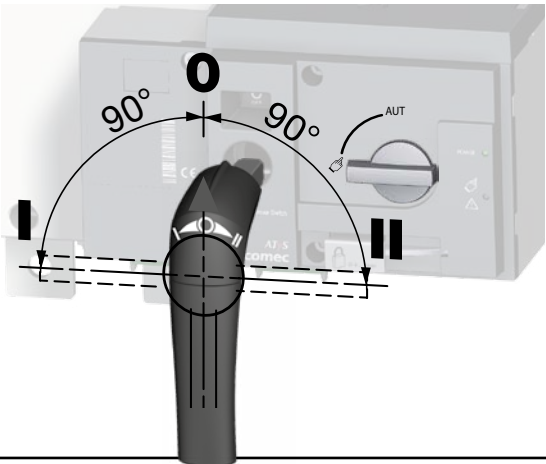AUT MODE		AUT  	AUTO MODE: • Activates the remote control inputs and the ATS controller automation. • Inhibits the padlocking facility • Inhibits the insertion of the manual operation handle when in AUT Mode AUTO Mode position is inhibited when padlocked or when the handle for manual operation is inserted into the ATyS p.
 MODE		AUT  	MANUAL MODE: (Not Padlocked) • Inhibits the control inputs. • Allows to insert the handle for emergency manual operation. • Allows padlocking in O Position. <i>(With the handle for manual operation removed)</i> Turning the selector switch to  from AUT and back to AUT resets a fault state.
  MODE		AUT  	MANUAL MODE: (Padlocked) • Inhibits the control inputs. • Inhibits insertion of the emergency handle. • Allows padlocking when in O Position.   POS 0 Padlocking in position I - O and II is possible when the optional function is included in the ATyS p. (Refer to product catalogue)



WARNING

Depending on the state of the ATyS p the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.


8.1. Manual operation

8.1.1. Emergency manual operation

The ATyS p can be manually operated as a “Manual Transfer Switch Equipment – MTSE” whilst retaining the electrical characteristics and performance of the power switching function. This function is usually used in case of emergencies or during maintenance.

To operate the ATyS p manually ensure that no live parts are accessible, turn the front selector switch into the manual position (see page 20) and insert the handle (see page 20) into the emergency handle shaft location hole provided (see 5.2. Product identification, page 21).

Turn the handle 90° clockwise or anti-clockwise (depending on the position to be reached) for each consecutive change in position. I -> O -> II -> O -> I.

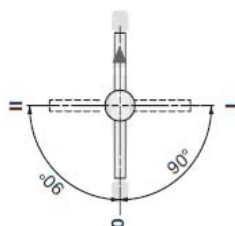

CAUTION

Ensure to verify the product position and direction of rotation before effecting manual operation.

Ensure to remove the handle from the product before changing the selector switch back to AUT position.

8.1.2. Padlocking

The ATyS p can be padlocked in the O position as standard whilst padlocking in positions I, O or II is available as a factory fitted option.

To padlock the ATyS p first ensure that the ATyS p mode selector switch is on Manual then ensure that the emergency manual operation handle is not inserted into the location hole. (Remove if inserted).

Pull the padlocking mechanism outwards to reveal the slot for inserting up to 3x dia. 4 - 8mm padlocks.

Padlock the device with approved quality padlocks of minimum diameter 4mm and maximum diameter of 8mm. A maximum of 3x 8mm padlocks may be padlocked onto the ATyS p to padlocking mechanism.



CAUTION

As standard, padlocking is only made possible in the “O position”, when in manual mode and with the emergency handle not inserted.

8.2. Electrical operation

8.2.1. Dual power supply

The ATyS p includes a dual power supply and is to be powered between terminals 101 - 102 and 201 - 202 (2 different supplies - main & alternative) within the limits of: 2x 208 - 277VAC $\pm$ 20% / (166 - 332VAC) / 50/60Hz $\pm$ 10%.

Current Input: 100mA (Standby mode) / 15A max (Switching mode)

Surge Protection : Vin_sg: 4.8KV - 1.2/50 μ s according to IEC 61010-1

Terminal connectors: Minimum 1.5mm² / Maximum 2.5mm²



8.2.2. Voltage sensing inputs

The ATyS p includes dual single phase and three phase voltage sensing (terminals 103 - 106 and 203 - 206) designed to monitor 1Phase (L-N) supplies of up to 332VAC and 3 phase (L-L) of up to 575/600VAC.

The ATyS p is designed to handle single phase, three phase with neutral as well as three phase without neutral networks. Simply define the correct configuration of single or three phase during configuration through the keypad or using Easy Config software.

Sensing connections are usually tapped directly off the ATyS p power terminals using the ATyS sensing kit available as an accessory. Sensing kits are available with the neutral on the left or neutral on the right to match the network configuration where the ATyS will be operating. Refer to the ATyS accessory section for more details.

(Note: Reversal of the neutral position from left to right and vice versa may also be done through the ATyS p configuration settings).

Sensing values measured will have a direct influence on determining the availability of the main and the alternative supplies as well as the ATyS p automation.

The parameters monitored through sensing are the following:

- **Phase rotation / imbalance (3 phase networks)**

Phase imbalance in the ATyS p is relative to the nominal voltage configured in the product.

- **Frequency within set limits**

This will depend on the nominal frequency configured.

- **Loss of Neutral**

When used on three phase + neutral applications the loss of neutral will be detected for unbalanced loads with the load connected to the supply. Detection is done when the load is on.

- **Loss of the main or alternative supply.**

Loss of supply depends on the nominal voltage and frequency configured together with the hysteresis set in the product. The supply will be considered as failed after the failure timer FT has elapsed.

- **Return of main and / or alternative supply.**

Return of supply depends on the phase rotation, nominal voltage and frequency configured together with the hysteresis set. The supply will be considered as returned after the return timer RT on the ATS controller has elapsed.




8.2.3. Fixed inputs

8.2.3.1. Description

The ATyS p includes for 5 off fixed inputs through a 6 pin connector installed on the motorisation module. No additional power supply should be used on these contacts as the inputs MUST be used with the common supply taken from terminal 317.

At least one of the ATyS p aux power supplies (101 – 102 or 201 - 202) must be available to activate these inputs.

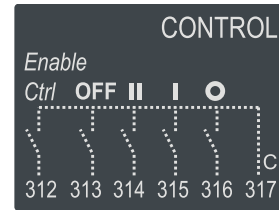

Pulse duration for activation of contact inputs: $\geq 60\text{ms}$.

- **Pin 312:** Remote Control Mode Enable when closed with 317.
This contact must be closed with 317 so as to activate all analogue inputs except for 313 that takes priority and is active immaterial of the state of input 312. Enabling remote control through 312 activates the remote control inputs whilst inhibiting the ATS module automation.
- **Pin 313:** Position 0 order if closed with 317 when in AUTO. **(Force the switch to the OFF Position)**
This is a **“Priority Order Input”** meaning that when closed with 317 it takes priority over all other electrical commands. The ATyS p will remain in 0 position as long as the contact 313 – 317 remains closed. Once the contact is open the ATyS p is ready to receive new orders. This contact order is independent of other inputs and is also enabled without 312 connected to 317. Impulse duration to activate and start switching to position O is a minimum of 60ms. The product state will be unavailable.
- **Pin 314:** Position II order if closed with 317.
This contact is active with the ATyS p in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position II is a minimum of 60ms.
- **Pin 315:** Position I order if closed with 317
This contact is active with the ATyS p in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position I is a minimum of 60ms.
- **Pin 316:** Position O order if closed with 317
This contact is active with the ATyS p in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position O is a minimum of 60ms. For contactor logic maintain contacts on between terminal 316 and 317.
- **Pin 317:** Common
Common supply for inputs 312 to 316

8.2.3.2. Remote control logic



Remote switching operation can be driven in AUT mode by external volt free contacts as described above using input contacts 312 to 317.

Depending on the wiring configuration there are two types of logic that may be applied to the ATyS p.

- Impulse logic or
- Contactor logic.

In remote control, the ATyS p inputs give priority to orders I and II over 0 therefore contactor logic can be implemented by simply bridging terminals 316 and 317.

(NOTE: 312 – 317 closed / Force ATyS to OFF Position, takes priority over all other orders no matter of the control logic used.)

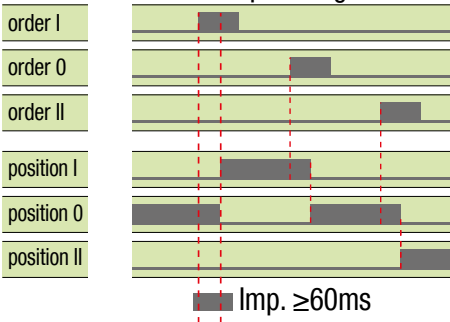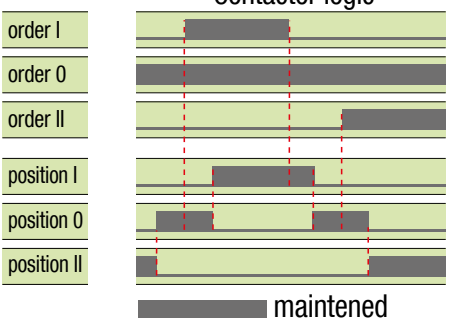Impulse logic: The ATyS p is driven to a stable position (I – O – II) after receiving an impulse order. • A switching command of at least 60 ms is necessary to initiate the switching operation. • Orders I and II have priority over order 0. Note: The logic diagrams exclude the transfer times.	Impulse logic  (Note : Excludes position switching delays)
Contactor Logic : The ATyS p is driven to a specific position (I or II) for as long as the order is maintained. • Order 0 is maintained. (Bridge 316 – 317) • Orders I and II have priority over order 0. • Orders I and II have equal priority. (1st order received is held until no longer maintained). • If order I or II disappears, the device returns to zero position. (With the power supply available).	Contactor logic  (Note : Excludes position switching delays)

8.2.3.3. Technical data

Product Unavailable + Warning LED Condition:	Inhibition
Product in manual mode	Yes
Motor not detected (Autotest)	No
Control voltage out of range	Yes
Operating factor fault active (N° of operations / min)	Yes
Powerfail active	Yes
Customer input autotest failed	No
Invalid product customisation	No
Abnormal switching when not in manual mode	Yes
Requested position not reached	Yes
Locked mode active when not in manual mode	Yes
External Fault -> User input	No
Unexpected current flowing through the motor when idle	Yes

Sampling rate for the above is every 10 ms.

Exception: motor detection sampling rate is every 5 min.

8.2.4. Programmable inputs

8.2.4.1. Description

Configuration of all programmable inputs is recommended to be done using the EasyConfig Software available for download on the Socomec Website. Communication with the ATyS p is possible either through the Modbus or Ethernet modules that are available as an option. Alternatively the parameters may also be configured directly through the keypad on the front of the ATS controller.

- **Pin 413:** Input In1, Programmable Input 1
- **Pin 414:** Input In2, Programmable Input 2
- **Pin 415:** Input In3, Programmable Input 3
- **Pin 416:** Input In4, Programmable Input 4
- **Pin 417:** Common
Common supply for programmable inputs 1 – 4 on terminals 413 to 416.
- **Pin 207:** Common
Common supply for programmable inputs 5 – 6 on terminals 208 to 209.
- **Pin 208:** Input In5, Programmable Input 5
- **Pin 209:** Input In6, Programmable Input 6

Internal Input	
I/P: In1	None
I/P: In2	None
I/P: In3	AL1 - External Alarm 1 S1 without 0 return
I/P: In4	AL2 - External Alarm 2 S2 without 0 return
I/P: In5	EFL - External Order Off Load
I/P: In6	EOL - External Order On Load
	FT1 - External Fault 1 S1 with 0 return
	FT2 - External Fault 2 S2 with 0 return
	INH - Inhibition of the automation
	LSI - Load Shedding time delay bypass
	MSR - Hold on Source 2 (Priority to TOL/EOL)
	OA1 - Define S1 as Available
	OA2 - Define S2 as Available
	RST - Fault Reset
	RTC - Remote Transfer to Priority Source
	SS1 - S1 Stabilisation Time Delay Bypass
	SS2 - S2 Stabilisation Time Delay Bypass
	TFL - Test Off Load
	TOL - Test On Load
	TR1 - Validate Exerciser Time Range 1
	TR2 - Validate Exerciser Time Range 2
	TR3 - Validate Exerciser Time Range 3
	TR4 - Validate Exerciser Time Range 4

List of available programmable inputs

8.2.4.2. Technical data


	Motorisation Module	ATS Control Module
Input Qty:	5	6
Direct Voltage Vin :	300 VAC (On any input with respect to ground)	11 VDC (On any input with respect to ground)
Direct Current Iin:	0.35 to 0.5mA	1 to 2.5mA
Line resistance:	1kΩ	1kΩ
Line length :	100m (Min. wire 1.5mm ² #16AWG)	100m (Min. wire 1.5mm ² #16AWG)
Pulse duration:	60ms	60ms
Power per Input:	0.06VA	0.03VA
Surge protection Vin_sg:	4.8kV (1.2/50μs surge)	2.4kV (1.2/50μs surge)
ESD withstand voltage (Contact/air)	2/4kV	2/4kV
Insulation (Common mode)	4.8kVAC (Between I/P and all common parts)	4.8kVAC (Between I/P and all common parts)
Terminal connector:	1.5mm ² minimum / 2.5mm ² max	1.5mm ² minimum / 2.5mm ² max

8.2.5. Fixed outputs - Dry contacts

8.2.5.1. Description

As standard, the ATyS p is equipped with four fixed outputs located on the motorisation module.

(Dry contacts to be powered by the user).

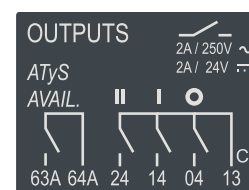

8.2.5.2. Position auxiliary contact

The ATyS p is equipped with integrated position (I – O – II) auxiliary contact outputs through 3 off micro switches.

Pins 13, 04, 14, 24

(Normally Open contacts with pin 13 as common)

8.2.5.3. ATyS p Product available output (motorisation)

Pin 63A – 64A

(Normally Open contact that is held closed when the motorisation is available).

This contact gives constant feedback about the product's availability and it's capacity to transfer from the main supply to the alternative. The feedback given is relative to the motorisation module excluding the ATS controller that may be monitored separately.

The ATyS p performs a self diagnostics test on the motorisation module at startup, when put from Manual -> Auto and then every 5 minutes. This test ensures that the ATyS p is operational in terms of control inputs. Should one of the tests fail, a second test is performed to reconfirm the error state. Should the ATyS p motorisation module become unavailable, contact 63A – 64A are opened, the power/ready LED's are switched off, and the fault LED is activated. The fault LED will remain active for as long as sufficient power is available and the fault condition is not reset. The fault is reset when the product is switched from AUT -> Manual -> Auto mode.

ATyS p (Motorisation) Product Available / Unavailable Watchdog relay will open for any of the following reasons below: For added security, "Product Availability" is informative and does not necessarily inhibit motor operation.

Product Unavailable + Warning LED Condition:	Inhibition
Product in manual mode	Yes
Motor not detected (Autotest)	No
Control voltage out of range	Yes
Operating factor fault active (N° of operations / min)	Yes
Powerfail active	Yes
Customer input autotest failed	No
Invalid product customisation	No
Abnormal switching when not in manual mode	Yes
Requested position not reached	Yes
Locked mode active when not in manual mode	Yes
External Fault -> User input	No
Unexpected current flowing through the motor when idle	Yes

Sampling rate for the above is every 10 ms.

8.2.5.4. Technical data

Auxiliary Contact Quantity	4
Configuration	NO
Mechanical Endurance	100k cycles
Response Time	5 – 10 ms
Startup duration	200ms
Rated Voltage / Switching Voltage	250VAC
Rated Current	5A
Surge protection Vin_sg:	4.8kV (1.2/50µs surge)
ESD withstand voltage (Contact/air):	2/4kV
Dielectric Strength contact/parts:	4.8kVAC (Reinforced Insulation)
Insulation:	4.8KVAC
Output Terminal:	1.5mm ² minimum / 2.5mm ² maximum

8.2.6. Programmable dry contact output

Pin 63B – 64B: Output Out1

Internal Output			
O/P: Out1	POP - Product Available (No Fault) ▼	Normally Open ▼	63B/64B

- Output "Out1", Programmable Output 1 is set by default as a Product Available Output for the ATS controller module.

To achieve a total product feedback connect this contact in series with 63A – 64A. (Normally Open contact that is held closed when the ATS is available). Being programmable this output may be changed to any other normally open or normally closed output as available in the product. List of available programmable outputs listed below.




**ATS Module
Output Contact
(Programmable)**



Internal Output	
O/P: Out1	POP - Product Available (No Fault) ▼
	S1A - Supply Source 1 Available
	S2A - Supply Source 2 Available
	SCA - Source 1 and/or Source 2 Available
	CA1 - Transfer Switch in Position I
	CA2 - Transfer Switch in Position II
	CA0 - Transfer Switch in Position 0
	L01 - Source 1 Available with Switch in Position 1
	L02 - Source 2 Available with Switch in Position 2
	LSC - Pre-Transfer Signal (Load Shedding 1)
	FLT - Internal or External Fault Condition
	POP - Product Available (No Fault)
	C01 - Copy of Input number 1: Terminal 413
	C02 - Copy of Input number 2: Terminal 414
	C03 - Copy of Input number 3: Terminal 415
	C04 - Copy of Input number 4: Terminal 416
	C05 - Copy of Input number 5: Terminal 208
	C06 - Copy of Input number 6: Terminal 209
	C07 - Copy of Input number 7: Optional Slot 1
	C08 - Copy of Input number 8: Optional Slot 1
	C09 - Copy of Input number 9: Optional Slot 2
	C10 - Copy of Input number 10: Optional Slot 2
	C11 - Copy of Input number 11: Optional Slot 3
	C12 - Copy of Input number 12: Optional Slot 3
	C13 - Copy of Input number 13: Optional Slot 4
	C14 - Copy of Input number 14: Optional Slot 4
	LCK - Product Locked (Padlocked)
	PTS - Power Threshold Exceeded (Load Shedding 2)
	COM - Set output state through MODBUS
	EES - Battery charge signal

The ATyS p may accept a total of 4 additional Input / Output modules offering an additional 8 programmable inputs and 8 programmable outputs.

Refer to accessory section for details:

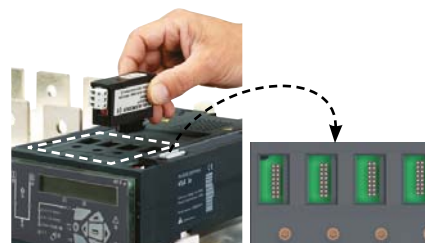

Note:


For pulsed outputs and 4-20mA output refer to specific optional module instruction manuel on www.socomec.com.

9. PROGRAMMING

The ATyS p is to be programmed powered up and after wiring verification tests. This may either be done through the front of the ATS Controller using the keypad or with the user-friendly Easy Config software.

For convenience, we recommend to use the Easy Config software.
(Downloadable free from www.socomec.com)

Communication between the software and the ATyS p may be done through the Ethernet/Modbus TCP or Modbus RTU modules that are available as an option. (The Ethernet module includes a built in Web Server).

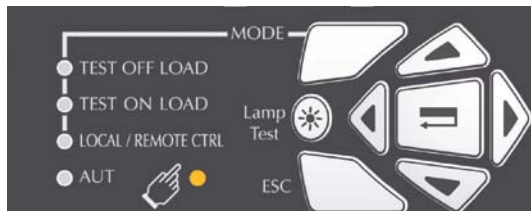

Configuration through the Keypad or Easy Config Configuration Software

9.1. Programming with Easy Config software

The ATyS p is recommended to be configured using the latest version of SOCOMEC Easy Config software. Easy Config is a software developed by SOCOMEC to enable the easy configuration of most of Socomec products. (DIRIS, COUNTIS and ATyS p).

Communication between the software tools and a powered up product may be done using a standard PC together with the ATyS p equipped with an optional Ethernet or Modbus module.




The configuration may be carried out connected to the product as well as off line. When configuring the product offline input the setting values as per requirements in the Easy Config software and save the file.

You may download the complete file into the ATyS p at your convenience either before delivering the product to site or when the product is ready for commissioning. The same settings may easily be downloaded to multiple products that have the same configuration requirements.

9.1.1. Download and install Easy Config Software

Download the latest Easy Config software from the Product Download section of the SOCOMEC Website: www.socomec.com (Easy Config is one software that includes for Diris, Countis & ATyS p products.)

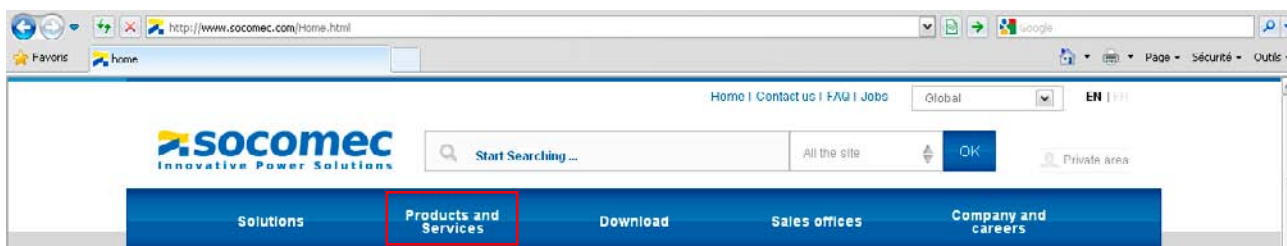

- Run the program on your computer and follow the instructions so as to install the Software. Once installed, open the software by clicking on: Start -> All Programs -> Socomec -> EasyConfig. The software is best viewed with a resolution of 1280 x 1024




ENGLISH

- Select your language from the drop box on the top, right hand side of the screen.



- A user with rights may change profile and access advanced settings by clicking on “Change Profile” This allows to select a profile from a User / Administrator / Super User / Socomec. The SOCOMECE profile is only available for SOCOMECE internal use. Change of profile will require a password that may be set by the User

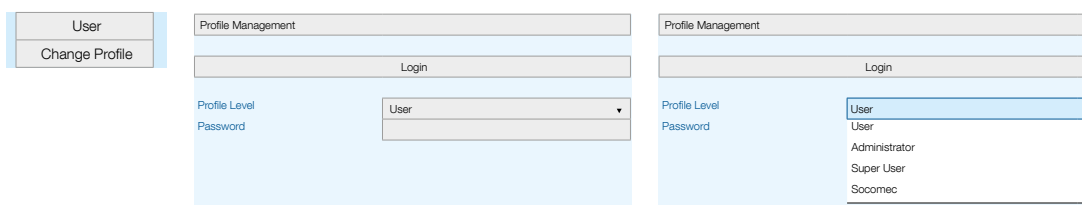


Profile	Functions that may be perform	Password by Default
User	1. User can add a device in the Easy Config Tool. 2. User can get the configuration from a device. 3. User can create a new configuration for the device.	No password is required for this profile
Administrator	1. All the function that a user can perform + 2. User can send configuration to the device. 3. User can delete a declared device. 4. User can update the device connection parameters.	Password by default : SocoAdm
Super User	1. All the function that Administrator can perform + 2. The User can change and save the passwords for the Administrator and the Super User.	Password by default : sOcOmec
Socomec	1. Not Used	Not Used

Refer to Annexe I, page 84 for details regarding Easy Config Programming.

9.2. Programming with the ATyS p keypad

ATyS p devices may also be programmed through the ATS controller keypad. This programming method is necessary for products not equipped with Ethernet or Modbus communication modules that facilitate programming through Easy Config software described above. The keypad is a useful interface and programming method most especially when changing a few parameters or simply interrogating the product.

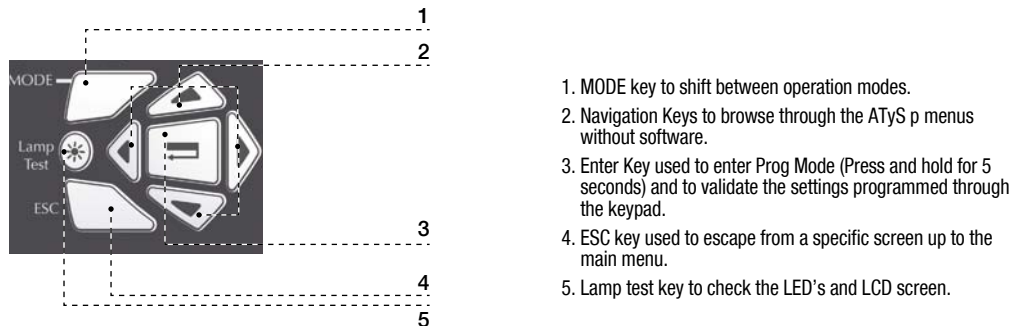

Programming access through the keypad is possible in Automatic or Manual mode, when the product is in a stable position (I, 0 or II) with at least one supply source available.

Programming is not accessible whilst any cycle sequence is running.

NOTE:

The ATyS p is delivered with default setting values based on most used customer application requirements. Should the user not need to fine tune all the parameters this will allow for a quick setup of the ATyS p. The minimum configuration parameters that must be programmed are the type of network and application together with the voltage and frequency nominal values.

Refer to Annexe II page 105 for details regarding Programming with the ATyS p Keypad.

10. The LCD Display

10.1. Presentation

Display mode is activated as soon as the device is switched on. It enables parameter visualisation whatever the functioning mode that is running. The switchover cycles take priority over any other display, and will show the time delay countdowns as soon as they are activated. After this time, or following a switchover cycle, the screen will return to source 1 (depending on the switch position) phase to phase voltage display (depending on the network type).



10.2. Display mode navigation and visualisation

1 Voltage	2 Current : Only if the right card is present	3 Power : Only if the right card is present	4 Energy : Only if the right card is present	5 Timers	6 Date/Time	7 Events
U 0 0 0 V (1) 1-2 1 2-3 3-1	I 0 0 0 A 1 1 2 3	P 0 0 0 kW (3) 1 1 2 3	EA+ TOT 0 kWh (3) 1 1 2 3	1FT 0 SEC	DAT 01.01.01	F00 OPFACTOR
U 0 0 0 V (1) 1 1 2 3	I NEUTRAL 0 A 1 1 2 3	P TOTAL 0 kW (3) 1 1 2 3	EA- TOT 0 kWh (3) 1 1 2 3	1RT 0 SEC	TIM 01.01.01	F03 NEUTRAL
F 0 Hz (1) 1 1 2 3	I 0 0 0 A 1 1 2 3	Q 0 0 0 kvar (3) 1 1 2 3	EQ+ TOT 0 kvarh (3) 1 1 2 3	2FT 0 SEC		F11 FLT 1
U 0 0 0 V (1) 1-2 2-3 3-1	I NEUTRAL 0 A 1 1 2 3	Q TOTAL 0 kvar (3) 1 1 2 3	EQ- TOT 0 kvarh (3) 1 1 2 3	2AT 0 SEC (2)		F21 FLT 2
U 0 0 0 V (1) 1 2 2 3		S 0 0 0 kVA (3) 1 1 2 3	ES TOT 0 kWh (3) 1 1 2 3	2CT 0 SEC		F12 ALR 1
F 0 Hz (1) 1 1 2 3		S TOTAL 0 kVA (3) 1 1 2 3	EA+ PAR 0 kWh (3) 1 1 2 3	ODT 0 SEC		F22 ALR 2
		PF 0 0 0 (3) 1 1 2 3	EA- PAR 0 kWh (3) 1 1 2 3	TOT 0 SEC		F13 ROT 1
		PF TOTAL 0 (3) 1 1 2 3	EQ+ PAR 0 kvarh (3) 1 1 2 3	TFT 0 SEC		F23 ROT 2
		P 0 0 0 kW (3) 1 2 2 3	EQ- PAR 0 kvarh (3) 1 1 2 3	E1T 0 SEC		F17 UNB 1
		P TOTAL 0 kW (3) 1 1 2 3	ES PAR 0 kWh (3) 1 1 2 3	E2T 0 SEC		F27 UNB 2
		Q 0 0 0 kvar (3) 1 2 2 3	EA+ COM 0 kWh (3) 1 1 2 3	E3T 0 SEC		F06 POS 0
		Q TOTAL 0 kvar (3) 1 1 2 3	EA- COM 0 kWh (3) 1 1 2 3	E5T 0 SEC		F16 POS 1
		S 0 0 0 kVA (3) 1 2 2 3	EQ+ COM 0 kvarh (3) 1 1 2 3	E6T 0 SEC		F26 POS 2
		S TOTAL 0 kVA (3) 1 1 2 3	EQ- COM 0 kvarh (3) 1 1 2 3	E7T 0 SEC		F08 MAIN FLT
		PF 0 0 0 (3) 1 2 2 3	ES COM 0 kWh (3) 1 1 2 3	T3T 0 SEC		F09 MOT FLT
		PF TOTAL 0 (3) 1 1 2 3	EA+ TOT 0 kWh (3) 1 1 2 3	2ST 0 SEC		F07 AUTOCONF
			EA- TOT 0 kWh (3) 1 1 2 3	LST 0 SEC		EV1 ID
			EQ+ TOT 0 kvarh (3) 1 1 2 3	EET 0 H		EV1 DAT 01.01.01
			EQ- TOT 0 kvarh (3) 1 1 2 3	EDT 0 SEC		EV1 TIM 00.00.00
			ES TOT 0 kWh (3) 1 1 2 3			EV2 ID
			EA+ PAR 0 kWh (3) 1 1 2 3			EV2 DAT 01.01.01
			EA- PAR 0 kWh (3) 1 1 2 3			EV2 TIM 00.00.00
			EQ+ PAR 0 kvarh (3) 1 1 2 3			EV3 ID
			EQ- PAR 0 kvarh (3) 1 1 2 3			EV3 DAT 01.01.01
			ES PAR 0 kWh (3) 1 1 2 3			EV3 TIM 00.00.00
			EA+ COM 0 kWh (3) 1 1 2 3			EV4 ID
			EA- COM 0 kWh (3) 1 1 2 3			EV4 DAT 01.01.01
			EQ+ COM 0 kvarh (3) 1 1 2 3			EV4 TIM 00.00.00
			EQ- COM 0 kvarh (3) 1 1 2 3			EV5 ID
			ES COM 0 kWh (3) 1 1 2 3			EV5 DAT 01.01.01
						EV5 TIM 00.00.00

Unbalanced % is not displayed

(1) Visibility depends of configured network type

(2) Should be named 2RT when main-main application

(3) Unit should be automatically adjusted

Powers are only displayed for current switch position, as powers for other source is always 0

Note : for events display code identification, refer to "Events display", page 74



CAUTION

Dynamic display of the time delays takes priority.
The alarms and fault status display also have priority.

10.3. IHM ATyS D10 / D20

Refer to ATyS D10 / D20 operating manual on www.socomec.com

11. Local / remote control (positions I – 0 – II)


Local control will allow the user to change position locally without the need for the emergency manual handle. This function is available in AUT mode only.

Description:

- Changeover of the switch positions: PS1, PS0, PS2.

Activation:

- either on the ATyS p front panel (via the Mode key).
- or via the ATyS D20 interface,
- or via the programmable input,
- or via communication. (Ethernet or MODBUS).

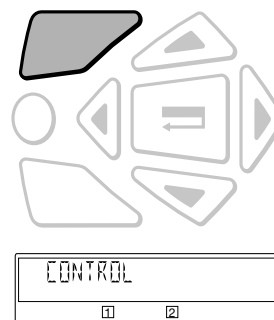

Steps:

- Select Local / Remote mode using the Mode key
- When Control is displayed press the validation key
- Enter the password when prompted with CODE (Default 0000)
- Press the validation key to validate the password and access the position menu
- To change from POS0 to POS1 to POS2 etc press the MODE key to select the desired position.
- YES and NO define the actual position that the switch will be in.

To change position: example

- POS2 NO (This states that the switch is not in position 2)
- To go to position 2 press the validation key with POS2 NO on the display
- Once position 2 has been reached the display will change to POS2 YES

Deactivation:

- either via the Escape key,
- or by switching the selector switch on the front of the ATyS p from AUT to Manual and back to AUT.

Note: Local / Remote Control takes priority over all other operating functions.

12. Automatic mode


Set the selector switch on the front of the ATyS p onto AUT.

Make sure that the product is in automatic mode with the AUT LED lit green.

Possible action when in AUT MODE

Once in automatic mode, it is possible to:

- Run an on load or off load test.
- Run a source 1 / source 2 loss sequence.
- Start a source 1 / source 2 restoration sequence.

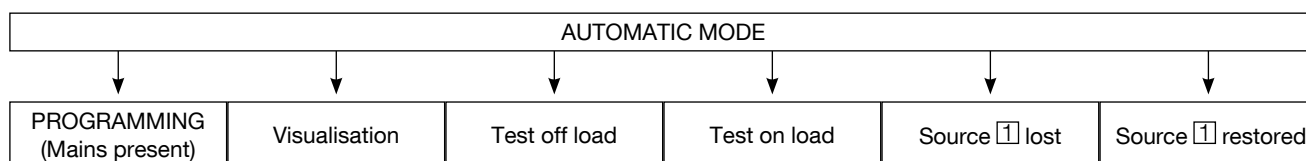


- Automatic mode returns active within 2 seconds after switching from manual to automatic mode.
- Source 1 and source 2 voltage and frequencies are checked to define a stable availability status.

12.2. Priority source loss sequence M-G

Stable position in M-G applications

Configuration:

- APP = M-G: Network - Generating set application

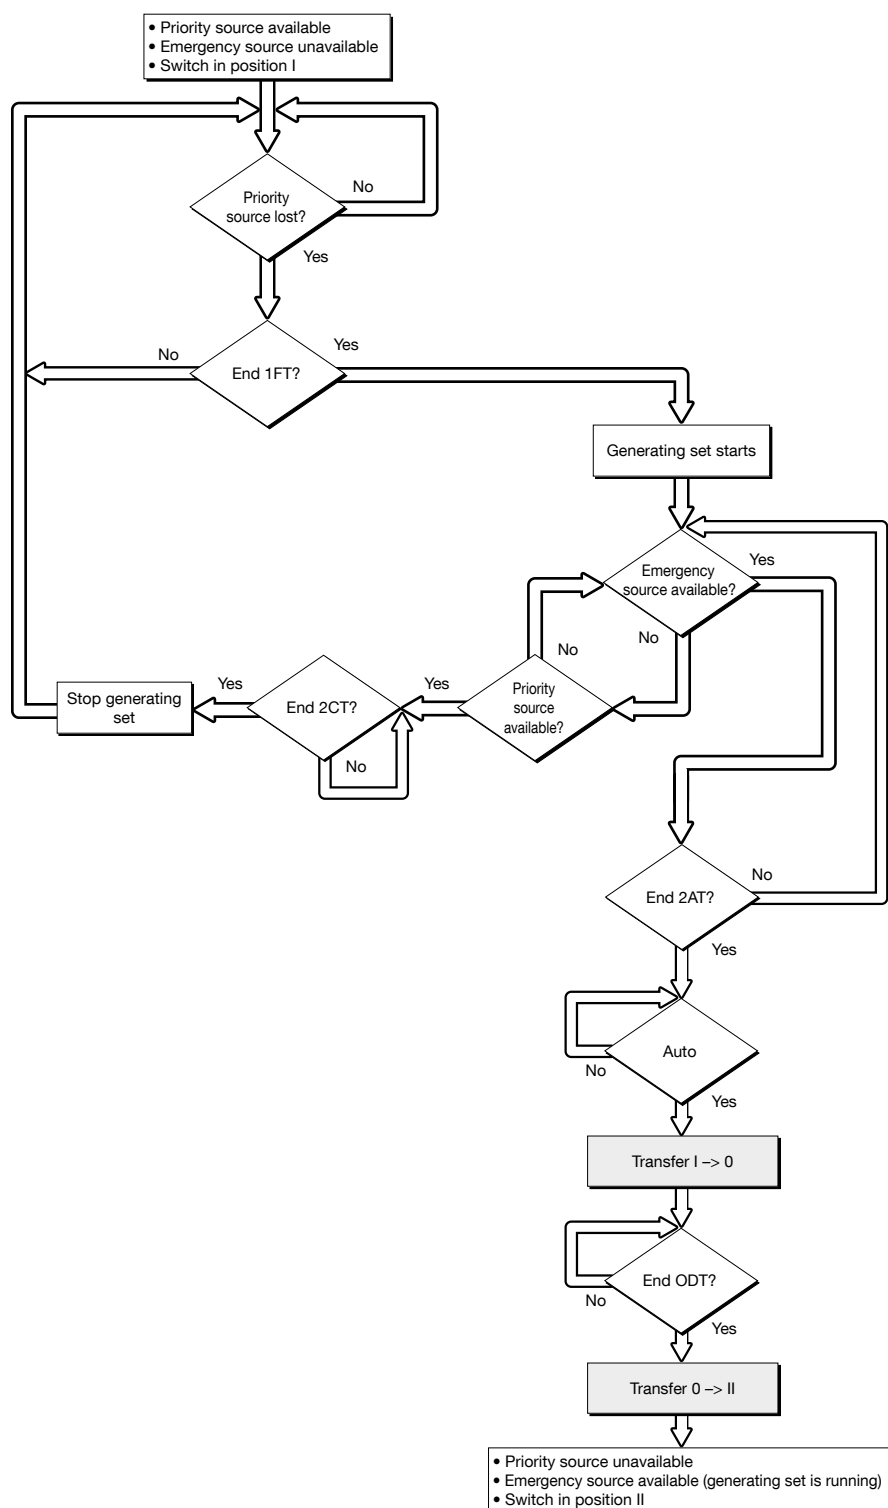


12.3. Priority source loss and restoration sequence M-M

Stable position in M-M applications

Configuration

- APP = M-M: Network - Network application

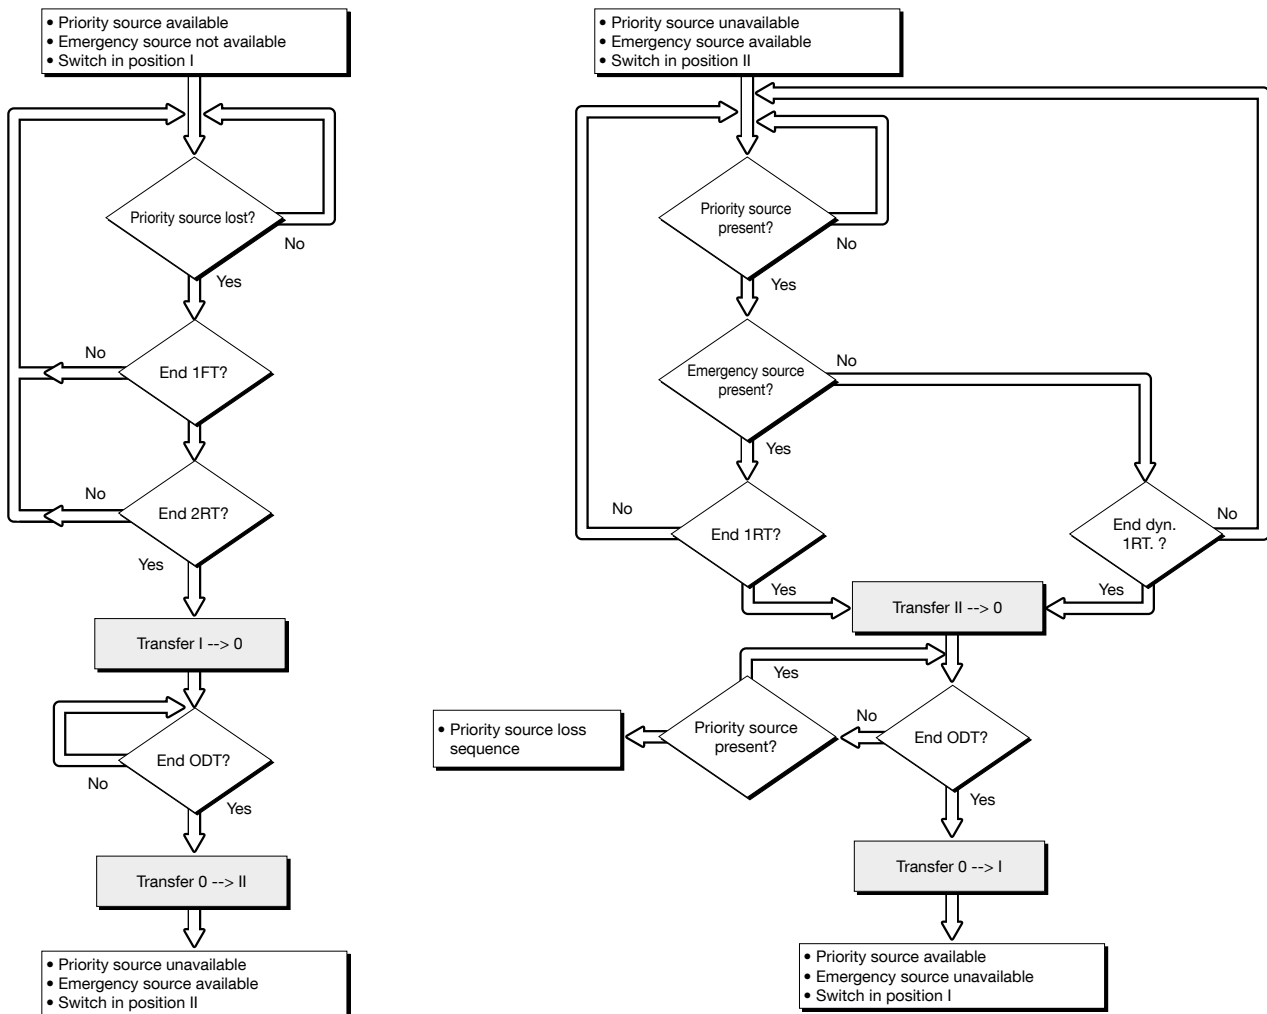

12.4. Priority source automatic restoration sequence

This sequence is started as soon as the system is in AUTO mode and in position II. Specific function Automatic retransfer inhibited: Once source 1 is restored, it may be preferable not to retransfer the load from source 2 to source 1 immediately. Once the retransfer from source 2 to source 1 is possible, the RETRANS function locks the retransfer, and the AUT LED flashes pending the operator's confirmation.


The VALIDATION key must be pressed or an input must be programmed on RTC to authorise the retransfer.

12.5. Priority source restoration sequence M-G

Stable position in M-G applications

Configuration


- APP = M-G: Network - Generating set application

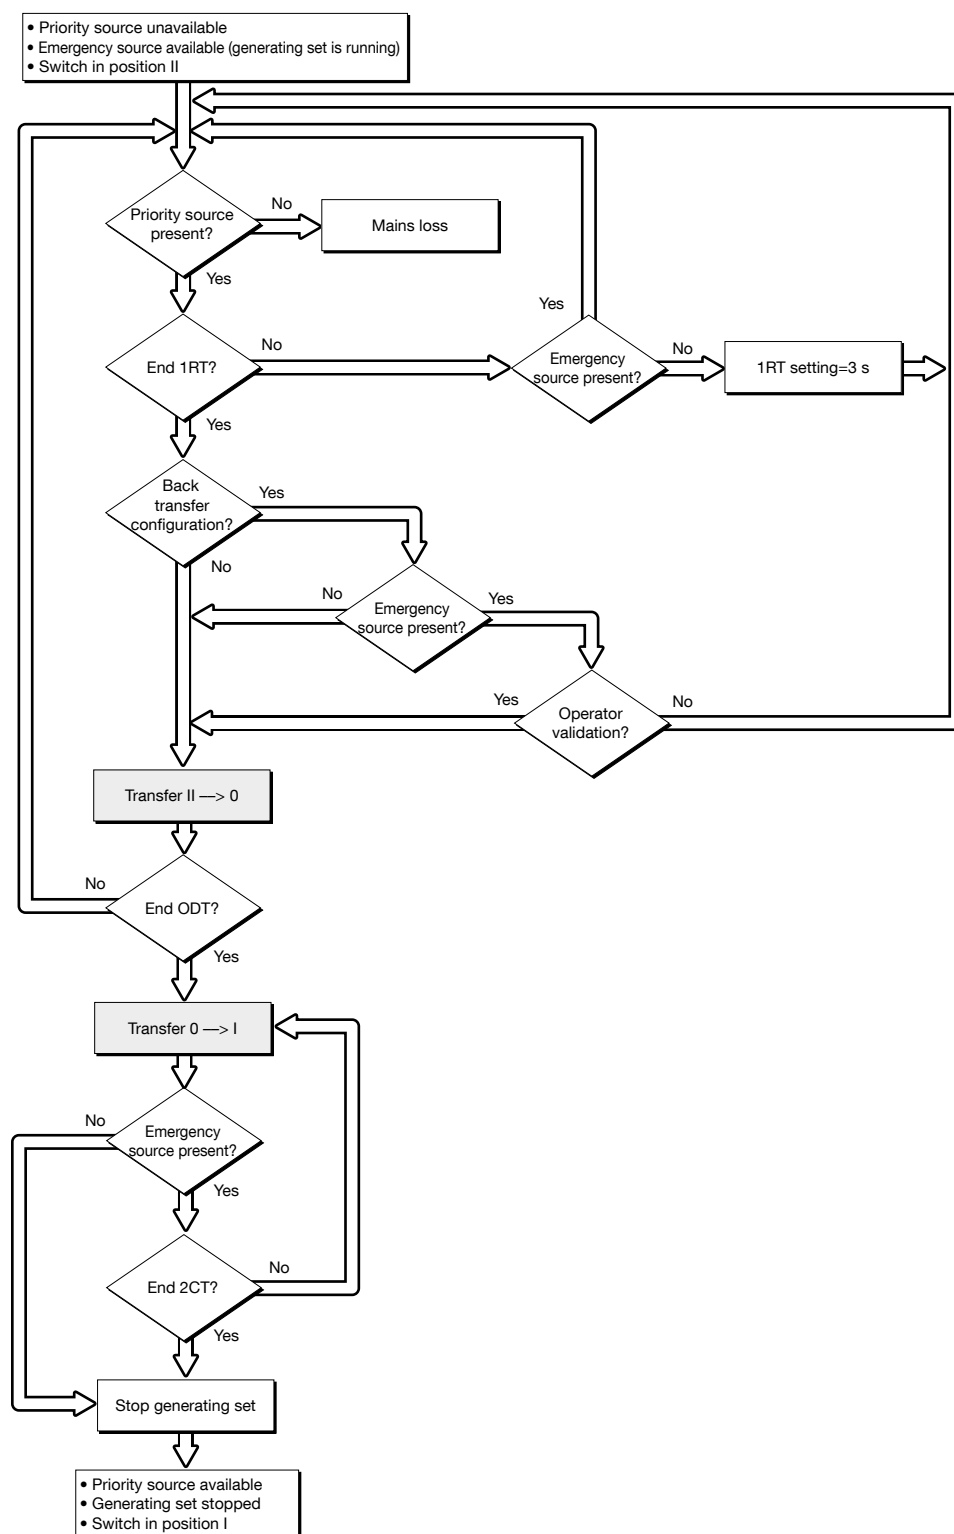

13. Test modes

The ATyS p includes for On-Load as well as Off Loads tests that are always associated with Mains – Gen applications. (The test will as a minimum start the Genset for a determined period of time). To operate the tests manually through the keypad the following flow diagram shows the different steps.

Tests as well as Engine Exerciser cycles are also easily programmed and triggered when using the ATyS Webserver and the Easy-Config software. Webserver and software will require the Ethernet option installed.

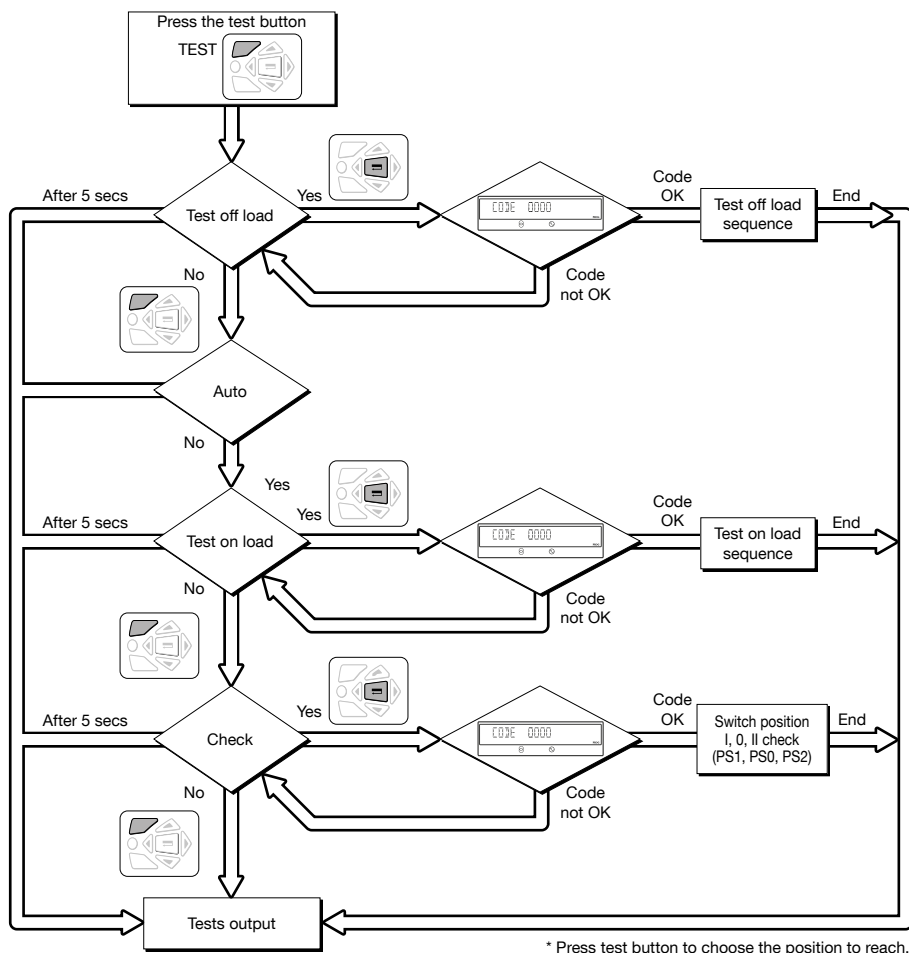

13.1. Test Off Load

This test is for Main – Gen applications only and possible to run in automatic as well as manual mode. It can be considered as a manual Genset start order without switching over the load from the main supply to the backup.

Description:

- This mode enables you to test run the Genset without initiating a load transfer
- The Genset is started and stopped as normal (via the "Gen set start" contact: output 72-71-74).
- This test is always possible to run, except during a main supply (S1) loss sequence. (This is a condition that would stop the test).
- The test duration can be programmed (TFT time delay).

Activation:

- either on the ATyS p front panel, via the test modes,
- or via the ATyS D20 interface,
- or via the programmable input,
- or via communication (Ethernet or MODBUS).

Deactivation:

- either by changing the status of the control input
- or by pressing the validation key on the ATyS p or ATyS D20 keypad.
- or after a Genset start timeout.
- or at the end of the timer (if set),
- or if the main source supply (S1) is lost,
- or in case of generating set shuts down due to a fault.

13.2. Test On Load

This test is for Main – Gen applications and possible to run in automatic mode only. It enables you to start the Genset and simulate a complete transfer sequence, on load.

Description:

- The purpose of this sequence is to execute a load transfer from the main supply to the Genset. This is usually done to test the complete cycle, whilst adhering to the changeover conditions.
- The time delays for validating the transfer conditions (TOT, 2ST, 2AT and 2CT) are derived according to their configuration for normal operation.
- The “retransfer confirmation” function is always active throughout an on load test. This enables a retransfer back to the main source supply (S1) in case of an unlimited on load test, or interrupts a time delayed on load test.

Activation:

- either on the ATyS p front panel, via the test modes,
- or via the ATyS D20 interface,
- or via the programmable input,
- or via communication. (Ethernet or MODBUS).

Deactivation:

- either by changing the status of the control input
- or by pressing the validation key on the ATyS p or ATyS D20 keypad.
- or after a Genset start timeout.
- or at the end of the timer (if set),
- or in case of generating set shuts down due to a fault.

13.3. Engine exerciser (Periodic TEST)

The ATyS p includes a programmable engine exerciser with four independent customizable routines to exercise the engine and Genset. Exercising may be carried out with or without loads, on a daily, weekly, bi-weekly monthly or yearly basis. It is also possible to configure non-cyclic exercise runs when using Easy Config software.

Refer to Annexe I, page 84 for details regarding Easy Config Programming.

14. COMMUNICATION

One can benefit of all the ATyS p functionality when including one of the communication options available.

Options for communication include:

- Ethernet (Modbus TCP) Webserver Gateway Module
- Ethernet (Modbus TCP) Webserver Module
- MODBUS RTU over RS485 Module



Modbus
RS485



Ethernet/Modbus TCP Simple
or Gateway



14.1. General information

Communication via an RS485 connection (JBUS / MODBUS® protocol) enables you to connect up to 31 ATyS to a PC or programmable logic controller over a distance of 1200 metres.

Recommendations:

Use a shielded twisted pair, type LIYCY.

If the distance of 1200 m and / or the number of 31 ATyS be exceeded, it will be necessary to connect a repeater to allow an connection of ATyS for over 1200 m.

For further information on the connection methodology, please consult SOCOMEC.

Communication via an RJ45 Ethernet cable enables you to connect up to 31 ATyS to a PC or a programmable logic controller over a distance of 100metres. The Ethernet Gateway may accommodate a mix of all Socomec communicating products such as the DIRIS and COUNTIS range of products.

14.2. JBUS/MODBUS® protocol

The JBUS/MODBUS® protocol used by the ATyS requires a dialogue using a master/slave hierarchical structure. Two dialogues are possible:

- the master communicates with a slave (ATyS) and waits for its response,
- the master communicates with all the slaves (ATyS) without waiting for their response.

The communication mode is RTU (Remote Terminal Unit) which uses hexadecimal 8 bit characters. In the communication protocol, a standard frame is made up of the following elements:

Slave address	Function code	Address	Data	CRC 16
---------------	---------------	---------	------	--------


- Slave address: communicating device address
- Function codes:
 - 3: to read n words (maximum 125)
 - 6: to write one word.
 - 16: to write n words (maximum 125).
- Address: Register address (refer to following tables)
- Data: parameters linked to function (number of words, value).
When slave address 0 is selected, a message is sent to all devices present on the network (only for functions 6 and 16), this type of message is called general distribution, so it is not followed up with a response from the slaves. The maximum response time (timeout) is 250 ms between a question and a response.

Refer to Annexe III page 125 for communication address and designation details.

15. PUTTING THE ATyS P INTO AUTO OPERATION

After all checks have been verified and all programming and commissioning procedures are ready and ok, once ready to put the ATyS p into AUTO operation, turn the mode selector switch from Manual to Auto.


Note: When the product is powered and properly configured, when switching the product from Manual Mode to AUT the POWER and READY LED's should be a steady Green light.

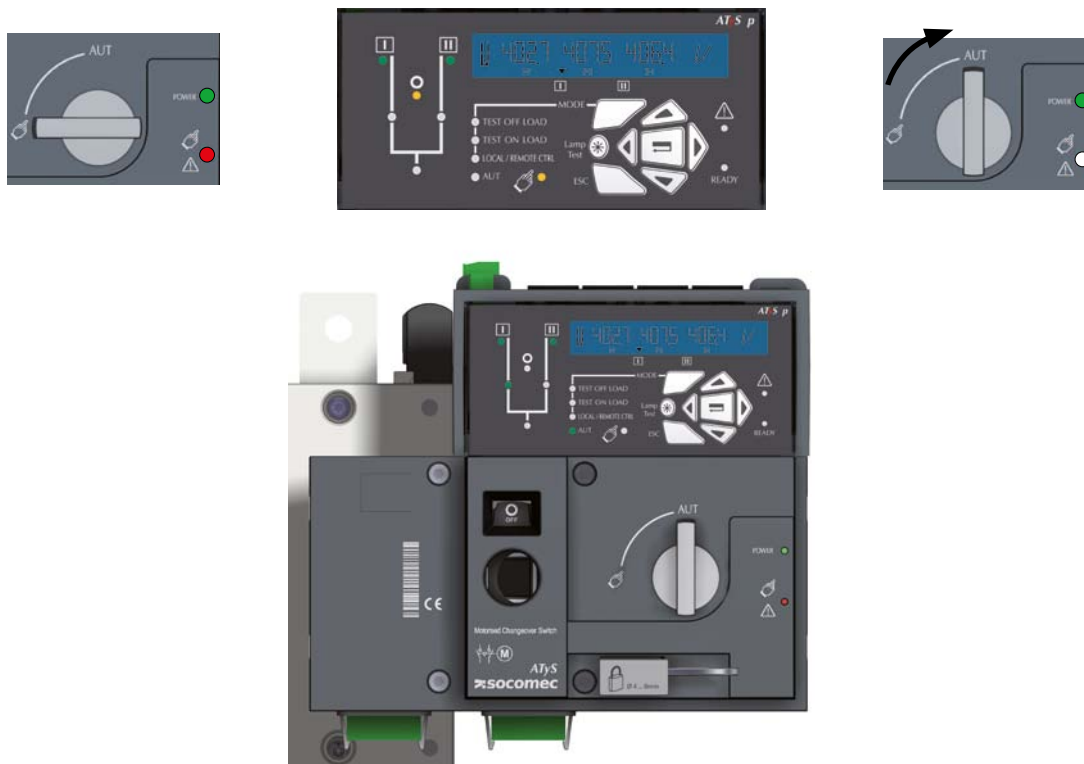

WARNING

Depending on the state of the ATyS p the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.

16. CHARACTERISTICS

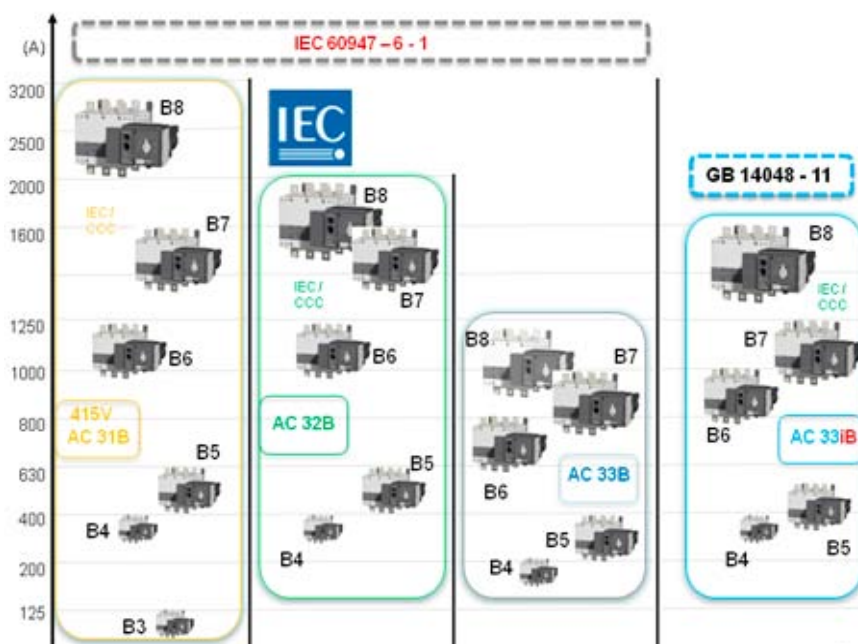

Characteristics according to IEC 60947-3 and IEC 60947-6-1

125 to 630 A

Frame	B3			B4			B5		
Thermal current I _{th} at 40°C	125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A	
Rated insulation voltage U _i (V)	800	800	800	1000	1000	1000	1000	1000	
Rated impulse withstand voltage U _{imp} (kV)	8	8	8	12	12	12	12	12	
Rated operational currents I _e (A) according to IEC 60947-3									
Rated voltage	Utilisation category	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	
415 VAC	AC-20 A / AC-20 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
415 VAC	AC-21 A / AC-21 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
415 VAC	AC-22 A / AC-22 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
415 VAC	AC-23 A / AC-23 B	125/125	160/160	200/200	200/200	315/315	400/400	500/500	
500 VAC	AC-20 A / AC-20 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
500 VAC	AC-21 A / AC-21 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
500 VAC	AC-22 A / AC-22 B	125/125	160/160	200/200	200/250	200/315	200/400	500/500	
500 VAC	AC-23 A / AC-23 B	80/80	80/80	80/80	200/200	200/200	200/200	400/400	
690 VAC	AC-20 A / AC-20 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
690 VAC	AC-21 A / AC-21 B	125/125	160/160	200/200	200/200	200/200	200/200	500/500	
690 VAC	AC-22 A / AC-22 B	125/125	125/125	125/125	160/160	160/160	160/160	400/400	
690 VAC	AC-23 A / AC-23 B	63/80	63/80	63/80	125/125	125/125	125/125	400/400	
220 VDC	DC-20 A / DC-20 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
220 VDC	DC-21 A / DC-21 B	125/125	160/160	200/200	250/250	250/250	250/250	500/500	
220 VDC	DC-22 A / DC-22 B	125/125	160/160	200/200	250/250	250/250	250/250	500/500	
220 VDC	DC-23 A / DC-23 B	125/125	125/125	125/125	200/200	200/200	200/200	500/500	
440 VDC	DC-20 A / DC-20 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	
440 VDC	DC-21 A / DC-21 B	125/125 ⁽²⁾	125/125 ⁽²⁾	125/125 ⁽²⁾	200/200 ⁽²⁾	200/200 ⁽²⁾	200/200 ⁽²⁾	500/500 ⁽²⁾	
440 VDC	DC-22 A / DC-22 B	125/125 ⁽²⁾	125/125 ⁽²⁾	125/125 ⁽²⁾	200/200 ⁽²⁾	200/200 ⁽²⁾	200/200 ⁽²⁾	500/500 ⁽²⁾	
440 VDC	DC-23 A / DC-23 B	125/125 ⁽³⁾	125/125 ⁽³⁾	125/125 ⁽³⁾	200/200 ⁽³⁾	200/200 ⁽³⁾	200/200 ⁽³⁾	500/500 ⁽³⁾	
Rated operational currents I _e (A) according to IEC 60947-6-1									
Rated voltage	Utilisation category								
415 VAC	AC-31 B	125	160	200	250	315	400	500	
415 VAC	AC-32 B				200	315	400	500	
415 VAC	AC-33 B				200	200	200	400	
Fuse protected short-circuit withstand as per IEC 60947-3 at 690 VAC									
Prospective short-circuit current (kA rms)		100 ⁽⁴⁾	100 ⁽⁴⁾	50 ⁽⁴⁾	50	50	50	50	
Associated fuse rating (A)		125	160	200	250	315	400	500	
Circuit breaker protected short-circuit withstand with any circuit breaker that ensures tripping in less than 0.3s ⁽⁵⁾									
Rated short-time withstand current 0.3s I _{sc} (kA rms)		12 ⁽⁴⁾	12 ⁽⁴⁾	12 ⁽⁴⁾	15	15	15	17	
Short-circuit withstand without protection as per IEC 60947-3 at 690 VAC									
Rated short-time withstand current 1s I _{sc} (kA rms)		7 ⁽⁴⁾	7 ⁽⁴⁾	7 ⁽⁴⁾	8	8	8	10	
Rated short-circuit making capacity I _{cm} (kA peak)		11.9	11.9	11.9	22	22	22	17	
Short-circuit withstand without protection as per IEC 60947-6-1 at 415 VAC									
Rated short-time withstand current 30/60ms I _{sc} (kA rms)					10 / -	10 / -	10 / -	- / 10	
Connection									
Maximum Cu cable cross-section (mm²)		35	50	70	95	150	185	240	
Minimum Cu busbar cross-section (mm²)								2 x 30 x 5	
Maximum Cu cable cross-section (mm²)		50	95	120	150	240	240	2 x 185	
Maximum Cu busbar width (mm)		25	25	25	32	32	32	50	
Tightening torque mini / maxi (Nm)		9/13	9/13	9/13	20/26	20/26	20/26	20/26	
Switching time (Standard setting)									
I-II or II-I (s)		0.75	0.75	0.75	1.3	1.3	1.3	1.3	
I-0 or 0-II (s)		0.45	0.45	0.45	0.85	0.85	0.85	0.85	
Duration of "electrical blackout" I-II (s) minimum		0.3	0.3	0.3	0.6	0.6	0.6	0.6	
Power supply									
min / max (VAC)		166/332	166/332	166/332	166/332	166/332	166/332	166/332	
Control supply power demand									
Power supply 230 VAC inrush / nominal (VA) - ATyS		184/92	184/92	184/92	276/115	276/115	276/115	276/150	
Power supply 230 VAC inrush / nominal (VA) - ATyS d, t, g, p		206/114	206/114	206/114	298/137	298/137	298/137	298/172	
Mechanical characteristics									
Durability (number of operating cycles)		10 000	10 000	10 000	8 000	8 000	8 000	5 000	
Weight ATyS 3 P (kg)		5.7	5.7	5.7	6.6	6.7	6.7	11.4	
Weight ATyS 4 P (kg)		6.9	6.9	6.9	7.4	7.8	7.8	13.3	
Weight ATyS d 3 P (kg)		6.3	6.3	6.3	7.2	7.3	7.3	12.0	
Weight ATyS d 4 P (kg)		7.5	7.5	7.5	8.0	8.4	8.4	13.9	
Weight ATyS t, g, p 3 P (kg)		6.8	6.8	6.8	7.7	7.8	7.8	12.5	
Weight ATyS t, g, p 4 P (kg)		8.0	8.0	8.0	8.5	8.9	8.9	14.4	

(1) Category with index A = frequent operation - Category with index B = infrequent operation.

(2) 3-pole device with 2 poles in series for the "+" and 1 pole for the "-".

(3) 4-pole device with 2 poles in series by polarity.

(4) At 415 VAC

(5) Value for coordination with any circuit breaker that ensures tripping in less than 0.3s.

For coordination with specific circuit-breaker references, higher short-circuit current values are available. Please consult us.

800 to 3200 A

Frame	B6			B7	B8		
Thermal current I_{th} at 40°C	800 A	1000 A	1250 A	1600 A	2000 A	2500 A	3200 A
Rated insulation voltage U_i (V)	1000	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage U_{imp} (kV)	12	12	12	12	12	12	12

Courants assignés d'emploi le (A) selon CEI 60947-3

Rated voltage	Utilisation category	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾	A/B ⁽¹⁾
415 VAC	AC-20 A / AC-20 B	800/800	1000/1000	1250/1250	1600/1600	2000/2000	2500/2500	3200/3200
415 VAC	AC-21 A / AC-21 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2500	-/3200
415 VAC	AC-22 A / AC-22 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2500	-/3200
415 VAC	AC-23 A / AC-23 B	800/800	1000/1000	1250/1250	1600/1600	-/1600	-/1600	-/1600
500 VAC	AC-20 A / AC-20 B	800/800	1000/1000	1250/1250	1600/1600	2000/2000	2500/2500	3200/3200
500 VAC	AC-21 A / AC-21 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2500	-/3200
500 VAC	AC-22 A / AC-22 B	630/630	800/800	1000/1000	1000/1000			
500 VAC	AC-23 A / AC-23 B	400/400	630/630	800/800	800/800			
690 VAC	AC-20 A / AC-20 B	800/800	1000/1000	1250/1250	1600/1600	2000/2000	2500/2500	3200/3200
690 VAC	AC-21 A / AC-21 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2500	-/3200
690 VAC	AC-22 A / AC-22 B	630/630	800/800	1000/1000	1600/1600			
690 VAC	AC-23 A / AC-23 B	400/400	630/630	800/800	1000/1000			
220 VDC	DC-20 A / DC-20 B	800/800	1000/1000	1250/1250	1600/1600			
220 VDC	DC-21 A / DC-21 B	800/800	1000/1000	1250/1250	1250/1250			
220 VDC	DC-22 A / DC-22 B	800/800	1000/1000	1250/1250	1250/1250			
220 VDC	DC-23 A / DC-23 B	800/800	1000/1000	1250/1250	1250/1250			
440 VDC	DC-20 A / DC-20 B	800/800	1000/1000	1250/1250	1600/1600			
440 VDC	DC-21 A / DC-21 B	800/800 ⁽³⁾	1000/1000 ⁽³⁾	1250/1250 ⁽³⁾	1250/1250 ⁽³⁾			
440 VDC	DC-22 A / DC-22 B	800/800 ⁽³⁾	1000/1000 ⁽³⁾	1250/1250 ⁽³⁾	1250/1250 ⁽³⁾			
440 VDC	DC-23 A / DC-23 B	800/800 ⁽³⁾	1000/1000 ⁽³⁾	1250/1250 ⁽³⁾	1250/1250 ⁽³⁾			

Rated operational currents I_e (A) according to IEC 60947-6-1

Rated voltage	Utilisation category							
415 VAC	AC-31 B	800	1000	1250	1600	2000	2500	3200
415 VAC	AC-32 B	800	1000	1250	1600	2000	2000	2000
415 VAC	AC-33 B	800	800	800	1000	1250	1250	1250

Fuse protected short-circuit withstand as per IEC 60947-3 at 415 VAC

Prospective short-circuit current (kA rms)	50	100	100	100				
Associated fuse rating (A)	800	1000	1250	2x800				

Circuit breaker protected short-circuit withstand with any circuit breaker that ensures tripping in less than 0.3s⁽⁴⁾

Rated short-time withstand current 0.3s low (kA rms)	47	64	64	78	78	78	78
--	----	----	----	----	----	----	----

Short-circuit withstand without protection as per IEC 60947-3 at 415 VAC

Rated short-time withstand current 1s low (kA rms)	26	35	35	50	50	50	50
Rated short-circuit making capacity	48	73.5	73.5	110	110	110	110

Short-circuit withstand without protection as per IEC 60947-6-1 at 415 VAC

Rated short-time withstand current 60ms low (kA rms)	16	20	25	32	40	50	50
--	----	----	----	----	----	----	----

Connection

Maximum Cu cable cross-section (mm²)	2 x 185	2 x 240					
Minimum Cu busbar cross-section (mm²)	2 x 40 x 5	2 x 50 x 5	2 x 60 x 5	2 x 80 x 5	2 x 100 x 10	2 x 100 x 10	2 x 100 x 10
Maximum Cu cable cross-section (mm²)	2 x 300	4 x 185	4 x 185	6 x 185			
Maximum Cu busbar width (mm)	63	63	63	100	100	100	100
Tightening torque mini / maxi (Nm)	20/26	20/26	20/26	40/45	40/45	40/45	40/45

Switching time (Standard setting)

I-II or II-I (s)	2.6	2.6	2.6	2.6	2	2	2
I-0 or 0-II (s)	1.6	1.6	1.6	1.6	1	1	1
Duration of "electrical blackout" I - II (s) minimum	1.5	1.5	1.5	1.6	1	1	1

Power supply

min / max (VAC)	166/332	166/332	166/332	166/332	166/332	166/332	166/332
-----------------	---------	---------	---------	---------	---------	---------	---------

Control supply power demand

Power supply 230 VAC inrush / nominal (VA) - ATyS	460/184	460/184	460/184	460/230	812/322	812/322	812/322
Power supply 230 VAC inrush / nominal (VA) - ATyS d, t, g, p	482/206	482/206	482/206	482/252	834/344	834/344	834/344

Mechanical characteristics

Durability (number of operating cycles)	4 000	4 000	4 000	3 000	3 000	3 000	3 000
Weight ATyS 3 P (kg)	27.9	28.4	28.9	33.1	50.7	50.7	61.0
Weight ATyS 4 P (kg)	32.2	32.9	33.6	39.4	61.6	61.6	75.3
Weight ATyS d 3 P (kg)	28.5	29.0	29.5	33.7	51.3	51.3	61.6
Weight ATyS d 4 P (kg)	32.8	33.5	34.2	40.0	62.2	62.2	75.9
Weight ATyS t, g, p 3 P (kg)	29.0	29.5	30.0	34.2	51.8	51.8	62.1
Weight ATyS t, g, p 4 P (kg)	33.3	34.0	34.7	40.5	62.7	62.7	76.4

(1) Category with index A = frequent operation - Category with index B = infrequent operation.

(2) 3-pole device with 2 poles in series for the "+" and 1 pole for the "-".

(3) 4-pole device with 2 poles in series by polarity.

(4) Value for coordination with any circuit breaker that ensures tripping in less than 0.3s.

For coordination with specific circuit-breaker references, higher short-circuit current values are available. Please consult us.

17. PREVENTIVE MAINTENANCE

It is recommended to verify the tightening torque of all connections and to operate the product in a full operating cycle (I – 0 – II – 0 – I: Auto and Manual) at least once a year.


18. TROUBLE SHOOTING GUIDE

The ATyS p does not operate electrically	• Verify the power supply on terminals 101-102 and 201-202: 208 - 277 VAC $\pm 20\%$ • Verify that the front selector switch is in position (AUT) • Verify that contacts 313 and 317 are open. • Verify that the power LED (Green) is On whilst the fault LED (RED) is off. • Verify that the Ready light on the ATS controller is a steady Green light. • Verify presence of at least one green LED on the source supply available LED's . • Verify that the product is available with contacts 63A / 64A and 63B / 64B closed. • Verify whether the problem is limited to the ATS controls + the motorisation module or just the ATS controls. Note: To isolate the fault to the ATS controller or the complete unit, close contacts 312 with 317 whilst ensuring that 313 and 317 remain open. This will force the ATyS p into remote control which will bypass the ATS controller and accept position orders from contacts 314 to 317.
It is not possible to manually operate the switch	• Verify that the front selector switch position is on the Manual position. • Make sure that the product is not padlocked • Verify the rotation direction of the handle • Apply a sufficient progressive action in the direction as indicated on the handle
Electrical operation does not correspond to external order I,O,II	• Verify the selected control logic wiring (impulse or contactor) • Verify the connector connections.
Impossible to padlock	• Verify that the front selector switch is in manual position • Verify that the emergency handle for manual operation is not inserted into the ATyS manual slot. • Verify that the ATyS is in 0 position (Padlocking is only possible in 0 position for standard products)
The AUT light is flashing	• The AUT LED will be steady green when in AUTO Mode and will be flashing green when the ATyS p has timers running. • This is usually a normal indication.
The fault LED is ON (Motorisation module)	• The FAULT / MANUAL LED on the motorisation module is on when in manual mode (this is normal) and in AUT Mode when there is an internal fault in the ATyS p. To reset a fault condition switch the ATyS p from AUT to Manu and back to AUT. Should the fault LED remain on you will need to localize and clear the fault prior to reset. • The FAULT / Manual LED will also be on when contact 313 is closed with 317. (Force the ATyS to off position). This is a normal condition. • Should the Fault LED remain on abnormally, contact SOCOMEC.
The fault LED is on (ATS Controller)	• Switch the ATyS p from AUT to Manual and back to AUT. Should the fault condition remain contact SOCOMEC) Note: In case the external fault / alarm condition is active through one of the ATyS configurable inputs, the fault LED on the ATS controller will be on. This is a normal condition and resettable by opening the associated contact input.

The SOURCE availability indicator does not illuminate when the source is available.	• Press the "LED test" button and ensure that the corresponding LED's illuminate. • Check in programming mode that the nominal voltage value (by default set to 400V), the nominal frequency value and the network configuration correspond to the network and modify if necessary. • Check the voltage and frequency thresholds and hysteresis for this source, in the Volt and Frequency menus and modify if necessary.
The product displays the message: F13 ROT-1 or F23 ROT-2	• Check for phase rotation consistency (or conventional direction) between the source and parameter ROT in the SETUP menu, or between the two sources.
Nothing happens following a loss of the priority source whilst the LED for SOURCE 2 is illuminated.	• Check the setting of 1FT. After 1FT has counted down 71-72-74 should change state. • Check the status of the "gen set start" contact (contact 71-73-74) after 1FT countdown. • Check the wiring from the "gen set start" contact (71-72-74) to the generating set controller.
The product does not switch over after the priority source is lost.	• Check back-up source availability. • Check back-up source voltage and frequency thresholds and hystereses and modify if required. • Check that the product selector switch is in AUTO. • Check that automatic operation has not been inhibited by external orders. • Check priority source voltage and frequency thresholds and hystereses and modify if necessary. • Check that the time-delay 1RT (Source 1 Return Timer) has counted down, and that it is not too long. • The display indicates 1RT xxxSEC. Check in programming mode that the "manual retransfer" function is not activated. If this function is unnecessary: In the SETUP menu, the RETRANS variable must be at NO. • Check that automatic operation has not been inhibited by external orders. • Check that the INH input is not activated.
Return to priority source 1 has been executed, but source 2 is still running (M-G application)	• Check that CDT (Cool Down Timer) has counted down. • The display indicates CDT xxx SEC after switchover to the priority source. • Check the status of the "gen set start" contact (contact 71 – 72 - 74) Check that the contact changes state after timedelay CDT has counted down. • Check that the product is not in MAN, CONTROL or INH mode. In this case Manual or Control LMED would be On.
The ON LOAD and OFF LOAD tests cannot be started via the keypad	• Check that the mode selector switch is set to AUT and that the AUT LED is illuminated. Note: In Manual mode, only the OFF LOAD TEST can run. • Check the operating mode password (factory code 0000) to access the test functions. Check that the ON LOAD TEST or OFF LOAD TEST LEDs are illuminated, according to the selected test mode. • Check that the product is set to application type M-G. • Check that there is no mains loss when starting the test. The SOURCE LED (priority side) should be illuminated. • Check the status of the "gen set start" contact (contact 71-72-74).
Product displays an event or error message	• Refer to chapter Events list and Error messages list in this manual.

18.1. Events display

Typical example for decoding an events message on the LCD Screen.

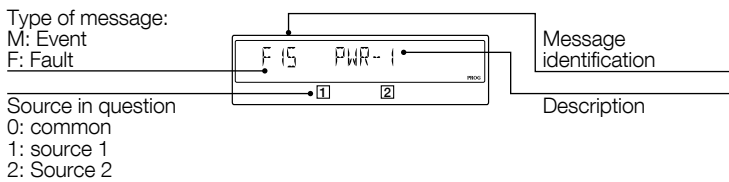

MESSAGE	DEFINITION	ACTION	RESET
FAIL START	If the generating set does not start after the 2ST delay, the message will be sent.	Check the generating set.	Press the validation key
RETRANSFER?	Retransfer confirmation	Press the validation key if OK to Retransfer	Automatic
STOP TOL?	Test off load end confirmation	Press the validation key if OK to end the TOL	Automatic
F00 OPFACTOR	Duty Cycle Fault Limited number of operations in a defined period.	Wait 1 min. for the error message to disappear.	Automatic
F03 NEUTRAL	Neutral Fault: The neutral on source 1 is not wired on the same side as the neutral on source 2 .	Check and rewire one of the two sources.	Change the selector switch from AUT to Manual and back to AUT
F11 FLT 1	Ext fault S1 with 0 return: This fault only appears if input FT1/FT2 (see I-O Menu) and the parameter 2ND TRIP (see Setup Menu) are activated. Activation of this fault shifts the changeover switch to position 0.	Resolve the external problem that caused activation of input FT1/FT2	Change the selector switch from AUT to Manual and back to AUT
F12 ALR 1	Ext fault S1 without 0 return: This fault only appears if input AL1/AL2 is activated (see I-O Menu).	Resolve the external problem. Once this is done, the error message will disappear.	Automatic
F13 ROT 1	Phase rotation fault on source 1 The phase rotation does not correspond to the ROT PH. Variable in the Setup menu.	Invert two phases on source 1 / source 2	Automatic
F16 POS 1	Position 1 not reached: Fault position following an electric or automatic order, position I is not reached.	Provisional action: Switch to manual mode and operate manually.	Change source status. Manual operation.
F21 FLT 2	Ext fault S2 with 0 return: This fault only appears if input FT1/FT2 (see I-O Menu) and the parameter 2ND TRIP (see Setup Menu) are activated. Activation of this fault shifts the changeover switch to position 0.	Resolve the external problem that caused activation of input FT1/FT2	Change the selector switch from AUT to Manual and back to AUT
F22 ALR 2	Ext fault S2 without 0 return: This fault only appears if input AL1/AL2 is activated (see I-O Menu).	Resolve the external problem. Once this is done, the error message will disappear.	Automatic
F23 ROT2	Phase rotation fault on source 2 The phase rotation does not correspond to the ROT PH. Variable in the Setup menu.	Invert two phases on source 1 / source 2	Automatic
F26 POS 2	Position 0 not reached: Fault position following an electric or automatic order, position 0 is not reached	Switch to manual mode and operate manually.	Change source status. Manual operation.
F06 POS 0	Position 0 not reached: Fault position following an electric or automatic order, position 0 is not reached.	Switch to manual mode and operate manually.	Change source status. Manual operation.
F08 MAIN FLT	Main fault	Contact your nearest dealer	
F09 MOT FLT	Motor fault	Contact your nearest dealer	
ATS VER 100	Product version	Informative	Automatic
F17 UNB 1	Source 1 unbalanced	Check the sensing voltages. Enter the values through the Voltage Levels Menu	Change the selector switch from AUT to Manual and back to AUT
F27 UNB 2	Source 2 unbalanced	Check the sensing voltages. Enter the values through the Voltage Levels Menu	Change the selector switch from AUT to Manual and back to AUT
F07 AUTOCONF	Auto - Configuration failed	Check the sensing voltages. Enter the values through the Voltage Levels Menu.	Change the selector switch from AUT to Manual and back to AUT
SAVED	User backup settings saved / settings saved	No Action	Automatic
LOADED	User backup settings loaded	No Action	Automatic

19. ACCESSORIES: ordering information

19.1. Terminal shrouds

Use

IP2X protection against direct contact with terminals or connecting parts.

Advantages

Perforations allow remote thermographic inspection without the need to remove the shrouds.

Rating (A)	No. of poles	Position	Reference
125 ... 200	3 P	top / bottom / front (I) / rear (II)	2694 3014 ⁽¹⁾⁽²⁾
125 ... 200	4 P	top / bottom / front (I) / rear (II)	2694 4014 ⁽¹⁾⁽²⁾
250 ... 400	3 P	top / bottom / front (I) / rear (II)	2694 3021 ⁽¹⁾⁽²⁾
250 ... 400	4 P	top / bottom / front (I) / rear (II)	2694 4021 ⁽¹⁾⁽²⁾
500 ... 630	3 P	top / bottom / front (I) / rear (II)	2694 3051 ⁽¹⁾⁽²⁾
500 ... 630	4 P	top / bottom / front (I) / rear (II)	2694 4051 ⁽¹⁾⁽²⁾

(1) To shroud front switch top and bottom 2 references required.

(2) To fully shroud front, rear, top and bottom 4 references required.



access_2016_a_2_cat

ENGLISH

19.2. Terminal screens

Use

Top and bottom protection against direct contact with terminals or connection parts.

For upstream and downstream protection, order the reference once.

Rating (A)	No. of poles	Position	Reference
125 ... 200	3 P	top / bottom	1509 3012
125 ... 200	4 P	top / bottom	1509 4012
250 ... 400	3 P	top / bottom	1509 3025
250 ... 400	4 P	top / bottom	1509 4025
500 ... 630	3 P	top / bottom	1509 3063
500 ... 630	4 P	top / bottom	1509 4063
800 ... 1250	3 P	top / bottom	1509 3080
800 ... 1250	4 P	top / bottom	1509 4080
1600 ... 1600	3 P	top / bottom	1509 3160
1600 ... 1600	4 P	top / bottom	1509 4160
2000 ... 3200	3 P	top / bottom	1509 3200
2000 ... 3200	4 P	top / bottom	1509 4200




access_207_a_2_cat

19.3. Bridging bars

Use

For bridging power terminals on the top or bottom side of the switch. One piece required per pole.

Rating (A)	Section (mm)	Reference
125 ... 200	20 x 2.5	4109 0019
250	25 x 2.5	4109 0025
400	32 x 5	4109 0039
500	32 x 5	4109 0050
630	50 x 5	4109 0063
800 ... 1000	50 x 6	4109 0080
1250	60 x 8	4109 0120
1600 ... 1600	90 x 10	4109 0160

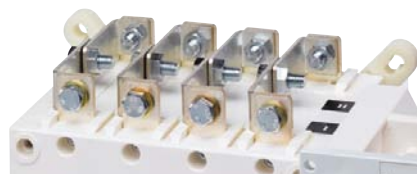

access_205_a_2_cat

19.4. Power terminal connection kits

Details: refer to page 32.


Use

Enables:


- connection between the two power terminals of the same pole for 2000 to 3200 A ratings (Fig. 1 and Fig 2).
 - top or bottom bridging connection (Fig. 3).
- For 3200 A rating, the connection pieces (part A) are delivered bridged from factory.

Bolt sets must be ordered separately. The technical notice for these specific accessories can be downloaded from www.socomec.com.

Fig. 1

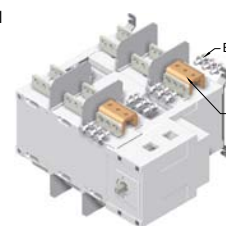


access_226_b_1_x_cat

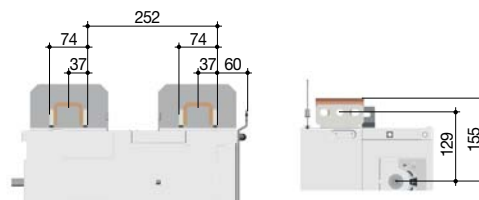


access_232_a_1_cat

Fig.2

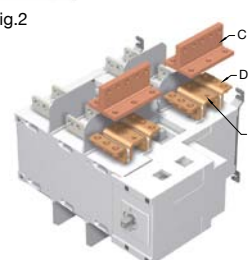


access_228_b_1_x_cat

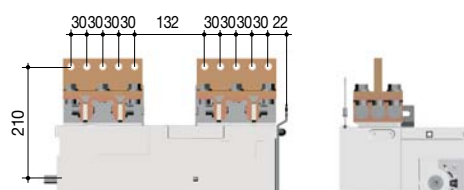


access_233_a_1_cat

Fig. 3

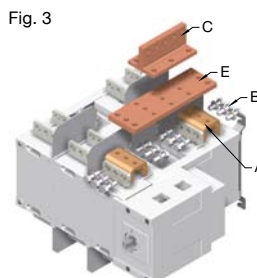

access_230_b_1_x_cat

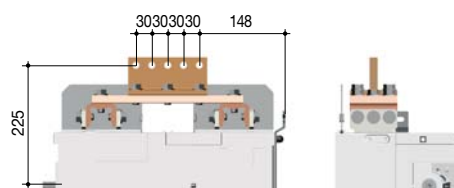

access_234_a_1_cat

Top or bottom flat connection - Fig. 1

Rating (A)	Piece	Quantity to order per pole ⁽¹⁾	Reference
2000 ... 2500	Connection - part A	2	2619 1200
2000 ... 2500	Bolt set - part B	2	2699 1200
3200	Connection - part A		included
3200	Bolt set - part B	2	2699 1200

Top or bottom edgewise connection - Fig. 2

Rating (A)	Piece	Quantity to order per pole ⁽¹⁾	Reference
2000 ... 2500	Connection - part A	2	2619 1200
2000 ... 2500	T piece - part C	2	2629 1200 ⁽²⁾
2000 ... 2500	Bracket- part D	2	2639 1200 ⁽²⁾
3200	Connection - part A		included
3200	T piece - part C	2	2629 1200 ⁽²⁾
3200	Bracket- part D	2	2639 1200 ⁽²⁾

Top or bottom bridging connection -Fig. 3

Rating (A)	Piece	Quantity to order per pole ⁽¹⁾	Reference
2000 ... 2500	Connection - part A	2	2619 1200
2000 ... 2500	Bolt set - part B	2	2699 1200
2000 ... 2500	Bar - part E	1	4109 0250 ⁽²⁾
2000 ... 2500	T piece - part C	1	2629 1200 ⁽²⁾
3200	Connection - part A		included
3200	Bolt set - part B	2	2699 1200
3200	Bar - part E	1	4109 0320 ⁽²⁾
3200	T piece - part C	1	2629 1200 ⁽²⁾

(1) Example for 3 pole device equipped upstream only: Order 3 times the indicated quantities.

(2) Bolt set is provided with the accessories.

19.5. Control voltage transformer

Use

For applications without neutral, this autotransformer provides the 230 VAC required to power these ATyS products.

Rating (A)	Reference
125 ... 3200	1599 4064

19.6. Voltage sensing kits

Details: refer to page 44.

Use

For power supply and voltage measurement (4 wire, three-phase) for the ATyS t, g and p.

Routing of the conductors is controlled, which means that no specific protective device is necessary for these connections.

The kit can be fitted on the top or bottom of the switch.

Note: the 3-pole version does not integrate the power supply.


For ATyS t, g and p - 3 poles

Rating (A)	Reference
125 ... 160	1559 3012
250	1559 3025
400	1559 3040
630	1559 3063
800 ... 1000	1559 3080
1250	1559 3120
1600 ... 1600	1559 3160
2000 ... 3200	1559 3200

For ATyS t, g and p - 4 poles


Rating (A)	Neutral on the right Reference	Neutral on the left Reference
125 ... 160	1559 4012	1559 4013
250	1559 4025	1559 4026
400	1559 4040	1559 4041
630	1559 4063	1559 4064
800 ... 1000	1559 4080	1559 4081
1250	1559 4120	1559 4121
1600 ... 1600	1559 4160	1559 4161
2000 ... 3200	1559 4200	1559 4201

From 125 to 630 A.

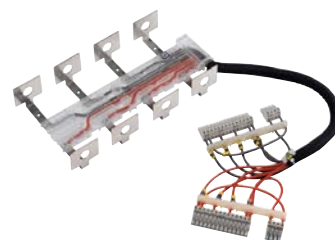

atys_606_a_1_cat

From 800 to 3200 A.

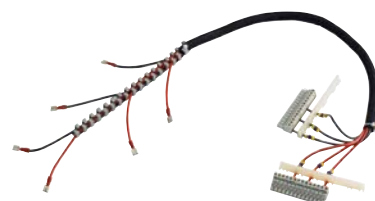

atys_603_a_2_cat

ENGLISH

19.7. Phase failure device

Use

The ATyS DS is a voltage relay for monitoring a single three-phase power supply source.

Upon failure of the power supply source, the voltage relay's fault contact closes.

This output can be utilised, for example, to order the transfer of an ATyS motorised changeover switch.

Rating (A)	Reference
ATyS DS	192X 0056



atys_762_a_1_cat

19.8. Door escutcheon plate

Use

When direct access to the ATyS front face (mode selection, manual operation, display...) is required, the door surround can be utilised to provide a clean and safe finish to the panel's cut-out.

Rating (A)	Reference
125 ... 630	1539 0012
800 ... 3200	1539 0080



atys_595_a_2_cat

19.9. Mounting spacers

Use

Increases the distance between the rear power terminals and the backplate by 10 mm.

This accessory may also be used to replace the original mounting spacers.

Rating (A)	Description of accessory	Reference
125 ... 630	1 set of 2 spacers	1509 0001



atys_009_a_2_cat

19.10. Current transformers

Use - For ATyS p only

Used with ATyS p switches, current transformers enable information to be obtained on the load current.

Refer to the SOCOMEC General Catalogue for details



trafo_025_a_2_cat



trafo_077_b_1_cat

19.11. Optional modules

Use - For ATyS p only

Description of accessories	Reference
RS485 MODBUS communication	4825 0092
2 inputs/2 outputs	4825 0094
Ethernet communication (embedded Ethernet webserver software)	4825 0203
Ethernet communication + RS485 JBUS/MODBUS gateway (embedded Ethernet webserver software)	4825 0204
Analogue outputs	4825 0093
Pulse outputs	4825 0090



atys_016_c_1_cat

19.12. Remote display and control units

Use

To display source availability and position indication on the front of a panel.

Interfaces are powered from the ATyS changeover switch, via the RJ45 connection cable.

Maximum connection distance: 3 m.

ATyS D20 - for ATyS p

The D20 displays position measurements and enables ATyS p mode control and configuration from the front of a panel. Protection degree: IP21.

Door mounting

2 holes Ø 22.5. ATyS changeover switch connection via RJ45 cable, not isolated.

Cable available as an accessory.




atys_565_d_1_cat

Interfaces are powered from the ATyS.



atys_597_a_1_cat

Drillings

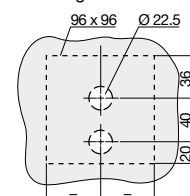

atys_161_a_1_x_cat

Description of accessories	Reference
ATyS D20	9599 2020

19.13. DC power supply

Use

Allows an ATyS to be supplied from a 12 or 24 VDC source.

To be positioned as close as possible to the DC power supply source.

Rating (A)	Operating voltage	Reference
125 ... 1600	12 VDC / 230 VAC	1599 5012
125 ... 1600	24 VDC / 230 VAC	1599 5112

19.14. Communication cable

Use

To connect between a remote interface (type D10 or D20) and an ATyS changeover switch (ATyS d, t, g or p).

Characteristics

RJ45 8 wire straight-through, non isolated cable. Length 3m.



access_209_a_2_cat

For ATyS d, t, g and p

Type	Length	Reference
RJ45 cable	3 m	1599 2009

20. FACTORY FITTED ACCESSORIES

20.1. Additional auxiliary contacts

Use

Pre-breaking and signalling of positions I and II. Each reference provides a single factory fitted NO/NC contact for both positions.

Low level auxiliary contacts: Please consult us. If additional auxiliary contacts are required please consult us.



access_065_a_1_cat

Rating (A)	Nominal current (A)	Operating current I _e (A)			
		A - 250 13 VAC	400 VAC AC-13	24 VDC DC-13	48 VDC DC-13
125 ... 3200	16	12	8	14	6

Rating (A)	Reference
125 ... 630	1599 0002 ⁽¹⁾
800 ... 1600	1599 0032 ⁽¹⁾
2000 ... 3200	included

(1) Up to 2 auxiliary contacts can be ordered.

20.2. Padlocking in all 3 positions I – 0 - II

Use

Enables the ATyS to be padlocked in positions 0, I and II (factory fitted).

Rating (A)	Reference
125 ... 630	1599 0003
800 ... 3200	1599 0004




20.3. Padlocking with RONIS type accessories

Use

With the product in manual mode, it enables locking in position 0 using a RONIS EL11AP lock (factory fitted).

Locking in all three positions (I-0-II) requires, in addition, the "3 position padlocking" accessory.

Rating (A)	Reference
125 ... 630	1509 1006
800 ... 3200	1509 1004

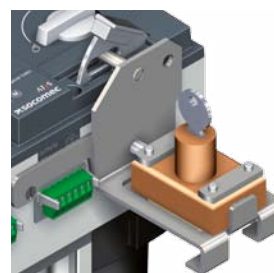


21. ATyS Family: ORDERING INFORMATION

The following is an ordering guide for ATyS Motorised Changeover Switches delivered inclusive of the emergency handle and storage clip. This guide is intended so as to explain the logic behind SOCOMEC ATyS reference numbers.

When ordering please consult the latest SOCOMEC catalogue.

Typical ATyS reference

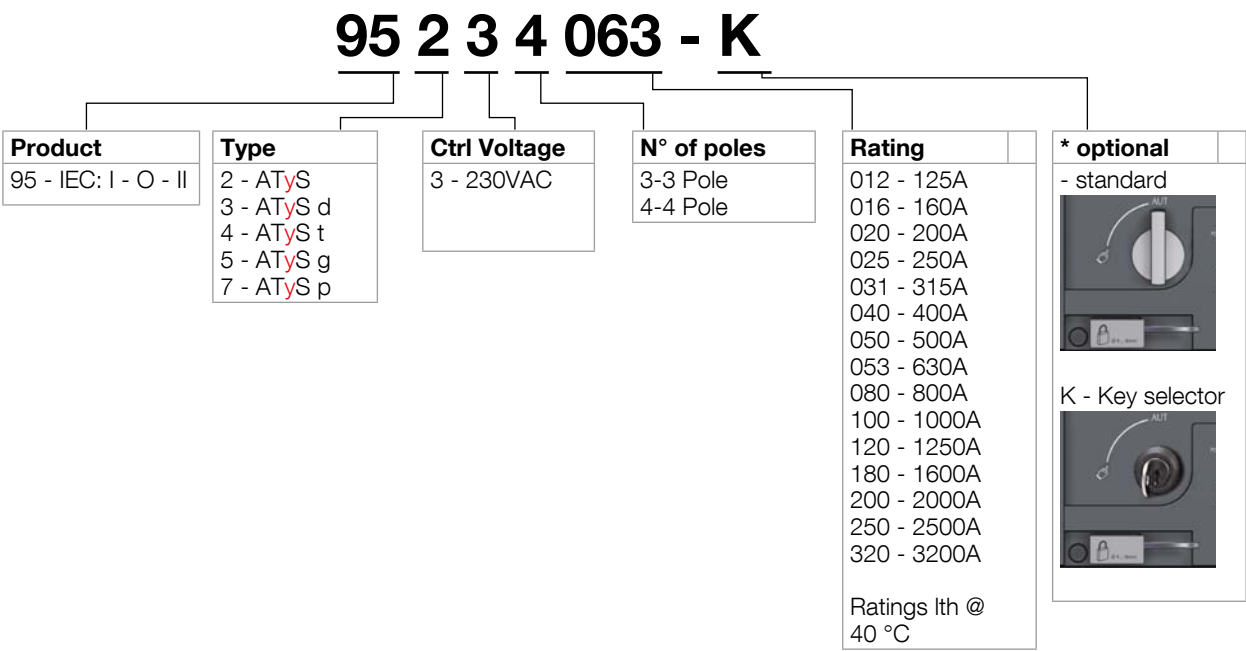

Note:

* When a key selector switch is required add - K at the end of standard 8 digit reference number.

Socomec worldwide

IN WESTERN EUROPE

BELGIUM

B - 1070 Bruxelles
Tel. +32 2 340 02 30
info.be@socomec.com

FRANCE

F - 94132 Fontenay-sous-Bois Cedex
Tel. +33 1 45 14 63 30
info.scp.fr@socomec.com

GERMANY

D - 76275 Ettlingen
Tel. +49 7243 65292 0
info.scp.de@socomec.com

ITALY

I - 20098 San Giuliano Milanese (MI)
Tel. +39 02 98 49 821
info.scp.it@socomec.com

NETHERLANDS

NL - 3991 CD Houten
Tel. +31 30 760 0900
info.nl@socomec.com

SPAIN

E - 08329 Teià (Barcelona)
Tel. +34 93 540 75 75
info.es@socomec.com

UNITED KINGDOM

Hitchin Hertfordshire SG4 0TY
Tel. +44 1462 440 033
info.scp.uk@socomec.com

IN EASTERN EUROPE, MIDDLE EAST, AFRICA

POLAND

01-625 Warszawa
Tel. +48 91 442 64 11
info.scp.pl@socomec.com

ROMANIA

023383 Bucharest
Tel. +40 21 319 36 88
info.ro@socomec.com

RUSSIA

125167 - Moscow
Tel. +7 495 775 19 85
info.ru@socomec.com

SLOVENIA

SI - 1000 Ljubljana
Tel. +386 1 5807 860
info.si@socomec.com

TURKEY

34775 Istanbul
Tel. +90 216 540 71 20-21-22
info.tr@socomec.com

UNITED ARAB EMIRATES

Dubai, U.A.E.
Tel. +971 4 29 98 441
info.ae@socomec.com

IN ASIA

CHINA

P.R.C 200052 Shanghai - China
Tel. +86 21 52 98 95 55
info.cn@socomec.com

INDIA

122001 Gurgaon, Haryana - India
Tel. +91 124 4027210
info.scp.in@socomec.com

SINGAPORE

Singapore 408723
Tel. +65 6506 7600
info.sg@socomec.com

IN NORTH AMERICA

USA, CANADA & MEXICO

Cambridge, MA 02142 USA
Tel. +1 617 245 0447
info.us@socomec.com

HEAD OFFICE

SOCOMECH GROUP

S.A. SOCOMECH capital 10 816 800 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex - FRANCE



www.socomec.com

INTERNATIONAL SALES DEPARTMENT


SOCOMECH

1, rue de Westhouse - B.P. 60010
F - 67235 Benfeld Cedex - FRANCE
Tel. +33 (0)3 88 57 41 41
Fax +33 (0)3 88 74 08 00
info.scp.isd@socomec.com

YOUR DISTRIBUTOR



Annexe I. Programming with Easy config Software

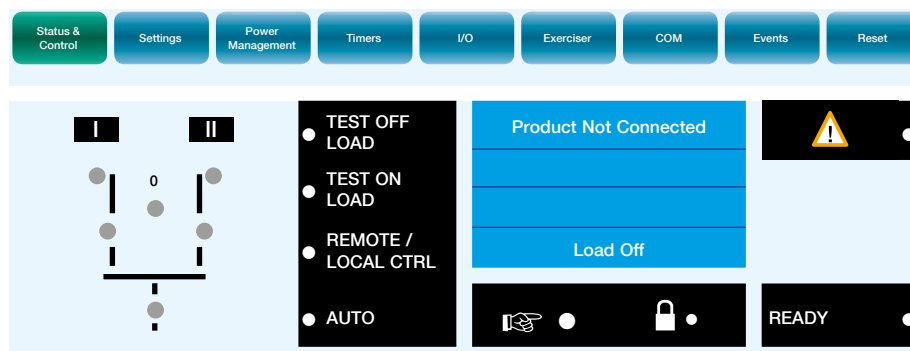

Annexe I. Programming with Easy config Software

Annexe I - 1. Getting started – the main functional keys



- **New File:** Used to select the product to configure and to create a new configuration settings file.
- **Open File:** Used to open a file that was already created and saved on the user's computer.
- **Save File:** Used to save the configured settings in a file for records, later use etc...
- **Get From Device:** Used to upload the settings that are saved in the ATyS p. (Connected and powered)
- **Send To Device:** Used to download a configuration settings file to the ATyS p. (Connected and powered)
- **Export:** Used to export and save the configuration settings to a file in CSV format.

Annexe I - 2. Selecting the ATyS p product

- Define the ATyS p as the product you would like to configure by first clicking on "New File" and then following the instructions below.




Type	ATyS P ▼	Name	Device Name
	ECi2	Type	ATyS P ▼
	ECi3		
	A10		
	A20		
	A20v3		
	A40		
	A40v3		
	A60		
	A80		
	E33		
	E34		
	E43		
	E44		
	E44R		
	E53		
	E63		
	ATyS P		

The ATyS p may be named as required depending on user preference by simply filling in the box under the heading "Name". (Above listed by default as "New Device")


You are now ready to input the settings that you would like to either save as a file or download to the ATyS p.

Annexe I - 3. Status and control screen

The screen below will appear once the ATyS p has been selected using a User profile. This screen is the ATyS p “Status Screen” that is active only when configuring a product online (“Product Connected”)

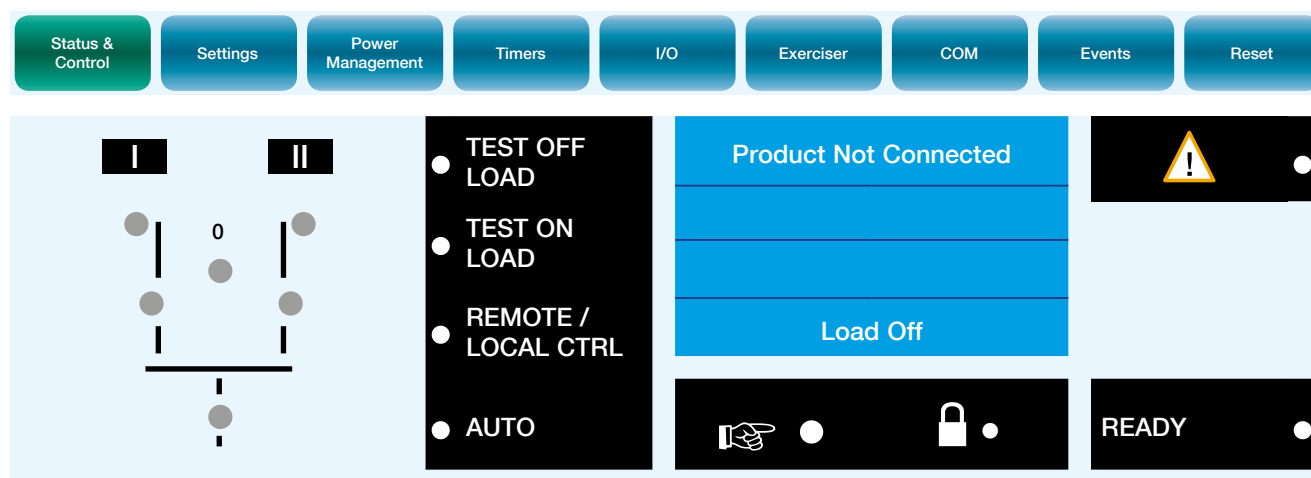

When connected and in communication with an ATyS p the User Status Screen will be active and will display data being monitored depending on the state of the ATyS p. LED representation shows the state of the product while a 4 line text table includes a status summary in concise language.

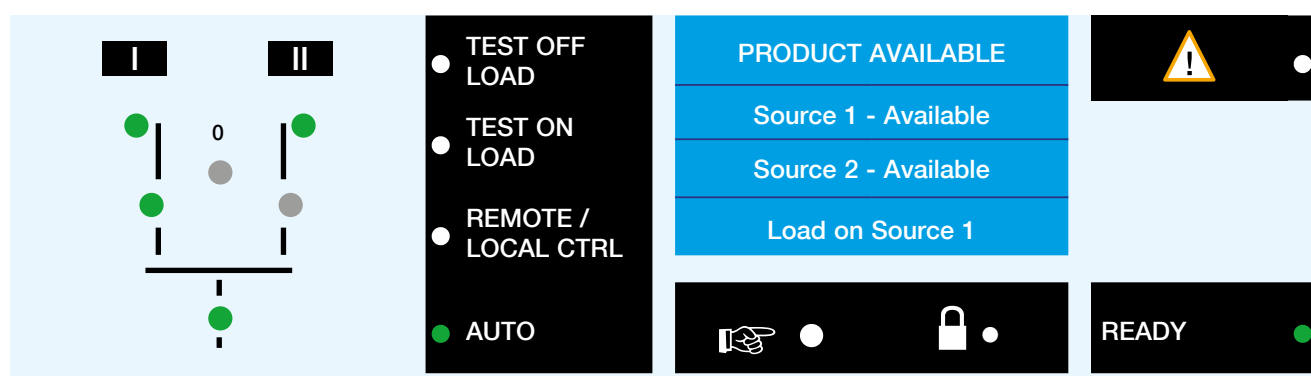

When connected as a Super User in addition to the status information displayed above the user will have access to the “Remote Control” functions of the ATyS p. (Refer to the end of this section for details).

Annexe I - 4. Setting screen

Configuration is recommended to be carried out screen by screen whilst navigating from left to right, and line by line. This will help to ensure that all parameters have been configured by the end of the screens.

Should data be entered out of range, an error message will appear showing the error and indicating the acceptable parameters. The help  icon will display prompt boxes when passed over with the cursor.

Annexe I - 4.1. Setting screen 1

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
------------------	----------	------------------	--------	-----	-----------	-----	--------	-------

Screen 1

Screen 2

Network Type	1BL - Single Phase Balanced Load ▼
Nominal Voltage	230 V ⬆⬇⬅
Network Type	50 Hz ▼
Natural Detection	Auto Detection of Neutral LEFT or RIGHT ▼
CT Primary	1000 A ⬆⬇⬅
CT Secondary	5 A ▼
LCD Controller Backlight	Delayed OFF ▼
Type of Application	Main-Gen ▼
Priority - Supply Source	Source 1 ▼
Priority - TEST ON LOAD	No ▼
Priority - EXTERNAL ON LOAD	No ▼
Phase Rotation	Verify Compatible (Auto) ▼
Source 1 set to Switch N°	Not Inverted ▼
Manual Retransfer	No ▼

Annexe I - 4.1.1. Setting screen 1 – configuration details

Network Type	1BL - Single Phase Balanced Load ▼ 1BL - Single Phase Balanced Load 2NBL - Two Phase Unbalanced Load 2BL - Two Phase Balanced Load 3NBL - Three Phase (3 wire) Unbalanced Load 3BL - Three Phase (3 wire) Balanced Load 4NBL - Three Phase + Neutral (4 wire) Unbalanced Load 4BL - Three Phase + Neutral (4 wire) Balanced Load 41NBL - Three Phase + Neutral (4 wire) Unbalanced Load / Single Phase load 42NBL - Three Phase + Neutral (4 wire) Unbalanced Load / Two Phase load
Nominal Frequency	50 Hz ▼ 50 Hz 60 Hz
Neutral Detection	Auto Detection of Neutral LEFT or RIGHT ▼ Neutral fixed on the LEFT - (N, L3, L2, L1) Neutral fixed on the RIGHT - (L1, L2, L3, N) Auto Detection of Neutral LEFT or RIGHT

CT Secondary	5 A ▼ 1 A 5 A
LCD Controller Backlight	Delayed OFF ▼ Off On Delayed OFF
Type of Application	Main-Gen ▼ Main-Main Main-Gen
Priority - Supply Source	Source 1 ▼ Network Source 1 Source 2
Priority - TEST ON LOAD	No ▼ No Yes
Source 1 set to Switch N°	Not Inverted ▼ Not Inverted Inverted
Manual Retransfer	No ▼ No Yes

Annexe I - 4.2. Setting screen 2

Status & Control

Settings

Power Management

Timers

I/O

Exerciser

COM

Events

Reset

Screen 1

Screen 2

✓	Source 1
✓	Source 2

Annexe I - 4.2.1. Setting screen 2 – configuration details

Source 1				
	Upper		Lower	
Voltage Thresholds	115 %	264.50 V	85 %	195.50 V
Voltage Hysteresis	110 %	253.00 V	95 %	218.50 V
Frequency Thresholds	115 %	57.50 Hz	85 %	42.50 Hz
Frequency Hysteresis	110 %	55.00 Hz	95 %	47.50 Hz
Voltage Unbalance Threshold		0 %	0.00 V	
Voltage Unbalance Hysteresis		0 %	0.00 V	

Source 2				
	Upper		Lower	
Voltage Thresholds	115 %	264.50 V	85 %	195.50 V
Voltage Hysteresis	110 %	253.00 V	95 %	218.50 V
Frequency Thresholds	115 %	57.50 Hz	85 %	42.50 Hz
Frequency Hysteresis	110 %	55.00 Hz	95 %	47.50 Hz
Voltage Unbalance Threshold		0 %	0.00 V	
Voltage Unbalance Hysteresis		0 %	0.00 V	

Annexe I - 5. Power management screen

Power Management settings are used so as to set the supply ratings for metering purposes (Power bar graph included on the status screen of the Webserver) as well as capacity management through load shedding.

Status & Control
Settings
Power Management
Timers
I/O
Exerciser
COM
Events
Reset

Source 1	
SI Power supply Nominal Rating (Threshold)	0 kVA
SI Power supply Hysteresis (Overload/Load Shedding)	0 kVA

Source 2	
SI Power supply Nominal Rating (Threshold)	0 kVA
SI Power supply Hysteresis (Overload/Load Shedding)	0 kVA

Annexe I - 6. Timers screen

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
------------------	----------	------------------	---------------	-----	-----------	-----	--------	-------

Screen 1 Screen 2 Screen 3

▼	Source 1
▼	Source 2
▼	Zero Position
▼	Load Shedding

Annexe I - 6.1. Timers screen 1

▲	Source 1	
S1 Failure Timer	1FT	13 s ⬆
S1 Return Timer	1RT	3 s ⬆

▲	Source 2	
S2 Failure Timer	2FT	3 s ⬆
S2 Available Time (Stab M-G)	2AT	3 s ⬆

▲	Zero Position	
Zero Dead Band Timer	ODT	2 s ⬆

▲	Load Shedding	
Pre-Transfer Load Shedding Timer	LST	4 s ⬆

Annexe I - 6.2. Timers screen 2

Timers screen 2 is applicable and only available for Main – Gen applications. When the “Type of Application” configuration under “Settings” is set to Main – Main, this screen will be hidden.

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
------------------	----------	------------------	---------------	-----	-----------	-----	--------	-------

Screen 1 **Screen 2** Screen 3

▼	Externally Controlled-On Load
▼	Externally Controlled-Off Load

Annexe I - 6.3. Timers screen 2 – configuration details

Externally Controlled-On Load		
Ext On Load Start Dealy Timer	E1T	5 s ↕
Ext On Load Duration Limit	Unlimited ▼	
Ext On Load Duration Timer	E2T	600 s ↕
Ext On Load End Timer	E3T	5 s ↕
Ext On Load Location Limit	Limited ▼ Unlimited Limited	

Externally Controlled-Off Load		
Ext Off Load Start Dealy Timer	E5T	5 s ↕
Ext Off Load Duration Limit	Limited ▼	
Ext Off Load Duration Timer	E6T	600 s ↕
Ext Off Load End Timer	E7T	5 s ↕
Ext Off Load Location Limit	Unlimited ▼ Unlimited Limited	

Annexe I - 6.4. Timers screen 3

Same as with Timers screen 2, Timers screen 3 is applicable and only available for Main – Gen applications. When the “Type of Application” configuration under “Settings” is set to Main – Main, this screen will be hidden.

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
Screen 1 Screen 2 Screen 3								
Test On/Off Load								
GENSET								

Annexe I - 6.4.1. Timers screen 3 – configuration details

Test On/Off Load		
Test On Load Limit	Unlimited ▼	
Test On Load Timer	TOT	10 s ↕
Test Off Load Limit	Unlimited ▼	
Test Off Load Timer	TFT	20 s ↕
Test On Load End Timer	T3T	0 s ↕

Test On Load Limit	Unlimited ▼ Unlimited Limited
Test Off Load Limit	Unlimited ▼ Unlimited Limited

⬆ GENSET

S2 Cool Down Timer	2CT	15 s ⬆
S2 Start Time Out Timer	2ST	30 s ⬆
S2 Max Reset Timer (Batt Charge)	EET	168 hrs ⬆
S2 Run Timer (Batt Charge)	EDT	30.00 min ⬆

Annexe I - 7. Input and output configuration screen

Further to the 5 fixed inputs and 2 outputs, the ATyS p has an additional 6 programmable inputs and 1 programmable output as standard included on the ATS controller.

Status & Control

Settings

Power Management

Timers

I/O

Exerciser

COM

Events

Reset

Inputs

Outputs

✓ Internal Input

✓ External Input

Annexe I - 7.1. Programmable inputs – configuration details

The inputs included with the standard ATyS p (without extension module I/O) are referred to as “Internal Inputs”. The programmable inputs can be configured to any of the available functions as listed below. All the inputs may be configured as normally open or normally closed contacts through the software as shown below.

⬆ Internal Input

I/P: In1	None ▼	Normally Open ▼	417/413
I/P: In2	None ▼	Normally Open ▼	417/414
I/P: In3	None ▼	Normally Open ▼	417/413
I/P: In4	None ▼	Normally Open ▼	417/416
I/P: In5	None ▼	Normally Open ▼	207/208
I/P: In6	None ▼	Normally Open ▼	207/209

In addition to the internal inputs the ATyS p may include up to 4 extension I/O modules plugged into the top of the ATS controller. Up to 8 additional inputs are included when using 4 modules. (Optional)

External Input				
I/P: In7	None ▼		Normally Open ▼	I13/I14
I/P: In8	None ▼		Normally Open ▼	I23/I24
I/P: In9	None ▼		Normally Open ▼	I13/I14
I/P: In10	None ▼		Normally Open ▼	I23/I24
I/P: In11	None ▼		Normally Open ▼	I13/I14
I/P: In12	None ▼		Normally Open ▼	I23/I24
I/P: In13	None ▼		Normally Open ▼	I13/I14
I/P: In14	None ▼		Normally Open ▼	I23/I24

The list of available inputs is selected from the following options below. Depending on user requirements, the same function may be applied to more than 1 input. (This applies to internal, external as well as mixed inputs).

None ▲	▲
AL1 - External Alarm 1 S1 without 0 return	RST - Fault Reset
AL2 - External Alarm 2 S2 without 0 return	RTC - Remote Transfer to Priority Source
EFL - External Order Off Load	SS1 - S1 Stabilisation Time Delay Bypass
EOL - External Order On Load	TOL - Test On Load
FT1 - External Fault 1 S1 with 0 return	TR1 - Validate Exerciser Time Range 1
FT2 - External Fault 2 S2 with 0 return	TR2 - Validate Exerciser Time Range 2
INH - Inhibition of the automation	TR3 - Validate Exerciser Time Range 3
LSI - Load Shedding time delays bypass	TR4 - Validate Exerciser Time Range 4
MSR - Hold on Source 2 (Priority to TOL/EOL)	SS2 - S2 Stabilisation Time Delay Bypass
OA1 - Define S1 as Available	TFL - Test Off Load
OA2 - Define S2 as Available	

Annexe I - 7.2. Programmable outputs – configuration details

Status & Control

Settings

Power Management

Timers

I/O

Exerciser

COM

Events

Reset

Inputs

Outputs

Internal Output

External Output

The programmable output included with the standard ATyS p (without extension module I/O) is referred to as “Internal Output” This output can be normally open or normally closed and configured to any of the available functions as listed below. Note: When the ATyS p is not powered the output will be open.

Internal Output			
O/P: Out1	POP - Product Available (No Fault) ▼	Normally Open ▼	O13/O14

In addition to the internal output the ATyS p may include up to 4 extension I/O modules plugged into the top of the ATS controller. Up to 8 additional outputs are included when using 4 modules. (Optional)

External Output				
O/P: Out2	None - Default ▼		Normally Open ▼	O13/O14
O/P: Out3	None - Default ▼		Normally Open ▼	O23/O24
O/P: Out4	None - Default ▼		Normally Open ▼	O13/O14
O/P: Out5	None - Default ▼		Normally Open ▼	O23/O24
O/P: Out6	None - Default ▼		Normally Open ▼	O13/O14
O/P: Out7	None - Default ▼		Normally Open ▼	O23/O24
O/P: Out8	None - Default ▼		Normally Open ▼	O13/O14
O/P: Out9	None - Default ▼		Normally Open ▼	O23/O24

The list of available outputs may be selected from the following options below. Depending on user requirements, the same function may be applied to more than 1 output. (This applies to internal, external as well as mixed outputs). Programmable outputs may be configured as normally open or normally closed.

Normally Open ▼
Normally Open
Normally Close

POP - Product Available (No Fault) ▼	
None - Default	C06 - Copy of Input number 6: Terminal 209
S1A - Supply Source 1 Available	C07 - Copy of Input number 7: Optional Slot 1
S2A - Supply Source 2 Available	C08 - Copy of Input number 8: Optional Slot 1
SCA - Source 1 and/or Source 2 Available	C09 - Copy of Input number 9: Optional Slot 2
CA1 - Transfer Switch in Position I	C10 - Copy of Input number 10: Optional Slot 2
CA2 - Transfer Switch in Position II	C11 - Copy of Input number 11: Optional Slot 3
CA0 - Transfer Switch in Position O	C12 - Copy of Input number 12: Optional Slot 3
L01 - Source 1 Available with Switch in Position 1	C13 - Copy of Input number 13: Optional Slot 4
L02 - Source 2 Available with Switch in Position 2	C14 - Copy of Input number 14: Optional Slot 4
LSC - Pre-Transfer Signal (Load Shedding 1)	LCK - Product Locked (Padlocked)
FLT - Internal or External Fault Condition	PTS - Power Threshold Exceeded (Load Shedding 2)
POP - Product Available (No Fault)	COM - Set output state through MODBUS
C01 - Copy of Input number 1: Terminal 413	EES - Battery charge signal
C02 - Copy of Input number 2: Terminal 414	
C03 - Copy of Input number 3: Terminal 415	
C04 - Copy of Input number 4: Terminal 416	
C05 - Copy of Input number 5: Terminal 208	

Annexe I - 8. Engine exerciser screen

The ATyS p includes a programmable engine exerciser with four independent customizable routines to exercise the engine and Genset. Exercising may be carried out with or without loads, on a daily, weekly, bi-weekly monthly or yearly basis. It is also possible to configure non-cyclic exercise runs when using Easy Config software.

Note 1: Ensure that the TOT and TFT timers are set to UNL when using the Engine Exerciser.

Note 2: The engine exerciser may also be set directly through the built in webserver.

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
------------------	----------	------------------	--------	-----	-----------	-----	--------	-------

✓	GENSET
✓	Custom 1
✓	Custom 2
✓	Custom 3
✓	Custom 4

Annexe I - 8.1. Engine exerciser – configuration details

The Genset minimum idle time to run is used to define the minimum time that the Genset must be OFF so as to start an engine exerciser sequence. This time is defined so as to avoid exercising the Genset unnecessarily such as immediately after a start due to a loss of supply.

⬆ GENSET	
Min Idle Time To Run	0.00 hrs ⬆

Exercising may be carried out with or without loads (On Load or Off Load), on a daily, weekly, bi-weekly, monthly, yearly or non cyclic basis as shown in the custom setting screens below. Configuration may be done on one as well as on all four custom settings. When not using a custom setting simply configure as “Not Used” .

The screens below apply to Custom settings 1 to 4.

⬆ Test On/Off Load	
Exerciser Type Set	On Load ▼
Periodic Schedule Set	Daily ▼
Validation Type	By Auto ▼
Start Date and Time	3/8/2013 ▼ 4:12:00 PM ⬆
Start Day of Week	Friday ▼
End Date and Time	3/8/2013 ▼ 4:14:00 PM ⬆
End Day of Week	Wednesday ▼

Exerciser Type Set	On Load ▼
	Not Used
	On Load
	Off Load

Periodic Schedule Set	Daily ▼ Daily Weekly Bi Weekly Monthly Yearly Non Cyclic
Validation Type	By Auto ▼ By J-Bus By Input By Auto

Annexe I - 9. Saving the configured settings

The settings may be saved in the ATyS p at the end of the configuration process or in intermediate milestones. Saving in the ATyS is to be done with the product connected and powered with communication running. Once this mode is ensured simply click on Send to Device. The settings may also be saved in a file in electronic format for later retrieval or multiple product programming. The settings may also be exported to a CSV file that may be converted in Excel for hard copy records of the configuration settings.

The software will display a confirmation message once any such operation is successful.



Annexe I - 10. Event recording screen

The ATyS p includes an event recording data logger supported by a real time clock (RTC) that enables to record and timestamp an extensive series of events.

Status & Control	Settings	Power Management	Timers	I/O	Exerciser	COM	Events	Reset
------------------	----------	------------------	--------	-----	-----------	-----	--------	-------

Diagnostics	View All Events ▼	View	Export
-------------	-------------------	------	--------

To view a series of events select the desired series from the list below and click view. A popup with the message “Getting Events” will appear during a few seconds until the data uploads.

View All Events ▼

- View All Events
- View Supply Source 1 Events
- View Supply Source 2 Events
- View Test On Load and Test Off Load Events (TOL & TFL)
- View Switch Position Change Events
- View Configuration Changes Events
- View Product Timer Events
- View Product Status Change Events
- View Counter Reset Events
- View Load Shedding Events
- View Engine Exerciser Events
- View Product Fault Events
- View Power Management Events (On/Off)
- View Configuration Events
- View Reset Events
- View Software Identification Events

Getting Events...

View

The software will upload the last 16 events with the latest displayed on top. (Line 1). Should you require to go further back into the history of events simply click on NEXT at the bottom of the screen. This will upload another 16 events that occurred prior to events already displayed. Events are all labeled with a Line number, a time and date stamp as well as the event details.

Diagnostics	View All Events ▼	View	Export
Line N°	Timestamp	Event Detail	
1	3/27/2013 5:11:12 PM	Source 2 Underfrequency	
2	3/27/2013 5:11:11 PM	Source 2 Undervoltage	
3	3/27/2013 5:11:11 PM	StartGen idle timer	
4	3/27/2013 5:11:11 PM	Source 2 Lost	
5	3/27/2013 5:10:21 PM	StartGen idle timer	
6	3/27/2013 5:10:21 PM	Source 2 comes back	
7	3/27/2013 5:10:20 PM	StartGen idle timer	
8	3/27/2013 5:10:20 PM	Source 2 Lost	
9	3/27/2013 5:10:20 PM	StartGen idle timer	
10	3/27/2013 5:10:20 PM	Source 2 comes back	
11	3/27/2013 5:10:20 PM	Source 2 Underfrequency	
12	3/27/2013 4:07:48 PM	Source 2 Underfrequency	
13	3/27/2013 4:07:48 PM	Source 2 Undervoltage	
14	3/27/2013 4:07:48 PM	StartGen idle timer	
15	3/27/2013 4:07:47 PM	Source 2 Lost	
16	3/27/2013 3:20:17 PM	Configuration changed	

Once the required events have been uploaded it is possible to export the history of events viewed in CSV or converted to EXCEL format and customized as per user preference.

Export

The ATyS p can store up to 5000 events on a FIFO basis.

Line N°	Timestamp	Event Detail
1	3/27/2013 5:11:12 PM	Source 2 Underfrequency
2	3/27/2013 5:11:11 PM	Source 2 Undervoltage
3	3/27/2013 5:11:11 PM	StartGen idle timer
4	3/27/2013 5:11:11 PM	Source 2 Lost
5	3/27/2013 5:10:21 PM	StartGen idle timer
6	3/27/2013 5:10:21 PM	Source 2 comes back
7	3/27/2013 5:10:20 PM	StartGen idle timer
8	3/27/2013 5:10:20 PM	Source 2 Lost
9	3/27/2013 5:10:20 PM	StartGen idle timer
10	3/27/2013 5:10:20 PM	Source 2 comes back
11	3/27/2013 5:10:20 PM	Source 2 Underfrequency
12	3/27/2013 4:07:48 PM	Source 2 Underfrequency
13	3/27/2013 4:07:48 PM	Source 2 Undervoltage
14	3/27/2013 4:07:48 PM	StartGen idle timer
15	3/27/2013 4:07:47 PM	Source 2 Lost
16	3/27/2013 3:20:17 PM	Configuration changed

Annexe I - 11. Super User added functionality

The ATyS p includes added functionality such as Remote Control and Set/Reset functionality of the ATyS p. This functionality may be accessed by a Super User only with the appropriate rights and a password. To access this functionality, log as Super User as follows:

User

Change Profile

Profile Management

Login

Profile Level

Super User

Password

User

Administrator

Super User

Socomec

Profile Management

Login

Profile Level

Super User

Password

.....

Super User

Change Profile

Annexe I - 11.1. Control panel

Annexe I - 11.1.1. Operating mode

When connected as a Super User the Status Screen will include a “Control Panel” section at the bottom part of the screen as shown below. This section is dedicated to “Remote Commands” that allows the user to send orders to the ATyS p as described below. For convenience, clarity and added safety, sending remote orders are confirmed by clicking on “Apply Buttons” adjacent to the applicable control orders confirmed.

Status & Control

Settings

Power Management

Timers

I/O

Exerciser

COM

Events

Reset

I

II

0

●

●

●

●

TEST OFF LOAD

TEST ON LOAD

REMOTE / LOCAL CTRL

AUTO

PRODUCT AVAILABLE

Source 1 - Available

Source 2 - Available

Load on Source 1

●

●

●

●

●

●

●

●

READY

●

Set Operating Mode	Select Operating Mode ▼	Apply
Switch between positions I-0-II	Select Position ▼	Apply
Set Command Type	Select Command Type ▼	Apply
SET/RESET Alarms & Faults	Select Alarm & Fault Action ▼	Apply
Start Date and Time	3/8/2013 ▼ 7:00:18 PM ▼	Apply Sync To PC

To initiate a specific operating mode select from the modes listed and click on Apply. A popup message will appear on the screen once the operation is successful. When selecting Remote Control Mode, the Remote / Local Ctrl LED will light up and all other functions such as “Select Position” become active.

Set Operating Mode

Set to “REMOTE CONTROL MODE” ▼

Select Operation Mode
Set to “AUTO Mode”
Set to “INHIBIT” Mode
Set to “REMOTE CONTROL MODE”

Apply

I
II

TEST OFF LOAD
TEST ON LOAD
REMOTE / LOCAL CTRL
AUTO

PRODUCT AVAILABLE
Source 1 - Available
Source 2 - Available
Load on Source 1

READY

Annexe I - 11.1.2. Remote position switching I – 0 - II

When the ATyS p is in remote control mode the Super User can change switch positions through the software. This is done by first selecting the desired position to switch to and clicking on Apply. A popup message will appear on the screen once the operation is successful and the LED on the status display will change according to the new position reached.

Switch between positions I-0-II

Select Position ▼

Switch to position “ 0 ”
Switch to position “ I ”
Switch to position “ II ”

Apply

I
II

TEST OFF LOAD
TEST ON LOAD
REMOTE / LOCAL CTRL
AUTO

PRODUCT AVAILABLE
Source 1 - Available
Source 2 - Available
Load on Source 1

READY

I
II

TEST OFF LOAD
TEST ON LOAD
REMOTE / LOCAL CTRL
AUTO

PRODUCT AVAILABLE
Source 1 - Available
Source 2 - Available
Load Off

READY

Annexe I - 11.1.3. Remote command orders

The ATyS p accepts remote commands as included in the list below. Simply select the requested order type and click on the Apply button to activate. A popup message will appear on the screen once the operation is successful and the LED on the status display will change for Test On Load and Test Off Load orders.

Set Command Type

Select Command Type ▼

Select Command Type

SET RTE

RESET TFL: Test Off Load

SET TFL: Test Off Load

SET TOL: Test On Load

SET EFL : External Order Off Load

SET EOL: External Order On Load

RESET EOF: External Order Off Load

RESET EOL: External Order On Load

Apply

Annexe I - 11.1.4. Remote set and reset of alarms and faults

The ATyS p accepts remote commands to set and reset alarms and faults as included in the list below. Simply select the requested order type and click on the Apply button to activate. A popup message will appear on the screen once the operation is successful. Should the operation be a fault reset the Fault and Ready LED's on the status display will change be reset.

SET/RESET Alarms & Faults

Select Alarm & Fault Action ▼

Select Alarm & Fault Action

RESET Alarm Faults

SET External Fault 1

SET External Fault 2

SET External Alarm 1

SET External Alarm 2

Apply

Annexe I - 11.1.5. Remote real time clock setting

The ATyS p accepts remote setting of the time and date by using the combo boxes shown below. The user will first need to freeze the display (avoids refreshing the time while setting) and then send the selected date and time settings to the product by clicking on Apply.

Should the time and date required match those on the Super User's computer, one may click the Sync To PC button without setting the time manually. In both cases a popup message will appear on the screen once the operation is successful and the new date and times set will be displayed.

Start Date and Time

03/2013						
Su	Mo	Tu	We	Th	Fr	Sa
24	25	26	27	28	1	2
3	4	5	6	7	8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30
31	1	2	3	4	5	6

3/8/2013 ▼

7:00:18 PM ▴

Apply

Sync To PC

Annexe I - 11.2. Reset screen

When connected as a Super User, the ATyS p software includes a screen where a user can RESET various recorded data as listed below.

Annexe I - 11.2.1. Reset Functionality (Settings, Counters, Alarms, Events)

Status & ControlSettingsPower ManagementTimersI/OExerciserCOMEventsReset

▼

▼ Memory/Events

▼ Partial Counters Source 1

▼ Partial Counters Source 2

▼ Genset Counters

To reset a specific parameter click on the associated “RESET Button” adjacent to the data you want to reset. Attn: Once the reset command is confirmed, the data will be permanently deleted. A popup message will appear on the screen once the operation is successful.

To reset all settings in the product back to the factory default settings click on the Reset button in the Factory Settings section:

▲ Reset product to factory default settings

Reset product to factory default settingsReset

To reset all records relevant to time-stamped history of events click on the Reset button in the Memory / Events section as listed below:

▲ Reset product to factory default settings

EventsReset

ENGLISH

To reset specific records relevant to Source supply 1 energy partial counters click on the Reset button in the Partial Counters Source 1 section as listed below:

Partial Counters Source 1					
	Active Power Negative: S1 Ea -		0	kWh	Reset
	Active Power Negative: S1 Ea -		0		Reset
	Reactive Power Positive: S1 Er +		0		Reset
	Reactive Power Negative: S1 Er -		0		Reset
	Apparent Power: S1 Es		0		Reset
	Hour Meter: Load supplied from Source 1		4769.68		hrs

To reset specific records relevant to Source supply 2 energy partial counters click on the Reset button in the Partial Counters Source 2 section as listed below:

Partial Counters Source 2					
	Active Power Negative: S2 Ea -		0	kWh	Reset
	Active Power Negative: S2 Ea -		0	kWh	Reset
	Reactive Power Positive: S2 Er +		0	kVarh	Reset
	Reactive Power Negative: S2 Er -		0	kVarh	Reset
	Apparent Power: S2 Es		0	kVAh	Reset
	Hour Meter: Load supplied from Source 2		0	hrs	Reset

To reset specific records relevant to generator counters click on the Reset button in the Genset Counters section as listed below:

Genset Counters					
	Engine Starts Signal		73		Reset
	Engine Run Time - On Load		1446.45	hrs	Reset
	Engine Run Time		579.43	hrs	Reset

Socomec worldwide

IN WESTERN EUROPE

BELGIUM

B - 1070 Bruxelles
Tel. +32 2 340 02 30
info.be@socomec.com

FRANCE

F - 94132 Fontenay-sous-Bois Cedex
Tel. +33 1 45 14 63 30
info.scp.fr@socomec.com

GERMANY

D - 76275 Ettlingen
Tel. +49 7243 65292 0
info.scp.de@socomec.com

ITALY

I - 20098 San Giuliano Milanese (MI)
Tel. +39 02 98 49 821
info.scp.it@socomec.com

NETHERLANDS

NL - 3991 CD Houten
Tel. +31 30 760 0900
info.nl@socomec.com

SPAIN

E - 08329 Teià (Barcelona)
Tel. +34 93 540 75 75
info.es@socomec.com

UNITED KINGDOM

Hitchin Hertfordshire SG4 0TY
Tel. +44 1462 440 033
info.scp.uk@socomec.com

IN EASTERN EUROPE, MIDDLE EAST, AFRICA

POLAND

01-625 Warszawa
Tel. +48 91 442 64 11
info.scp.pl@socomec.com

ROMANIA

02383 Bucharest
Tel. +40 21 319 36 88
info.ro@socomec.com

RUSSIA

125167 - Moscow
Tel. +7 495 775 19 85
info.ru@socomec.com

SLOVENIA

SI - 1000 Ljubljana
Tel. +386 1 5807 860
info.si@socomec.com

TURKEY

34775 Istanbul
Tel. +90 216 540 71 20-21-22
info.tr@socomec.com

UNITED ARAB EMIRATES

Dubai, U.A.E.
Tel. +971 4 29 98 441
info.ae@socomec.com

IN ASIA

CHINA

P.R.C 200052 Shanghai - China
Tel. +86 21 52 98 95 55
info.cn@socomec.com

INDIA

122001 Gurgaon, Haryana - India
Tel. +91 124 4027210
info.scp.in@socomec.com

SINGAPORE

Singapore 408723
Tel. +65 6506 7600
info.sg@socomec.com

IN NORTH AMERICA

USA, CANADA & MEXICO

Cambridge, MA 02142 USA
Tel. +1 617 245 0447
info.us@socomec.com

HEAD OFFICE

SOCOMECH GROUP

S.A. SOCOMECH capital 10 816 800 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex - FRANCE



www.socomec.com

INTERNATIONAL SALES DEPARTMENT

SOCOMECH

1, rue de Westhouse - B.P. 60010
F - 67235 Benfeld Cedex - FRANCE
Tel. +33 (0)3 88 57 41 41
Fax +33 (0)3 88 74 08 00
info.scp.isd@socomec.com

YOUR DISTRIBUTOR



Annexe II. Programming with the ATyS p keypad




Annexe II. Programming with the ATyS p keypad

Annexe II - 1. Getting started - Software Version

When the ATyS p is powered for the first time the software version will be displayed on the LCD screen.

This is also displayed after a product reset.
(A 3 minute power off will allow for this type of reset).

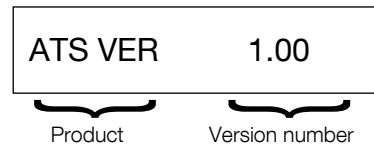

Annexe II - 2. Keypad Operational Modes

Annexe II - 2.1. VISUALISATION :


Measured values & parameter timers display.
Always accessible without a password code.

Annexe II - 2.2. OPERATION:

Test sequences or electrical control of the position.
Password access (code 0000).

Annexe II - 2.3. PROGRAMMING:

Parameters configuration.
Password access (code 1000).

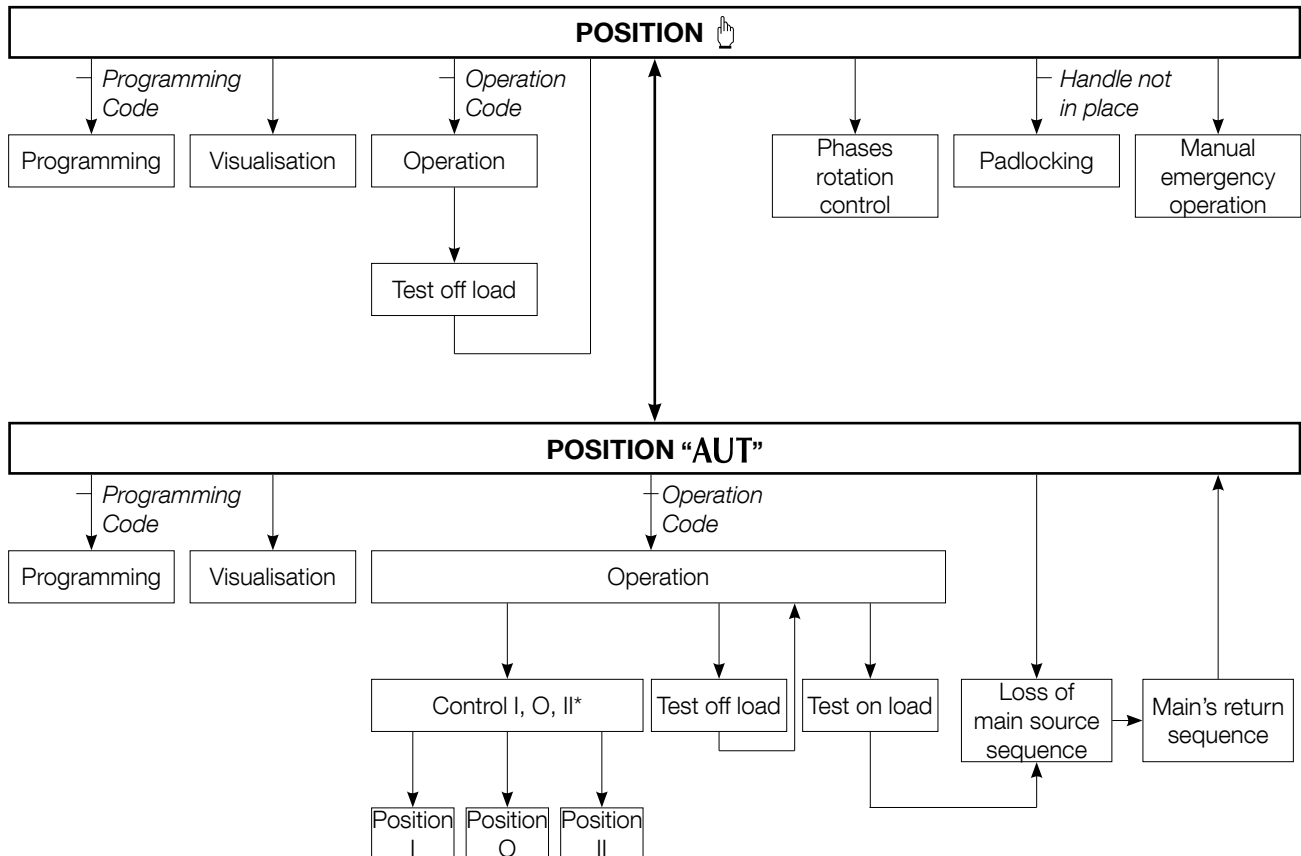

NOTE:

One can quit the menu without saving by pressing the ESC key.

Annexe II - 3. Keypad programming - general information

Programming mode allows product parameter configuration through the keypad:

- It is always accessible when the product is in Manual position
- It is always accessible in AUT with the load on the priority source and priority source available.

The minimum configuration parameters that must be programmed before use are:

- type of network
- nominal voltage
- nominal frequency.

Navigation in the menus



or

- **Parameters access:** Press “up”, “down”, “left” & “right” push buttons



+



- **Parameter modification:** press “right” push button to access the parameter to modify
Press “up” and “down” push buttons to modify the parameter and “validate”

+



- **Return to main menu:** press “ESC” pushbutton. Value is only modified after validation

Programming



- **Step 1:** press and hold for 5 s “validation” push button



- **Step 2:** enter code (factory code = 1000) using navigation push buttons



- **Step 3:** press validation push button

Programming exit



- Press and hold for 5 s “validation” push button

NOTE:

One can quit the menu without saving by pressing the “ESC” key.

Annexe II - 4. Configuration navigation screen

1	SETUP	2	VOLT. LEVELS	3	FREQ. LEVELS	4	PWR. LEVELS	5	TIMERS VALUE	6	I-O	7	COMM	8	DATE/TIME
NETWORK	4NBL	OV. U	I 115%	OV. F	I 105%	OV.P	I 0000 kVA	1FT	0003 SEC	IN 1	---	NO	DHCP	NO	(9) YEAR
AUTOCONF	NO	(7) OV. U HYS	I 110%	OV. F HYS	I 103%	OV.P HYS	I 0000 kVA	1RT	0180 SEC	IN 2	---	NO	IP 1-2	192.168.	MONTH
NEUTRAL	AUTO	UND. U	I 085%	UND. F	I 095%	OV.P	II 0000 kVA	2FT	0003 SEC	IN 3	---	NO	IP 3-4	.002.001	(9) DAY
ROT PH.	---	UND. U HYS	I 095%	UND. F HYS	I 097%	OV.P HYS	II 0000 kVA	2RT	0005 SEC	(2) IN 4	---	NO	GAT1-2	000.000.	HOUR
NOM. VOLT	400 V	UNB. U	I 00%	OV. F	II 105%			2AT	0005 SEC	(1) IN 5	---	NO	GAT3-4	.000.000	(9) MINUTE
NOM. FREQ	50 Hz	UNB. U HYS	I 00%	OV. F HYS	II 103%			2CT	0180 SEC	(1) IN 6	---	NO	MSK1-2	255.255.	SECOND
APP	M-G	OV. U	II 115%	UND. F	II 095%			2ST	0030 SEC	(1) IN 7	---	NO	(8) MSK3-4	.255.000	(9)
PRIOTON	NO	(1) OV. U HYS	II 110%	UND. F HYS	II 097%			ODT	0003 SEC	IN 8	---	NO	(8) ADDRESS	005	
PRIEON	NO	(3) UND. U	II 085%					TOT	UNL	(1) IN 9	---	NO	(8) BDRATE	9600	
PRIONET	1	(2) UND. U HYS	II 095%					TOT	0010 SEC	(1) IN10	---	NO	(8) STOP BIT	1	
RETRANS	NO	UNB. U	II 00%					T3T	0000 SEC	(1) IN11	---	NO	(8) PARITY	NONE	
CT PRI	100	UNB. U HYS	II 00%					TFT	UNL	(1) IN12	---	NO	(8)		
CT SEC	5							TFT	0600 SEC	(1) IN13	---	NO	(8)		
S1=SW2	NO							E1T	0005 SEC	(3) IN14	---	NO	(8)		
BACKLGH	INT							E2T	UNL	(3) OUT 1	POP	NO			
CODE P	1000							E2T	0010 SEC	(3) OUT 2	---	NO	(8)		
CODE E	0000							E3T	0005 SEC	(3) OUT 3	---	NO	(8)		
BACKUP	SAVE							E5T	0005 SEC	(4) OUT 4	---	NO	(8)		
								E6T	LIM	(4) OUT 5	---	NO	(8)		
								E6T	0600 SEC	(4) OUT 6	---	NO	(8)		
								E7T	0005 SEC	(4) OUT 7	---	NO	(8)		
								LST	0004 SEC	(5) OUT 8	---	NO	(8)		
								EET	0168 H	(6) OUT 9	---	NO	(8)		
								EDT	1800 SEC	(6)					

- (1) When "APP" is set to "M-G"
 (2) When "APP" is set to "M-M"
 (3) When one of the I/P is set to "EON"
 (4) When one of the I/P is set to "EOF"
 (5) When one of the O/P is set to "LSC"
 (6) When one of the O/P is set to "EES"
 (7) If the product is in manual mode
 (8) With optional I/O modules
 (9) With Ethernet module

Setup by Auto Configuration
 (Volts, Hz, Neutral pos., Ph rotation)


Press 5s	
Go To	1 SETUP
Scroll to	AUTOCONF
Enter code	1000
Set to	YES
Press 60 ms	
LEDs flash	
Save : press 5s	

Note: Source **I** or source **II** must be available to set by Auto Configuration.

Annexe II - 5. Parameter modifications

> Example:

To modify network nominal voltage from 400 to 230 V.

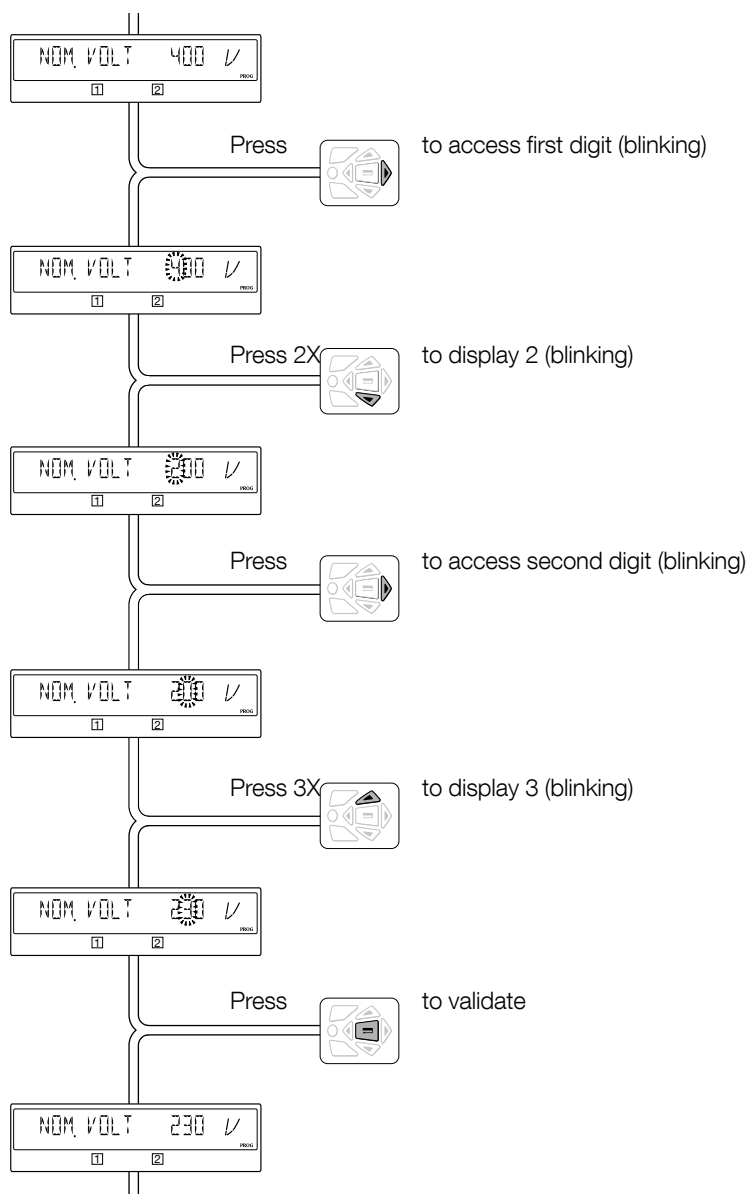

Annexe II - 6. Setup menu – keypad navigation


1 SETUP					
		Definition	Adjustment Range	M-G	M-M
NETWORK	4NBL	Network Type	1BL/2BL/2NBL/3BL/3NBL 4BL/4NBL/41NBL/42NBL	•	•
AUTOCONF	NO	Auto Configuration: (visible in manual mode) Network Voltage, Frequency, phase rotation and neutral position	NO YES	•	•
NEUTRAL	AUTO	Neutral Position: visible if the makes sense with the seleted network type. Neutral fixed on the LEFT - (N, L3, L2, L1) Neutral fixed on the RIGHT - (L1, L2, L3, N) Auto Detection of Neutral LEFT or RIGHT	LEFT RIGHT AUTO	•	•
ROT PH.	---	Select and Verify Phase Rotation as: compatible between S1 and S2, ABC or ACB visible if the makes sense with the seleted network type. It is also possible to check for consistency of direction of rotation between 2 sources (----). (Refer to ** Phase Rotation Check” below for details). Both supply sources must be present for this verification.	ABC ACB ----	•	•
NOM. VOLT	400 V	Nominal Network Voltage	1BL: 208-277V 2NBL: 208-277V: 416-554V Others: 208-277V: 360 – 479V	•	•
NOM. FREQ	50 Hz	Nominal Network Frequency	50Hz 60Hz	•	•
APP	M-G	Application Type: M – G: Main Network to Genset Supply M – M: Main to Main Supply	M – G M - M	•	•
PRIOTON	NO	In case of a Test On Load sequence, in case source 2 is no longer available you may: NO - Exit the test and switch to source 1 YES - Stay in position II Note: The MSR input (refer to I/O Menu) takes priority over this parameter.	NO YES	•	
PRIEON	NO	In case of an External Test On Load, in case source 2 is no longer available you may: NO - Exit the test and switch to source 1 YES - Stay in position II Note: The MSR input (refer to I/O Menu) has priority over this parameter.	NO YES	•	
PRIOTNET	1	This is to define the priority network: 1: Network 1 has priority 2: Network 2 has priority 0: Neither network has priority Note: The PRI input (refer to menu I/O) has priority over this parameter. (Main – Main applications)	1 2 0		•
RETRANS	NO	Inhibit the automatic retransfer: NO: Automatic retransfer to the priority source YES: "Valid" or input RTC must be pressed to execute the return to priority.	NO YES	•	•
CT PRI	0000	Current Transformer primary rating	1 to 3200 A	•	•



1 SETUP					
		Definition	Adjustment Range	M-G	M-M
CT SEC	5	Current Transformer secondary rating	1A 5A	•	•
S1=SW2	NO	Inverted power section switch wiring. Switch 1 (Front) cabled as Switch 2 and Switch 2 (Back) cabled as Switch 1. NO: Not Inverted YES: Inverted	NO YES	•	•
BACKLIGHT	INT	The LCD backlight may be set to: OFF: Always Off ON: Always On INT: On after pressing the keypad and during operating sequences only. (Turned off after 2 minutes of inactivity).	OFF ON INT	•	•
CODE P	1000	Password Code to modify and save settings in Programming Mode. Default factory setting: 1000	0000 to 9999	•	•
CODE E	0000	Password Code to modify and save settings in Operating Mode. Default factory setting: 0000	0000 to 9999	•	•
BACKUP	SAVE	Save the settings in the backup so as to recall them later within the same menu. Load to charge the backup data	SAVE LOAD	•	•

Annexe II - 6.1. ** Phase rotation check:

This functionality checks the consistency of phase rotation i.e. of the wiring prior to commissioning.

Example: If the parameter ROT PH = ABC:

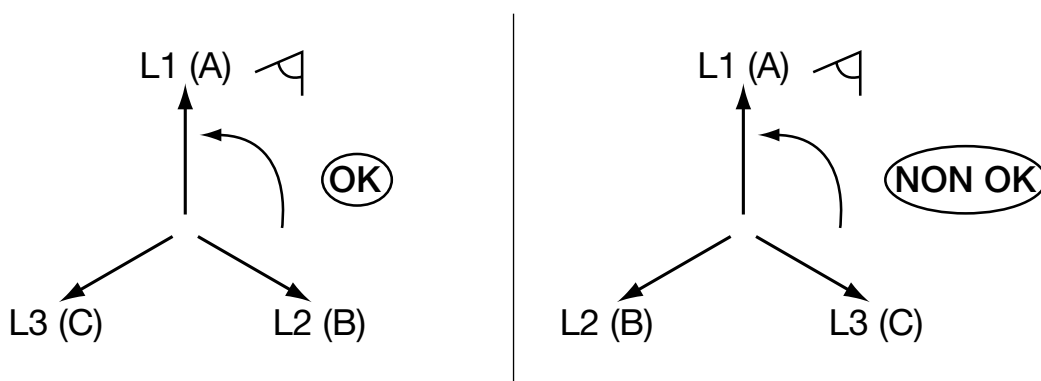

Display  or  depending on the non-compliant source
Rotation check on sources  and .



Function available on both sources in case of 4NBL/4BL or 3NBL/3BL type of network and only on source  in case of 41NBL or 42NBL network.

Annexe II - 7. Voltage levels menu – keypad navigation

2 VOLT. LEVELS						
			Definition	** Adjustment Range	M-G	M-M
OV. U	I	115%	Overvoltage threshold: Source Supply 1	102 – 130%	•	•
OV. U HYS	I	110%	Over-voltage hysteresis: Supply 1	101 – 129%	•	•
UND. U	I	085%	Undervoltage threshold: Supply 1	60 – 98%	•	•
UND. U HYS	I	095%	Undervoltage hysteresis: Supply 1	61 – 99%	•	•
UNB. U	I	00%	Phase unbalance threshold: Supply 1 Refer to next paragraph for further details	0 – 30%	•	•
UNB. U HYS	I	00%	Hysteresis unbalance threshold: Supply 1 Refer to next paragraph for further details	0 – 29%	•	•
OV. U	II	115%	Overvoltage threshold: Source Supply 2	102 – 130%	•	•
OV. U HYS	II	110%	Over-voltage hysteresis: Supply 2	101 – 129%	•	•
UND. U	II	085%	Undervoltage threshold: Supply 2	60 – 98%	•	•
UND. U HYS	II	095%	Undervoltage hysteresis: Supply 2	61 – 99%	•	•
UNB. U	II	00%	Phase unbalance threshold: Supply 2 Refer to next paragraph for further details	0 – 30%	•	•
UNB. U HYS	II	00%	Hysteresis unbalance threshold: Supply 2 Refer to next paragraph for further details. Note 0% = function disactivated	0 – 29%	•	•


** Adjustment range given:

- As a % of U nominal for Over and Undervoltage
- As a % of U avg in case of unbalances.


Annexe II - 7.1. Over-voltage and under-voltage

The thresholds and hystereses are defined as percentages of nominal voltage.


The hystereses define return to normal levels following an under-voltage or over-voltage.

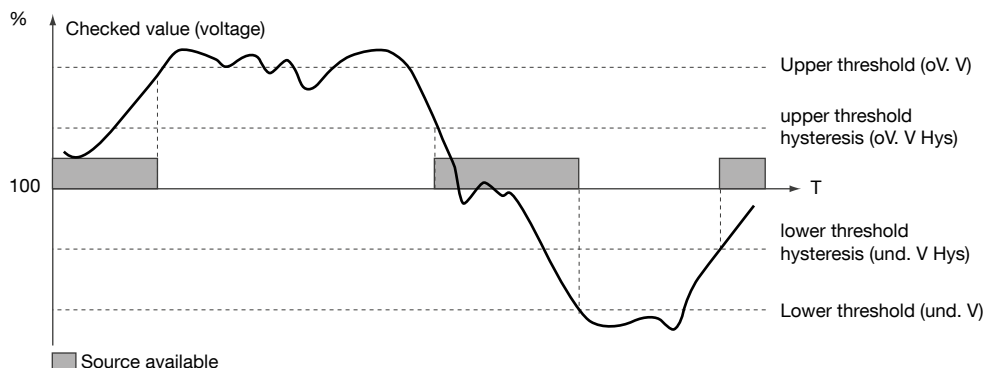

Annexe II - 7.2. Voltage unbalance measurement

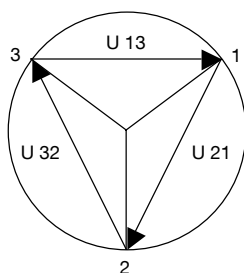

Balanced network

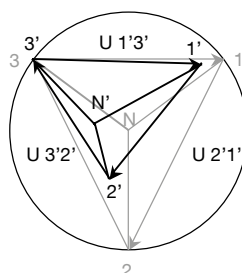

Unbalanced network

Annexe II - 8. Frequency levels menu – keypad navigation

3 FREQ. LEVELS						
			Definition	** Adjustment Range	M-G	M-M
OV. F	I	105%	Over Frequency Threshold: Source 1	102 – 130%	•	•
OV. F HYS	I	103%	Over Frequency Hysteresis: Source 1	101 – 129%	•	•
UND. F	I	095%	Under Frequency Threshold: Source 1	60 – 98%	•	•
UND. F HYS	I	097%	Under Frequency Hysteresis: Source 1	61 – 99%	•	•
OV. F	II	105%	Over Frequency Threshold: Source 2	102 – 130%	•	•
OV. F HYS	II	103%	Over Frequency Hysteresis: Source 2	101 – 129%	•	•
UND. F	II	095%	Under Frequency Threshold: Source 2	60 – 98%	•	•
UND. F HYS	II	097%	Under Frequency Hysteresis: Source 2	61 – 99%	•	•


** Adjustment range given:

- As a % of nominal frequency

Annexe II - 8.1. Under-frequency or over-frequency

The thresholds and hysteresis are defined as percentages of nominal frequency.

The hysteresis define return to normal levels following an under-frequency or over-frequency.

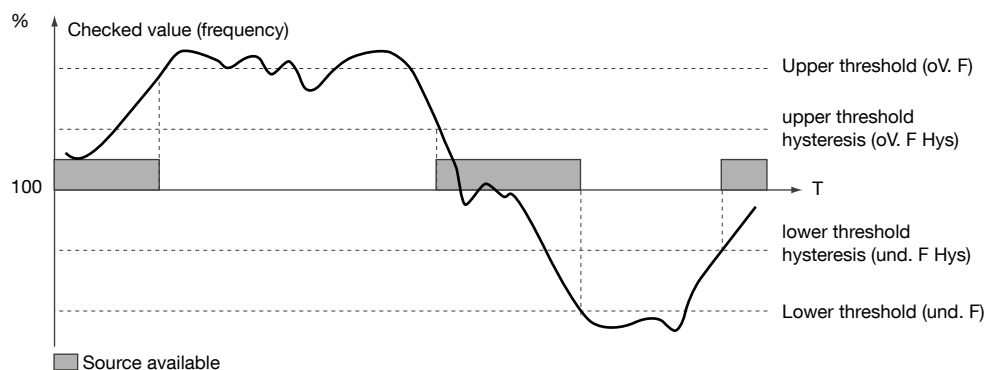

Annexe II - 9. Power levels menu – keypad navigation

Power level settings are set so as to define the source supply power ratings for metering purposes and for capacity management through load shedding. A metering power bar graph may be visualized through Webserver when the ATyS p is equipped with the optional Ethernet module.

4 PWR. LEVELS						
			Definition	** Adjustment Range	M-G	M-M
OV.P	I	0000 kVA	Supply Nominal Power Rating: Source 1 (Threshold)	0 to 2000kva	•	•
OV.P HYS	I	0000 kVA	Supply Nominal Power Hysteresis: Source 1 (Related to Load Shedding 2)	0 to 2000kva	•	•
OV.P	II	0000 kVA	Supply Nominal Power Rating: Source 2 (Threshold)	0 to 2000kva	•	•
OV.P HYS	II	0000 kVA	Supply Nominal Power Hysteresis: Source 2 (Related to Load Shedding 2)	0 to 2000kva	•	•

** Note: When set to "0" kva the power management function is disabled.

Annexe II - 10. Timers menu – keypad navigation

5 TIMERS VALUE						
			Definition	Adjustment Range	M-G	M-M
1FT	0003 SEC		Source 1 Failure Timer: When source 1 is considered lost, 1FT is started. If source 1 is considered restored before the end of 1FT, the changeover sequence will not be engaged.	0 – 60 seconds	•	•
1RT	0180 SEC		Source 1 Return Timer: When source 1 returns, 1RT is started. At the end of 1RT, source 1 is then considered to be present. Should source 1 disappear before the end of 1RT, the changeover will not be carried out. In case the alternate source disappears during 1RT, a dynamic 3 second delay will override the 1RT time setting value.	0 – 3600 seconds	•	•
2FT	0003 SEC		Source 2 Failure Timer: When source 2 is lost, 2FT is started. If source 2 is restored before the end of 2FT, the changeover sequence is not started.	0 – 60 seconds	•	•
2RT	0005 SEC		Source 2 Return Timer: When source 2 returns, 2RT is started. At the end of 2RT, source 2 is then considered to be present. Should source 2 disappear before the end of 2RT, the changeover will not be carried out.	0 – 3600 seconds		•
2AT	0005 SEC		Source 2 Available Timer: Stabilisation time delay for voltage and frequency on Source 2 . 2AT starts as soon as the source voltage is above the hysteresis value. Transfer to Source 2 may be done at the end of this time delay.	0 – 3600 seconds	•	

5 TIMERS VALUE					
		Definition	Adjustment Range	M-G	M-M
2CT	0180 SEC	Source 2 (Genset) Cool Down Timer: Following a return to source 1 sequence, the genset on source 2 is kept running for the 2CT timer duration. This is intended to cool down the genset (off load) before switching off.	0 – 600 Seconds	•	
2ST	0030 SEC	Source 2 Genset start timeout delay: This time delay is started as soon as the genset start signal is given. Should source 2 not become available after timer 2ST has elapsed a “FAIL START” error message is displayed on the product LCD.	0 – 600 Seconds	•	
ODT	0003 SEC	Zero Position, Dead Band Timer: This is the minimum electric dead time (blackout time) delay. This defines the minimum load supply down time in the 0 position so as to allow residual voltages that may be generated by the load (such as motors) to decay.	0 – 20 seconds	•	•
TOT	UNL	Test On Load Limited (LIM) / Unlimited (UNL) duration . LIM is to be selected when associating the test to a duration timer such as TOT. Note 1: If the value is set at UNL, the TOT is stopped either when the input is opened, or via the validation key. Note 2: When set to UNL, the test on load duration timer is deactivated as the duration becomes unlimited. ATTN: Set to UNL when using the engine exerciser	LIM (Limited) UNL (Unlimited)	•	
TOT	0000 SEC	Test On Load Duration Timer: This timer defines the On Load Test time. It starts counting when the Test is initiated. The return to the main supply takes place at the end of TOT. Note: TOT is visible in the timers menu when TOT (LIM/UNL) above is set to LIM.	0 – 1800 seconds	•	
T3T	0000 SEC	Test On Load – End Delay Timer: This time delay starts counting at the end of TOT Timer. The return to the main supply takes place at the end of T3T time.	0 – 1800 seconds	•	
TFT	UNL	Test Off Load Limited (LIM) / Unlimited (UNL) duration. LIM is to be selected when associating the test to a duration timer such as TFT below. Note 1: If the value is set at UNL, the TFT is stopped either when the input is opened, or via the validation key. Note 2: When set to UNL, the test on load duration timer is deactivated as the duration becomes unlimited. ATTN: Set to UNL when using the engine exerciser	LIM (Limited) UNL (Unlimited)	•	
TFT	0600 SEC	Test Off Load - Duration Timer: This time delay defines the On Load Test time. It starts counting when the Test is initiated. The return to the main supply takes place at the end of TFT. Note: TFT is visible in the timers menu when TOT (LIM/UNL) above is set to LIM.	0 – 1800 seconds	•	
E1T	0005 SEC	External Order Test On Load - Start Delay Timer. This time delay starts at the same time as the External On Load Test (EOL) order is received. At the end of this time delay, the Genset start order is activated. Once source supply 2 is available, the load is transferred to source supply 2. Note: E1T is visible in the timers menu when at least 1 input is configured as EOL.	0 – 1800 seconds	•	

5 TIMERS VALUE					
		Definition	Adjustment Range	M-G	M-M
E2T	UNL	External Order Test On Load Limited (LIM) / Unlimited (UNL) duration. LIM is to be selected when associating the test to a duration timer such as E2T below. When set to UNL, the test on load duration timer is deactivated as the duration becomes unlimited. Note 1: If the value is set at UNL, the TOT is stopped either when the input is opened, or via the validation key. Note 2: E2T is visible in the timers menu when at least 1 input is configured as EOL.	LIM (Limited) UNL (Unlimited)	•	
E2T	0010 SEC	External Order Test On Load - Duration Timer: This timer starts counting when the Test is initiated. The return to the main supply may initiate at the end of E2T time. Note: E2T duration timer is visible in the timers menu when at least 1 input is configured as EOL and with E2T (UNL/LIM) set to UNL.	0 – 1800 seconds	•	
E3T	0005 SEC	External Order Test On Load – End Delay Timer: This time delay starts counting at the end of E2T Timer. The return to the main supply takes place at the end of E3T time. Note: E3T duration timer is visible in the timers menu when at least 1 input is configured as EOL and with E2T (UNL/LIM) set to UNL.	0 – 1800 seconds	•	
E5T	0005 SEC	External Order Test Off Load - Start Delay Timer. This time delay starts at the same time as the External On Load (EFL) order is received. At the end of this time delay, the Genset start order is activated. The load will not be transferred to the Genset supply. Note: E1T is visible in the timers menu when at least 1 input is configured as EOL.	0 – 1800 seconds	•	
E6T	LIM	External Order Test Off Load Limited (LIM) / Unlimited (UNL) duration. LIM is to be selected when associating the test to a duration timer such as E6T below. When set to UNL, the test off load duration timer is deactivated as the duration becomes unlimited.	LIM (Limited) UNL (Unlimited)	•	
E6T	0600 SEC	External Order Test Off Load - Duration Timer: This timer starts counting when the Test is initiated.	0 – 1800 seconds	•	
E7T	0005 SEC	External Order Test On Load – End Delay Timer: This time delay starts counting at the end of E6T Timer. The Genset signal will switch at the end E7T.	0 – 1800 seconds	•	
LST	0004 SEC	Load Shedding - Time Delay (before transfer) Timer. This time delay corresponds to the time available to perform any load shedding operations downstream before the ATyS starts to changeover.	0 – 1800 seconds	•	•
EET	0168 H	S2 maximum reset timer - Battery Charger maximum Off Timer. This timer defines, the minimum time that the Genset must be switched off for output EES (Battery Charger Signal) to be activated.	0 – 168hrs Check ATyS M6e is 1100Hrs	•	
EDT	0000 SEC	S2 Run Timer - Battery Charger run timer.	0 – 9999 seconds	•	

Note:

It is recommended configure the inputs and outputs before the timers. All timers used with programmable outputs will only be active and visible to set the timings after the associated output has been configured.

(1): these time delays are only accessible and configurable if at least one programmable input is configured with the variable EON (see I/O menu)

(2): these time delays are only accessible and configurable if at least one programmable input is configured with the variable EOF (see I/O menu)

(3): if value is set at UNL, the test is stopped either when input is opened, or via validation key.

Annexe II - 11. I/O Menu – Keypad navigation

6 I-O						
			Definition	Adjustment Range	M-G	M-M
IN 1	---	NO	Internal: Programmable Input number 1	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 2	---	NO	Programmable Input number 2	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 3	---	NO	Programmable Input number 3	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 4	---	NO	Programmable Input number 4	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 5	---	NO	Programmable Input number 5	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 6	---	NO	Programmable Input number 6	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 7	---	NO	Programmable Input number 7	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 8	---	NO	Programmable Input number 8	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN 9	---	NO	Programmable Input number 9	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN10	---	NO	Programmable Input number 10	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN11	---	NO	Programmable Input number 11	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN12	---	NO	Programmable Input number 12	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN13	---	NO	Programmable Input number 13	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•
IN14	---	NO	Programmable Input number 14	Normally Open / Normally Closed: Refer to the list below for Input type details.	•	•

6 I-O					
			Definition	Adjustment Range	M-G M-M
OUT 1	POP	NO	Programmable Output number 1	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 2	---	NO	Programmable Output number 2	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 3	---	NO	Programmable Output number 3	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 4	---	NO	Programmable Output number 4	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 5	---	NO	Programmable Output number 5	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 6	---	NO	Programmable Output number 6	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 7	---	NO	Programmable Output number 7	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 8	---	NO	Programmable Output number 8	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •
OUT 9	---	NO	Programmable Output number 9	Normally Open / Normally Closed: Refer to the list below for Input type details.	• •

Annexe II - 11.1. Programmable inputs

Internal programmable I/O are built into the ATS controller as standard. External programmable inputs and outputs are optional add-on modules that may be fixed to the ATS controller using slots 1 to slot 4.


The list of available inputs is selected from the following options below. Depending on user requirements, the same function may be applied to more than 1 input.

	INPUT Code Definition	Adjustment Range	M-G	M-M
INH	Inhibition of the Automatic Operation: All automatic commands relative to the transfer switch, but excluding the Genset Start signal, will be inhibited. <i>Note: With INH closed, the generator will start if the network is lost but the switch will not transfer position.</i>	NO / NC (Normally Open or Normally Closed)	•	•
TOL	Test On-Load: Activates an on load test. Retransfer remains locked until the contact is opened.	NO / NC	•	


	INPUT Code Definition	Adjustment Range	M-G	M-M
TFL	Test Off-Load: Activates an off load test. This will start and stop the generator without transferring the load to S2.	NO / NC	•	
EOL	External Test On load operation request, (delayable) : Activates an operating cycle depending on time delays E1T, E2T, E3T. These time delays must be set in the TIMERS menu. Refer to the graphs below for operation details. Note: This input function together with the associated time delays (E1T, E2T, E3T) are particularly useful for peak shaving.	NO / NC	•	
EFL	External Test Off load operation request, (delayable) : Activates "Start Gen" contact according to time delays. These time delays must be set in the TIMERS menu E5T, E6T et E7T. The operation is the same as for EOL but without the load switching over to the Genset, (S2).	NO / NC	•	
MSR	Hold on S2 (Genset) with priority to TOL and EOL : During a Test On Load (TOL) or an external Test On Load (EOL), validating MSR will force the ATyS p to remain on source 2 for as long as TOL or EOL are active. The switch will remain on S2 even if the Genset supply is lost. (Mainly used during peak shaving).	NO / NC	•	
RTC	Remote transfer back to the priority source: This is the same function as "RETRANS" cleared with the keypad. This variable in the SETUP menu must be "YES" to validate the operation through this input.	NO / NC	•	•
PRI	Priority to Source 2 : By default the priority source on the ATyS p is S1. Input PRI will set the priority to S2. This input takes priority over PRIO NET in the SETUP menu.	NO / NC		•
SS1 SS2	Voltage Stabilisation time delay relay bypass : These inputs allow to initiate the transfer from one source to the other before the end of the time delay 1RT/2RT/2AT.	NO / NC	•	•
AL1 AL2	External Alarm for Source 1 and Source 2: This input will flash the "Fault LED" on the front of the ATyS p ATS controller and will indicate F12 ALR - 1 / F22 ALR - 2 on the screen. This message will disappear when the external alarm is cleared by opening the input contact. Note: These alarms do not trigger any position change in the switch but the product not available output will be activated.	NO / NC	•	•
FT1 FT2	External Fault Source 1 or source 2 with zero return : This input will flash the "Fault LED" on the front of the ATyS p ATS controller and will indicate F11 FLT - 1 / F21 FLT - 2 on the LCD screen. This message will disappear after validation and RESET through input RST, by changing the selector switch from AUT to Manu and back to AUT or via communication after the fault has been cleared. Note: Immediately upon activation of one of these inputs the ATyS p will changeover to the 0 position. Time delays 10T or 20T time delay will not be considered.	NO / NC	•	•
OA1 / OA2	Define Source 1 and/or Source 2 as available : This is an external input used to bypass the internal voltage sensing and timers. These inputs will define S1 and/or S2 available immaterial of the value and immaterial of timers 1RT, 2RT, 2AT.	NO / NC	•	•
RST	Fault Reset : This input may be used to reset a fault condition after the fault has been cleared. Faults may also be reset through communication or by shifting the front selector switch on the ATyS p from AUT to Manu and back to the AUT position.	NO / NC	•	•
LSI	Pre transfer signal LSC time delay (load shedding 1) bypass : This input will bypass the LSC time delay, thereby confirming that the load is OK (Shed or within an acceptable range) and the changeover to source 2 may begin immediately. Only visible after activating at least one output as LSC.	NO / NC	•	•

Annexe II - 11.2. Operation of the EOL function:


E2T when set as Limited

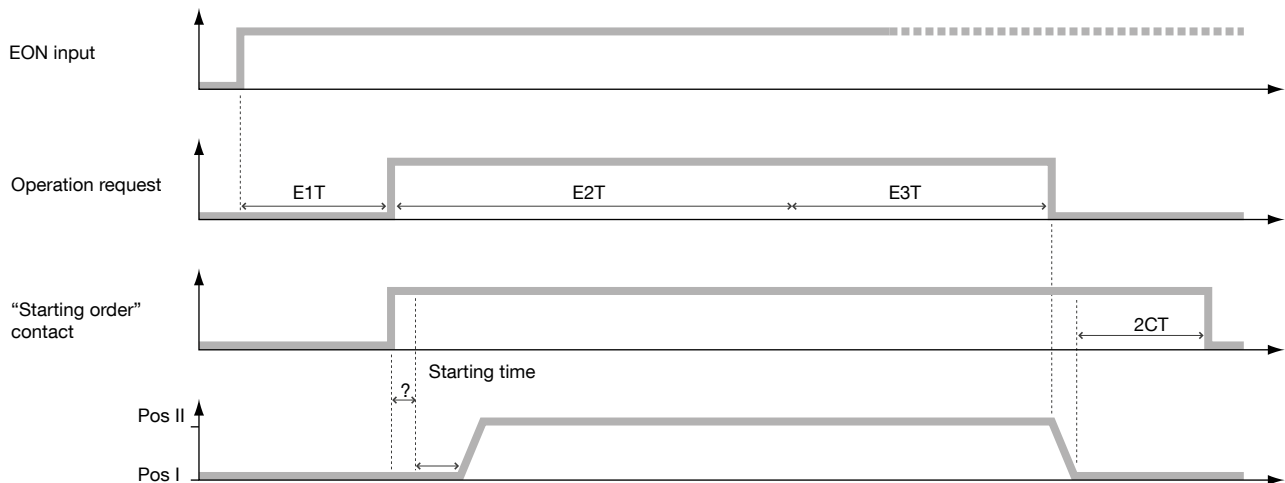

E2T takes priority over EOL if E2T is set as LIM (Limited)

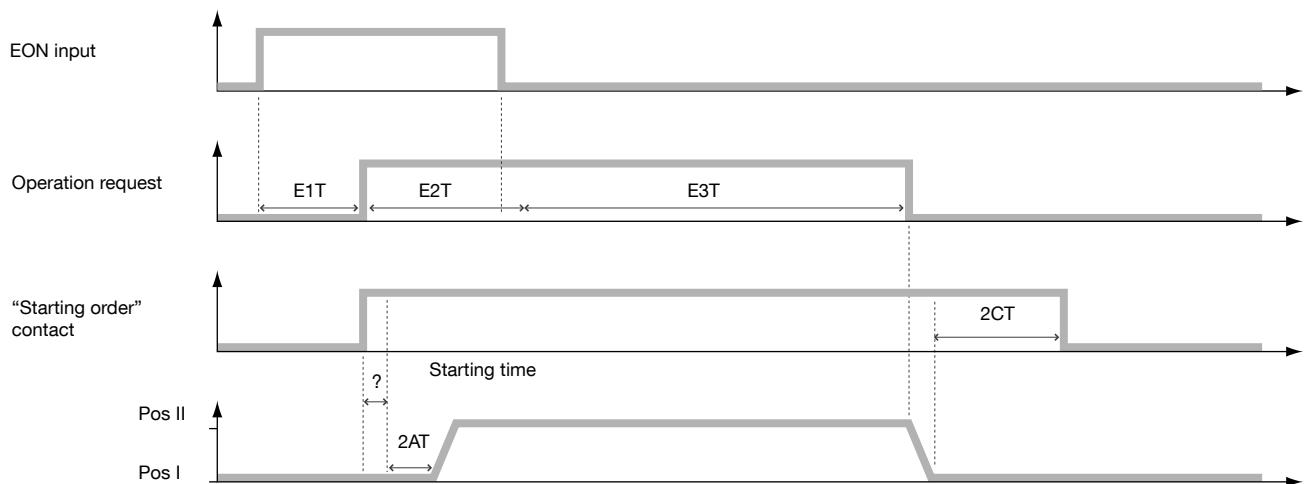

EOL takes priority over E2T if E2T is set as UNL (Unlimited)

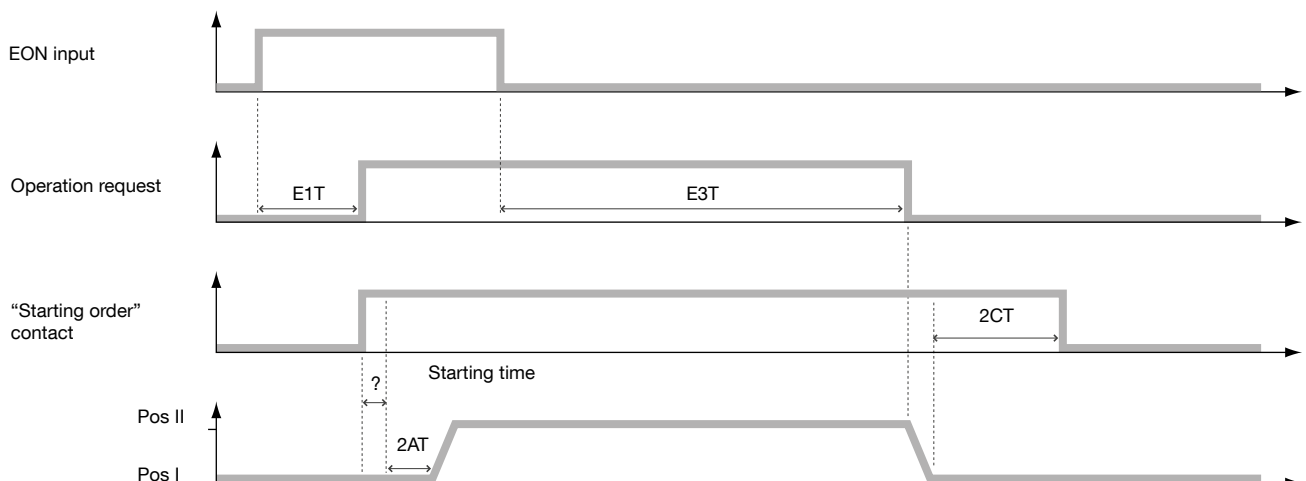

Annexe II - 11.3. Programmable outputs

	Output Code Definition	Adjustment Range	M-G	M-M
S1A	Source 1 available output: This output is activated when source 1 is available.	NO / NC	•	•
S2A	Source 2 available output: This output is activated when source 2 is available.	NO / NC	•	•
SCA	Source 1 or Source 2 available output : This output is activated when at least one source (S1 or S2) is available.	NO / NC	•	•
AC1	Switch Position 1 auxiliary contact : This output is activated when the switch is in position 1.	NO / NC	•	•
AC2	Switch Position 2 auxiliary contact : This output is activated when the switch is in position 2.	NO / NC	•	•
AC0	Switch Position 0 auxiliary contact : This output is activated when the switch is in position 0.	NO / NC	•	•
LO1	Load being supplied by source 1: Indicates which source is supplying the load. This output is activated when the switch is in Position I and Source 1 is available. (LO1 activated = AC1 and S1A activated).	NO / NC	•	•
LO2	Load being supplied by source 2: Indicates which source is supplying the load. This output is activated when the switch is in Position II and Source 2 is available. (LO2 activated = AC2 and S2A activated).	NO / NC	•	•
LSC	Load shedding before transfer output command : This output will initiate load shedding prior to the transfer from source 1 to a backup (usually smaller) power source. After restoration this output may also be used to signal reloading. For further details refer to the diagrams below.	NO / NC	•	•
FLT	Fault condition output: This output is activated when at least one type of fault (internal or external) is activated.	NO / NC	•	•
POP	Product Available (No Fault): This output is activated when the ATyS p (ATS Controller) is considered to be operational and ready to switch positions.	NO / NC	•	•
CO1 to CO14	Copy Input to the corresponding Output: The output adopts the same state as the corresponding input. This is the same function as relaying.	NO / NC	•	•
LCK	Product Locked output: Output linked to the padlocked state of the ATyS p. (Product in manual mode with the padlocking mechanism pulled out.	NO / NC	•	•
PTS	Power Threshold Exceeded (Load Shedding 2): This output signal is linked to the kva ratings as configured in the Power Level settings menu. When the power drawn by the load exceeds the threshold levels set output PTS will be activated so as to load shed selected loads.	NO / NC	•	•
EES	Battery Charge Output signal: This output will be activated when the maximum reset timer EET elapses. This output may be used with a battery charger that will be switched on depending on the Genset idle time. Output EES will be deactivated when the battery charge run timer (EDT) elapses.	NO / NC	•	


Note:

The Engine Exerciser settings are only accessible through Webserver and through Easy Config programming software. Refer to the Easy Config section for details.


Annexe II - 11.4. Operation of load shedding before transfer

If output LSC is selected, (load shedding before transfer request), the associated time delay LST (maximum duration of the load shedding) must be programmed in the Timers Menu.

Scenario 1 with LSI active

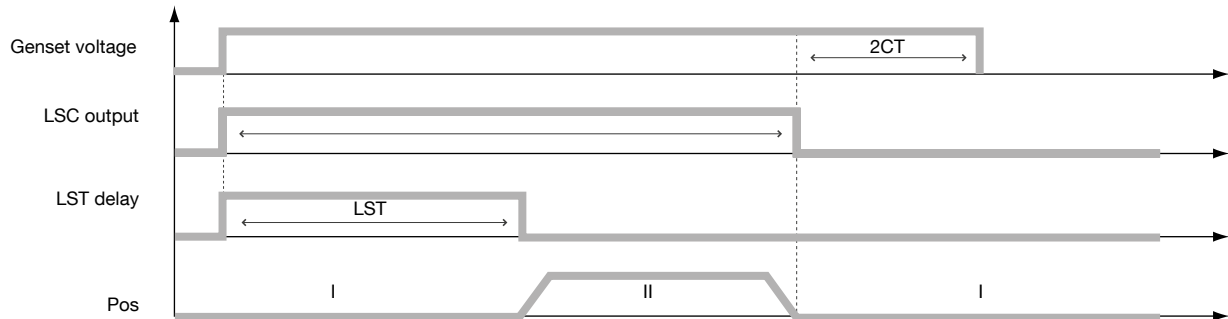

Scenario 2: LSI Input not activated

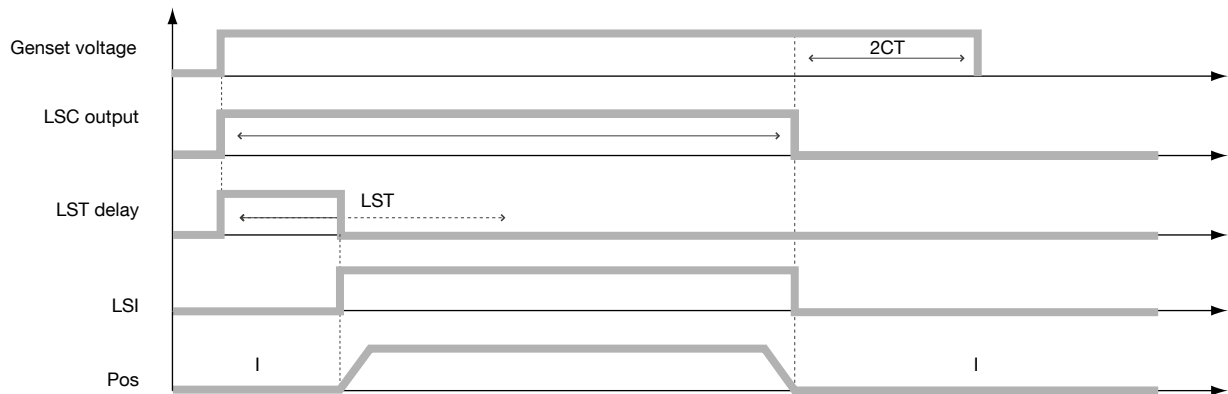

Annexe II - 12. Communication menu – keypad navigation

7 COMM		Definition	Adjustment Range
			
DHCP	NO	Dynamic Host Configuration Protocol	YES / NO
IP 1-2	192.168.	IP Address Line 1	-
IP 3-4	.002.001	IP Address Line 2	-
GAT1-2	000.000.	Gate Line 1	-
GAT3-4	.000.000	Gate Line 2	-
MSK1-2	255.255.	Mask Line 1	-
MSK3-4	.255.000	Mask Line 2	-
ADDRESS	005	ATyS p Device network address:	1 to 255
BDRATE	9600	Baud rate :	9600, 19200 38400

7 COMM			
		Definition	Adjustment Range
STOP BIT	1	Stop Bit Setting	1, 2
PARITY	NONE	Parity Type: NO -> No parity bit ODD -> Odd parity bit EVEN -> Even parity bit	NO, ODD, EVE

Note: The COMM menu will only be visible and accessible when an optional communication module (Ethernet or MODBUS) is installed on the product.

Annexe II - 13. Date and Time – keypad navigation

8 DATE/TIME			
		Definition	
YEAR		Set the year:	-
MONTH		Set the month:	-
DAY		Set the day :	-
HOUR		Set the hour :	-
MINUTE		Set the minute :	-
SECOND		Set the seconds :	-

Note:

For pulsed outputs and 4-20mA output refer to specific optional module instruction manuel on www.socomec.com.

Socomec worldwide

IN WESTERN EUROPE

BELGIUM

B - 1070 Bruxelles
Tel. +32 2 340 02 30
info.be@socomec.com

FRANCE

F - 94132 Fontenay-sous-Bois Cedex
Tel. +33 1 45 14 63 30
info.scp.fr@socomec.com

GERMANY

D - 76275 Ettlingen
Tel. +49 7243 65292 0
info.scp.de@socomec.com

ITALY

I - 20098 San Giuliano Milanese (MI)
Tel. +39 02 98 49 821
info.scp.it@socomec.com

NETHERLANDS

NL - 3991 CD Houten
Tel. +31 30 760 0900
info.nl@socomec.com

SPAIN

E - 08329 Teià (Barcelona)
Tel. +34 93 540 75 75
info.es@socomec.com

UNITED KINGDOM

Hitchin Hertfordshire SG4 0TY
Tel. +44 1462 440 033
info.scp.uk@socomec.com

IN EASTERN EUROPE, MIDDLE EAST, AFRICA

POLAND

01-625 Warszawa
Tel. +48 91 442 64 11
info.scp.pl@socomec.com

ROMANIA

023383 Bucharest
Tel. +40 21 319 36 88
info.ro@socomec.com

RUSSIA

125167 - Moscow
Tel. +7 495 775 19 85
info.ru@socomec.com

SLOVENIA

SI - 1000 Ljubljana
Tel. +386 1 5807 860
info.si@socomec.com

TURKEY

34775 Istanbul
Tel. +90 216 540 71 20-21-22
info.tr@socomec.com

UNITED ARAB EMIRATES

Dubai, U.A.E.
Tel. +971 4 29 98 441
info.ae@socomec.com

IN ASIA

CHINA

P.R.C 200052 Shanghai - China
Tel. +86 21 52 98 95 55
info.cn@socomec.com

INDIA

122001 Gurgaon, Haryana - India
Tel. +91 124 4027210
info.scp.in@socomec.com

SINGAPORE

Singapore 408723
Tel. +65 6506 7600
info.sg@socomec.com

IN NORTH AMERICA

USA, CANADA & MEXICO

Cambridge, MA 02142 USA
Tel. +1 617 245 0447
info.us@socomec.com

HEAD OFFICE

SOCOMEK GROUP

S.A. SOCOMEK capital 10 816 800 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex - FRANCE



www.socomec.com

INTERNATIONAL SALES DEPARTMENT

SOCOMEK

1, rue de Westhouse - B.P. 60010
F - 67235 Benfeld Cedex - FRANCE
Tel. +33 (0)3 88 57 41 41
Fax +33 (0)3 88 74 08 00
info.scp.isd@socomec.com

YOUR DISTRIBUTOR



Annexe III. MODBUS® Communication address and designation details

ENGLISH



Annexe III. MODBUS® Communication address and designation details

Annexe III - 1. Metrology Affected by current and voltage transformers

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
50514	C552	2	Phase to Phase Voltage: U12	V/100
50516	C554	2	Phase to Phase Voltage: U23	V/100
50518	C556	2	Phase to Phase Voltage: U31	V/100
50520	C558	2	Simple voltage: V1	V/100
50522	C55A	2	Simple voltage: V2	V/100
50524	C55C	2	Simple voltage: V3	V/100
50526	C55E	2	Frequency: F	Hz/100
50528	C560	2	Current: I1	mA
50530	C562	2	Current: I2	mA
50532	C564	2	Current: I3	mA
50534	C566	2	Neutral Current: In	mA
50536	C568	2	$\sum$ Active Power $\pm$: P	kW/100 (Signed)
50538	C56A	2	$\sum$ Reactive Power $\pm$: Q	kvar/100 (Signed)
50540	C56C	2	$\sum$ Apparent Power: S	kVA/100
50542	C56E	2	$\sum$ Power Factor: -: leading et +: lagging: PF	0,001 (Signed)
50544	C570	2	Active Power phase 1 $\pm$: P1	kW/100 (Signed)
50546	C572	2	Active Power phase 2 $\pm$: P2	kW/100 (Signed)
50548	C574	2	Active Power phase 3 $\pm$: P3	kW/100 (Signed)
50550	C576	2	Reactive Power phase 1 $\pm$: Q1	kvar/100 (Signed)
50552	C578	2	Reactive Power phase 2 $\pm$: Q2	kvar/100 (Signed)
50554	C57A	2	Reactive Power phase 3 $\pm$: Q3	kvar/100 (Signed)
50556	C57C	2	Apparent Power phase 1: S1	kVA/100
50558	C57E	2	Apparent Power phase 2: S2	kVA/100
50560	C580	2	Apparent Power phase 3: S3	kVA/100
50562	C582	2	Power Factor phase 1 -: leading and +: lagging : PF1	0,001 (Signed)
50564	C584	2	Power Factor phase 2 -: leading and +: lagging : PF2	0,001 (Signed)
50566	C586	2	Power Factor phase 3 -: leading and +: lagging : PF3	0,001 (Signed)

Annexe III - 2. Energy

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
50770	C652	2	Total Positive Active Energy (no resetable): Ea+	kWh
50772	C654	2	Total Positive Reactive Energy (no resetable): Er +	kvarh
50774	C656	2	Total Apparent Energy (no resetable): Es	kVAh
50776	C658	2	Total Negative Active Energy (no resetable): Ea-	kWh
50778	C65A	2	Total Negative Reactive Energy (no resetable): Er -	kvarh
50780	C65C	2	Partial Positive Active Energy: Ea+	kWh
50782	C65E	2	Partial Positive Reactive Energy: Er +	kvarh
50784	C660	2	Partial Apparent Energy : Es	kVAh
50786	C662	2	Partial Negative Active Energy : Ea-	kWh
50788	C664	2	Partial Negative Reactive Energy : Er -	kvarh

Annexe III - 3. Metrology not affected by current and voltage transformers

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
51281	C851	1	Phase to Phase Voltage: U12	V/100
51282	C852	1	Phase to Phase Voltage: U23	V/100
51283	C853	1	Phase to Phase Voltage: U31	V/100
51284	C854	1	Simple voltage: V1	V/100
51285	C855	1	Simple voltage: V2	V/100
51286	C856	1	Simple voltage: V3	V/100
51287	C857	1	Frequency: F	Hz/100
51288	C858	1	Current: I1	mA
51289	C859	1	Current: I2	mA
51290	C85A	1	Current: I3	mA
51291	C85B	1	Neutral Current: In	mA
51292	C85C	1	$\sum$ active Power $\pm$: P	kW/100 (Signed)
51293	C85D	1	$\sum$ reactive Power $\pm$: Q	kvar/100 (Signed)
51294	C85E	1	$\sum$ apparent power: S	kVA/100
51295	C85F	1	$\sum$ power factor: -: leading and +: lagging: PF	0,001 (Signed)
51296	C860	1	Active Power phase 1 $\pm$: P1	kW/100 (Signed)
51297	C861	1	Active Power phase 2 $\pm$: P2	kW/100 (Signed)
51298	C862	1	Active Power phase 3 $\pm$: P3	kW/100 (Signed)
51299	C863	1	Reactive Power phase 1 $\pm$: Q1	kvar/100 (Signed)
51300	C864	1	Reactive Power phase 2 $\pm$: Q2	kvar/100 (Signed)
51301	C865	1	Reactive Power phase 3 $\pm$: Q3	kvar/100 (Signed)
51302	C866	1	Apparent power phase 1: S1	kVA/100
51303	C867	1	Apparent power phase 2: S2	kVA/100
51304	C868	1	Apparent power phase 3: S3	kVA/100
51305	C869	1	Power Factor phase 1 -: leading and +: lagging : PF1	0,001 (Signed)
51306	C86A	1	Power Factor phase 2 -: leading and +: lagging : PF2	0,001 (Signed)
51307	C86B	1	Power Factor phase 3 -: leading and +: lagging : PF3	0,001 (Signed)
51311	C86F	1	Total Positive Active Energy (no resetable): Ea+	MWh
51312	C870	1	Total Positive Reactive Energy (no resetable): Er +	Mvarh
51313	C871	1	Total Negative Active Energy (no resetable): Ea-	MWh
51314	C872	1	Total Negative Reactive Energy (no resetable): Er -	Mvarh

Annexe III - 4. Input/Output state

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
51968	CB00	1	Input count	
51969	CB01	1	Bit 0: Input 1 Open or Closed Bit x: Input x Open or Closed	Bitfield
51970	CB02	1	Output count	
51971	CB03	1	Bit 0: Output 1 Open or Closed Bit x: Output x Open or Closed	Bitfield

Annexe III - 5. Network setting

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
57345	E001	1	Current Transformer secondary: 1: 1 A 5: 5 A	enum
57346	E002	1	Current Transformer primary	A
57344	E000	1	Network Type: 0: 1BL 1: 2BL 2: 3BL 3: 3NBL 4: 4BL 5: 4NBL	enum
57345	E001	1	Current Transformer secondary: 1: 1 A 5: 5 A	enum
57346	E002	1	Current Transformer primary	A

Annexe III - 6. Hour/Date setting

Function 3 and 16 Codes

(Write 6 words in one time Function 16)

Dec. Address	Hex. Address	Words count	Description	Unit
57600	E100	1	Day	
57601	E101	1	Month	
57602	E102	1	Year	
57603	E103	1	Hour	
57604	E104	1	Minute	
57605	E105	1	Second	

Annexe III - 7. Ethernet module JBUS interface

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
57616	E110	1	IP = Part 1 . Part 2 . Part3 . Part4 Ethernet IP address - part 1	0 - 255
57617	E111	1	Ethernet IP address - part 2	0 - 255
57618	E112	1	Ethernet IP address - part 3	0 - 255
57619	E113	1	Ethernet IP address - part 4	0 - 255
57620	E114	1	Ethernet GATE - part 1	0 - 255
57621	E115	1	Ethernet GATE - part 2	0 - 255
57622	E116	1	Ethernet GATE - part 3	0 - 255
57623	E117	1	Ethernet GATE - part 4	0 - 255
57624	E118	1	Ethernet MASK - part 1	0 - 255
57625	E119	1	Ethernet MASK - part 2	0 - 255
57626	E11A	1	Ethernet MASK - part 3	0 - 255
57627	E11B	1	Ethernet MASK - part 4	0 - 255
57628	E11C	1	DHCP used 1: yes 0: no	enum

Dec. Address	Hex. Address	Words count	Description	Unit
57629	E11D	1	JBUS gateway enabled 1: yes 0: no	enum
57630	E11E	1	JBUS RTU over Ethernet Enabled 1: yes 0: no	enum
57631	E11F	1	Gateway External JBUS Baudrate enumeration 0: 2400 bps 1: 4800 bps 2: 9600 bps 3: 19200 bps 4: 38400 bps	enum
57632	E120	1	Gateway External JBUS Parity 0: none 1: even 2: odd	enum
57633	E121	1	Gateway External JBUS Stopbit 0: 1 stop bit 1: 2 stop bits	enum
57634	E122	1	JBUS Gateway Master request timeout	ms
57635	E123	1	JBUS Slave address (RS485 & RTU over Ethernet)	1-247

Annexe III - 8. Action system

Function 6 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
57856	E200	1	Action: 0xA1: Product Configuration storage 0xB2: Produit reset	enum

Annexe III - 9. Status

Function 6 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
20480	5000	2	Date & Time Current	-
20482	5002	1	Operating Mode 0x0000: Manual Mode 0x0001: Locked Mode 0x0010: Auto Mode 0x0020: Remote control mode 0x0040: Inhibit Mode	enum
20483	5003	1	Switch Position 0: Unknown 1: Position 0 2: Position 1 3: Position 2	enum
20484	5004	1	Source 2 Start Generator relay State 0: Not Active 1: Active	enum
20485	5005	1	Priority 0: Network 1: Source 1 2: Source 2	enum
20486	5006	1	Source1 State 0: Under Threshold BusBar 1: Present 2: Available	enum

Dec. Address	Hex. Address	Words count	Description	Unit
20487	5007	1	Source2 State 0: Under Threshold BusBar 1: Present 2: Available	enum
20488	5008	1	Test in progress 0x0000: None 0x0001: TOF 0x0002: EOF 0x0004: TOL 0x0008: EOL	enum
20489	5009	1	Fault summary 0: None 1: Alarm 2: Fault	enum
20490	500A	1	Alarm/Fault Code 0x0001: Operating factor (Alarm) 0x0002: Neutral position (Alarm) 0x0004: External fault 1 (Fault) 0x0008: External fault 2 (Fault) 0x0010: Alarm 1 (Alarm) 0x0020: Alarm 2 (Alarm) 0x0040: Source 1 rotation (Alarm) 0x0080: Source 2 rotation (Alarm) 0x0100: Source 1 unbalanced 1 (Alarm) 0x0200: Source 2 unbalanced 2 (Alarm) 0x0400: Position 0 (Fault) 0x0800: Position 1 (Fault) 0x1000: Position 2 (Fault) 0x2000: Main fault (Fault) 0x4000: Motor fault (Fault) 0x8000: Autoconfiguration failed (Alarm)	bitfield
20491	500B	1	Last Switch over cause 0: None 1: Manual 2: Remote controlled 3: Under voltage source 1 4: Under voltage source 2 5: Over voltage source 1 6: Over voltage source 2 7: Under Frequency source 1 8: Under Frequency source 2 9: Over Frequency source 1 10: Over Frequency source 2 11: Unbalance Source 1 12: Unbalance Source 2 13: Rotation Source 1 14: Rotation Source 2	enum
20492	500C	2	Firmware last flash date	-
20494	500E	2	Date of first commissioning	-
20496	5010	8	Product identification	-
20504	5018	1	Power supply status 0: No network present for DPS 1: Source 1 present for DPS 2: Source 2 present for DPS 3: Sources 1+2 present for DPS	enum
20505	5019	1	Source 1: Phase 1 presence 1: Present 0: Absent	enum
20506	501A	1	Source 1: Phase 2 presence 1: Present 0: Absent	enum

Dec. Address	Hex. Address	Words count	Description	Unit
20507	501B	1	Source 1: Phase 3 presence 1: Present 0: Absent	enum
20508	501C	1	Source 2: Phase 1 presence 1: Present 0: Absent	enum
20509	501D	1	Source 2: Phase 2 presence 1: Present 0: Absent	enum
20510	501E	1	Source 2: Phase 3 presence 1: Present 0: Absent	enum
20511	501F	1	BET Mode 0: Not present 1: Auto 2: Manual 3: Remote control 4: Locked	enum
20512	5020	1	BET Available 0: Not available 1: Available	enum
20513	5021	1	Product is available 0: Not available 1: Available	enum

Annexe III - 10. Engine exerciser - custom time range status

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
20560	5050	2	Date & Time current	sec.
20562	5052	1	Next custom range to be activated 0: None 1: Custom 1 2: Custom 2 3: Custom 3 4: Custom 4	enum
20563	5053	2	Next custom range start date	sec.
20565	5055	2	Next custom range stop date	sec.
20567	5057	2	Next custom range start delay	sec.

Annexe III - 11. Measurement table (no CT/VT affected)

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
20736	5100	2	Date & Time current	sec.

Down Stream Voltage				
20738	5102	1	U12	V/100
20739	5103	1	U23	V/100
20740	5104	1	U31	V/100
20741	5105	1	V1	V/100
20742	5106	1	V2	V/100

Down Stream Voltage				
20743	5107	1	V3	V/100
20744	5108	1	Fr	Hz/100

Up Stream Voltage				
20745	5109	1	Source 1: U12	V/100
20746	510A	1	Source 1: U23	V/100
20747	510B	1	Source 1: U31	V/100
20748	510C	1	Source 1: V1	V/100
20749	510D	1	Source 1: V2	V/100
20750	510E	1	Source 1: V3	V/100
20751	510F	1	Source 1: F	Hz/100
20752	5110	1	Source 2: U12	V/100
20753	5111	1	Source 2: U23	V/100
20754	5112	1	Source 2: U31	V/100
20755	5113	1	Source 2: V1	V/100
20756	5114	1	Source 2: V2	V/100
20757	5115	1	Source 2: V3	V/100
20758	5116	1	Source 2: F	Hz/100

Down Stream Current				
20759	5117	1	I1	mA
20760	5118	1	I2	mA
20761	5119	1	I3	mA
20762	511A	1	Ineutral	mA

Power				
20763	511B	2	Active Power phase 1	W / 100
20765	511D	2	Active Power phase 2	W / 100
20767	511F	2	Active Power phase 3	W / 100
20769	5121	2	Reactive Power phase 1	var / 100
20771	5123	2	Reactive Power phase 2	var / 100
20773	5125	2	Reactive Power phase 3	var / 100
20775	5127	2	Apparent power phase 1	VA / 100
20777	5129	2	Apparent power phase 2	VA / 100
20779	512B	2	Apparent power phase 3	VA / 100
20781	512D	1	Power Factor phase 1 (-: leading and +: lagging)	% / 100
20782	512E	1	Power Factor phase 2 (-: leading and +: lagging)	% / 100
20783	512F	1	Power Factor phase 3 (-: leading and +: lagging)	% / 100
20784	5130	2	Total Active Power	W / 100
20786	5132	2	Total Reactive Power	var / 100
20788	5134	2	Total Apparent Power	VA / 100
20790	5136	1	Total Power Factor (-: leading and +: lagging)	% / 100

Up Stream Status				
20791	5137	1	Neutral position 0: Left 1: Right	enum
20792	5138	1	Source 1: Single voltage unbalance	% / 100
20793	5139	1	Source 1: Phases rotation 0: N/A 1: ABC 2: ACB	enum
20794	513A	1	Source 2: Single voltage unbalance	% / 100
20795	513B	1	Source 2: Phases rotation 0: N/A 1: ABC 2: ACB	enum

Annexe III - 12. Energies and time meters

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
20992	5200	2	Date & Time current	sec.

Energies meters				
20994	5202	2	Total Positive Active Energy (Ea+) source 1	kWh
20996	5204	2	Total Positive Reactive Energy (Er+) source 1	kVARh
20998	5206	2	Total Apparent Energy (Es) source 1	kVAh
21000	5208	2	Total Negative Active Energy (Ea-) source 1	kWh
21002	520A	2	Total Negative Reactive Energy (Er-) source 1	kVARh
21004	520C	2	User Partial Positive Active Energy (Ea+) source 1	kWh
21006	520E	2	User Partial Positive Reactive Energy (Er+) source 1	kVARh
21008	5210	2	User Partial Apparent Energy (Es) source 1	kVAh
21010	5212	2	User Partial Negative Active Energy (Ea-) source 1	kWh
21012	5214	2	User Partial Negative Reactive Energy (Er-) source 1	kVARh
21014	5216	2	Since Last Commutation Positive Active Energy (Ea+) source 1	kWh
21016	5218	2	Since Last Commutation Positive Reactive Energy (Er+) source 1	kVARh
21018	521A	2	Since Last Commutation Apparent Energy (Es) source 1	kVAh
21020	521C	2	Since Last Commutation Negative Active Energy (Ea-) source 1	kWh
21022	521E	2	Since Last Commutation Negative Reactive Energy (Er-) source 1	kVARh
21024	5220	2	Total Positive Active Energy (Ea+) source 2	kWh
21026	5222	2	Total Positive Reactive Energy (Er+) source 2	kVARh
21028	5224	2	Total Apparent Energy (Es) source 2	kVAh
21030	5226	2	Total Negative Active Energy (Ea-) source 2	kWh
21032	5228	2	Total Negative Reactive Energy (Er-) source 2	kVARh
21034	522A	2	User Partial Positive Active Energy (Ea+) source 2	kWh
21036	522C	2	User Partial Positive Reactive Energy (Er+) source 2	kVARh
21038	522E	2	User Partial Apparent Energy (Es) source 2	kVAh
21040	5230	2	User Partial Negative Active Energy (Ea-) source 2	kWh
21042	5232	2	User Partial Negative Reactive Energy (Er-) source 2	kVARh
21044	5234	2	Since Last Commutation Positive Active Energy (Ea+) source 2	kWh
21046	5236	2	Since Last Commutation Positive Reactive Energy (Er+) source 2	kVARh
21048	5238	2	Since Last Commutation Apparent Energy (Es) source 2	kVAh

Energies meters				
21050	523A	2	Since Last Commutation Negative Active Energy (Ea-) source 2	kWh
21052	523C	2	Since Last Commutation Negative Reactive Energy (Er-) source 2	kVARh

Time meters				
21054	523E	2	Total time on source 1	sec.
21056	5240	2	User partial time on source 1	sec.
21058	5242	2	Since last commutation time on source 1	sec.
21060	5244	2	Total time on source 2	sec.
21062	5246	2	User partial time on source 2	sec.
21064	5248	2	Since last commutation time on source 2	sec.

Annexe III - 13. Timers state

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
21248	5300	2	Date & Time Current	sec.
21250	5302	1	Source 1: SFT Timer / 1FT	sec.
21251	5303	1	Source 1: SAT Timer / 1RT	sec.
21253	5305	1	Source 2: SFT Timer / 2FT	sec.
21254	5306	1	Source 2: SAT Timer / 2RT Or 2AT	sec.
21255	5307	1	Source 2: LAT Timer / 2CT	sec.
21257	5309	1	Source 2: FST Timer / 2ST	sec.
21258	530A	1	DBT Timer / 0DT	sec.
21259	530B	1	LoadShedding Timer (duration) / LST	sec.
21260	530C	1	TOL is unlimited 0: <i>limited</i> 1: <i>unlimited</i>	enum
21261	530D	1	TOL (Test On Load Duration) Timer	sec.
21262	530E	1	T3T (Test on load end timer) Timer	sec.
21263	530F	1	TOF is unlimited 0: <i>limited</i> 1: <i>unlimited</i>	enum
21264	5310	1	TOF (Test Off Load Duration) Timer	sec.
21265	5311	1	STOLT (Time before Ord. Ext On Load) Timer / E1T	sec.
21266	5312	1	ETOLT (Time after Ord. Ext On Load) Timer / E3T	sec.
21267	5313	1	EOLTOT / E2T is unlimited 0: <i>limited</i> 1: <i>unlimited</i>	enum
21268	5314	1	EOLTOT (Ord. Ext On Load Duration) Timer / E2T	sec.
21269	5315	1	STOFT (Time before Ord. Ext Off Load) Timer / E5T	sec.
21270	5316	1	ETOFT (Time after Ord. Ext Off Load) Timer / E7T	sec.
21271	5317	1	EOFTOF / E6T is unlimited 0: <i>limited</i> 1: <i>unlimited</i>	enum
21272	5318	1	EOFTOF (Ord. Ext Off Load Duration) Timer / E6T	sec.
21273	5319	1	EET2: Secondary Source engine exerciser timeout / EET	hours

Dec. Address	Hex. Address	Words count	Description	Unit
21274	531A	1	EDT2: Secondary Source engine exerciser duration / EDT	sec.
21275	531B	1	Source 1: SFT Timer / 1FT state 1: Active 0: Not active	enum
21276	531C	1	Source 1: SAT Timer / 1RT state 1: Active 0: Not active	enum
21277	531D	1	Source 1: ORT Timer / 1OT state 1: Active 0: Not active	enum
21278	531E	1	Source 2: SFT Timer / 2FT state 1: Active 0: Not active	enum
21279	531F	1	Source 2: SAT Timer / 2RT Or 2AT state 1: Active 0: Not active	enum
21280	5320	1	Source 2: LAT Timer / 2CT state 1: Active 0: Not active	enum
21281	5321	1	Source 2: ORT Timer / 2OT state 1: Active 0: Not active	enum
21282	5322	1	Source 2: FST Timer / 2ST state 1: Active 0: Not active	enum
21283	5323	1	DBT Timer / ODT state 1: Active 0: Not active	enum
21284	5324	1	LoadShedding Timer (duration) / LST state 1: Active 0: Not active	enum
21285	5325	1	TOL (Test On Load Duration) Timer state 1: Active 0: Not active	enum
21286	5326	1	T3T (Test on load end timer) Timer state 1: Active 0: Not active	enum
21287	5327	1	TOF (Test Off Load Duration) Timer state 1: Active 0: Not active	enum
21288	5328	1	STOLT (Time before Ord. Ext On Load) Timer / E1T state 1: Active 0: Not active	enum
21289	5329	1	ETOLT (Time after Ord. Ext On Load) Timer / E3T state 1: Active 0: Not active	enum
21290	532A	1	EOLTOT (Ord. Ext On Load Duration) Timer / E2T state 1: Active 0: Not active	enum
21291	532B	1	STOFT (Time before Ord. Ext Off Load) Timer / E5T state 1: Active 0: Not active	enum
21292	532C	1	ETOFT (Time after Ord. Ext Off Load) Timer / E7T state 1: Active 0: Not active	enum

Dec. Address	Hex. Address	Words count	Description	Unit
21293	532D	1	EOFTOF (Ord. Ext Off Load Duration) Timer / E6T state <i>1: Active</i> <i>0: Not active</i>	enum
21294	532E	1	EET2: Secondary Source engine exerciser timeout / EET state <i>1: Active</i> <i>0: Not active</i>	enum
21295	532F	1	EDT2: Secondary Source engine exerciser duration / EDT state <i>1: Active</i> <i>0: Not active</i>	enum

Annexe III - 14. Option module state

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
21504	5400	2	Date & Time Current	sec.
21506	5402	1	Option slot 1 Type <i>0xFF: None</i> <i>0x00: Communication option</i> <i>0x01: Metering option</i> <i>0x20: Input/Output option</i> <i>0x30: Analog Outputs option</i> <i>0x70: Ethernet option</i>	enum
21507	5403	1	Option slot 2 Type <i>0xFF: None</i> <i>0x00: Communication option</i> <i>0x01: Metering option</i> <i>0x20: Input/Output option</i> <i>0x30: Analog Outputs option</i> <i>0x70: Ethernet option</i>	enum
21508	5404	1	Option slot 3 Type <i>0xFF: None</i> <i>0x00: Communication option</i> <i>0x01: Metering option</i> <i>0x20: Input/Output option</i> <i>0x30: Analog Outputs option</i> <i>0x70: Ethernet option</i>	enum
21509	5405	1	Option slot 4 Type <i>0xFF: None</i> <i>0x00: Communication option</i> <i>0x01: Metering option</i> <i>0x20: Input/Output option</i> <i>0x30: Analog Outputs option</i> <i>0x70: Ethernet option</i>	enum

Annexe III - 15. Commands

Function 6 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
21760	5500	1	Set Command / Alarm 0x01: Set RTE (By Keyboard) 0x02: Clear TOF (By Keyboard) 0x03: Set TOF (By Keyboard) 0x04: Set TOL (By Keyboard) 0x05: Set EOF (By input) 0x06: Set EOL (By input) 0x07: Clear EOF (By input) 0x08: Clear EOL (By input) 0x10: Clear Alarms/Faults (By input) 0x11: Set External Fault 1 (By input) 0x12: Set External Fault 2 (By input) 0x13: Set External Alarm 1 (By input) 0x14: Set External Alarm 2 (By input)	enum
21761	5501	1	Set Operating Mode 3: Auto 4: Inhibit 5: Remote Control	enum
21762	5502	1	Set Priority 0: Network 1: Source 1 2: Source 2	enum
21763	5503	1	Set Position 0: None 1: Position in Zero 2: Position in 1 3: Position in 2	enum

Annexe III - 16. User commands

Function 6 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
21840	5550	1	Auto configuration request 1: make autoconfig	enum
21841	5551	1	Settings backup 1: save current settings as user defaults 2: restore user defaults settings 3: restore factory settings	enum
21842	5552	1	Source 1 partial counters erase 0x01: Ea+ 0x02: Er+ 0x04: Es 0x08: Ea- 0x10: Er- 0x20: Hour counter	bitfield
21843	5553	1	Source 2 partial counters erase 0x01: Ea+ 0x02: Er+ 0x04: Es 0x08: Ea- 0x10: Er- 0x20: Hour counter	bitfield
21844	5554	1	Product user counters erase 0x01: Genset start counter erase 0x02: Genset runtime counter erase 0x04: Secondary source presence counter erase 0x08: Secondary source active duration counter erase 0x10: Source 1 load supplied duration counter erase 0x20: Source 2 load supplied duration counter erase	bitfield

Annexe III - 17. Setup timer

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
Source 1 timers				
22016	5600	1	SFT1: Primary Source fail timer	sec.
22017	5601	1	SAT1: Primary Source availability/stabilization timer	sec.

Source 2 timers				
22023	5607	1	SFT2: Secondary Source fail timer	sec.
22024	5608	1	SAT2: Secondary Source availability/stabilization timer	sec.
22025	5609	1	LAT2: Secondary Source maintain request timer (cooldown timer)	sec.
22027	560B	1	FST2: Secondary Source wait for start timer	sec.
22028	560C	1	EET2: Secondary Source engine exerciser timeout	hours
22029	560D	1	EDT2: Secondary Source engine exerciser duration	sec.

General timers				
22030	560E	1	DBT: Dead band timer	sec.
22031	560F	1	Limit_TOL: Test on load is limited <i>0: unlimited</i> <i>1: limited</i>	enum
22032	5610	1	TOL: Test on load duration timer	sec.
22033	5611	1	T3T: Test on load end timer	sec.
22034	5612	1	Limit_TOF: Test off load is limited <i>0: unlimited</i> <i>1: limited</i>	enum
22035	5613	1	TOF: Test off load duration timer	sec.
22036	5614	1	STOLT: Time before external order on load	sec.
22037	5615	1	ETOLT: Time after external order on load	sec.
22038	5616	1	Limit_EOLTOT: External order on load is limited <i>0: unlimited</i> <i>1: limited</i>	enum
22039	5617	1	EOLTOT: External order on load duration	sec.
22040	5618	1	STOFT: Time before external order off load	sec.
22041	5619	1	ETOFT: Time after external order off load	sec.
22042	561A	1	Limit_EOFTOF: External order off load is limited <i>0: unlimited</i> <i>1: limited</i>	enum
22043	561B	1	EOFTOF: External order off load duration	sec.
22044	561C	1	LS_ON: LoadShedding_On Timer	sec.
22045	561D	1	LS_OFF: LoadShedding_Off Timer	sec.
22046	561E	1	LSB (between 100 ms and 9999 ms)	ms
22047	561F	1	DRT: Dynamic return timer (used instead of SRT when the actual source is not available, to retransfer faster)	sec.

Annexe III - 18. Setup threshold for upstream Voltages

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
22272	5700	1	Source 1: Overvoltage threshold	%
22273	5701	1	Source 1: Overvoltage hysteresis threshold	%
22274	5702	1	Source 1: Undervoltage threshold	%
22275	5703	1	Source 1: Undervoltage hysteresis threshold	%
22276	5704	1	Source 2: Overvoltage threshold	%
22277	5705	1	Source 2: Overvoltage hysteresis threshold	%
22278	5706	1	Source 2: Undervoltage threshold	%
22279	5707	1	Source 2: Undervoltage hysteresis threshold	%
22280	5708	1	Source 1: Unbalanced voltage threshold	%
22281	5709	1	Source 1: Unbalanced voltage hysteresis threshold	%
22282	570A	1	Source 2: Unbalanced voltage threshold	%
22283	570B	1	Source 2: Unbalanced voltage hysteresis threshold	%
22284	570C	1	Source 1: Overfrequency threshold	%
22285	570D	1	Source 1: Overfrequency hysteresis threshold	%
22286	570E	1	Source 1: Underfrequency threshold	%
22287	570F	1	Source 1: Underfrequency hysteresis threshold	%
22288	5710	1	Source 2: Overfrequency threshold	%
22289	5711	1	Source 2: Overfrequency hysteresis threshold	%
22290	5712	1	Source 2: Underfrequency threshold	%
22291	5713	1	Source 2: Underfrequency hysteresis threshold	%

Annexe III - 19. Setup user's power threshold

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
Source 1 user thresholds				
22528	5800	1	Source 1: Total Apparent Power threshold	kVA
22529	5801	1	Source 1: Total Apparent Power hysteresis threshold	kVA
Source 2 user thresholds				
22530	5802	1	Source 2: Total Apparent Power threshold	kVA
22531	5803	1	Source 2: Total Apparent Power hysteresis threshold	kVA

Annexe III - 20. Setup network

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
22784	5900	1	Network Type 0: 1BL 1: 2NBL 2: 2BL 3: 3NBL 4: 3BL 5: 4NBL 6: 4BL 7: 41NBL 8: 42NBL	enum
22785	5901	1	Neutral 0: LEFT 1: RIGHT 2: AUTO	enum
22786	5902	1	Phase rotation 0: Verify Compatible ("Auto") 1: Verify ABC 2: Verify ACB	enum
22787	5903	1	Unom	V
22788	5904	1	Fnom 0: 50Hz 1: 60Hz	enum
22789	5905	1	Type Application 0: Main - Main 1: Main - Gen	enum
22790	5906	1	Generator start order inhibit 0: NO 1: YES	enum
22792	5908	1	Source priority 0: Network 1: Source1 2: Source2	enum
22793	5909	1	Test On Load priority 0: NO 1: YES	enum
22794	590A	1	External Order On Load priority 0: NO 1: YES	enum
22795	590B	1	Manual retransfer 0: NO 1: YES	enum
22799	590F	1	BackLight 0: ON 1: OFF 2: INT	enum
22800	5910	1	Current transformer (Pri)	-
22801	5911	1	Current transformer (Sec) 1: TCsec = 1 5: TCsec = 5	enum
22802	5912	1	Invert Source 1 and Source 2 0: Not inverted 1: Inverted	enum

Annexe III - 21. Setup Input/Output

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23040	5A00	1	In 5 - StartGen board input 1 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23041	5A01	1	In 6 - StartGen board input 2 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23042	5A02	1	In 5 - StartGen board input 1 state 0: NO 1: NC	enum
23043	5A03	1	In 6 - StartGen board input 2 state 0: NO 1: NC	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23044	5A04	1	In 1 - Ext display connector board input 1 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23045	5A05	1	In 2 - Ext display connector board input 2 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23046	5A06	1	In 3 - Ext display connector board input 3 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23047	5A07	1	In 4 - Ext display connector board input 4 function 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23048	5A08	1	In 1 - Ext display connector board input 1 state 0: NO 1: NC	enum
23049	5A09	1	In 2 - Ext display connector board input 2 state 0: NO 1: NC	enum
23050	5A0A	1	In 3 - Ext display connector board input 3 state 0: NO 1: NC	enum
23051	5A0B	1	In 4 - Ext display connector board input 4 state 0: NO 1: NC	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23052	5A0C	1	In 7 function (only with 2IN2OUT module #1) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23053	5A0D	1	In 8 function (only with 2IN2OUT module #1) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23054	5A0E	1	In 9 function (only with 2IN2OUT module #2) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23055	5A0F	1	In 10 function (only with 2IN2OUT module #2) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23056	5A10	1	In 11 function (only with 2IN2OUT module #3) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23057	5A11	1	In 12 function (only with 2IN2OUT module #3) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23058	5A12	1	In 13 function (only with 2IN2OUT module #4) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23059	5A13	1	In 14 function (only with 2IN2OUT module #4) 0: --- - None 1: INH - Inhibition 2: TOL - Test on load 3: TFL - Test off load 4: EOL - External order on load 5: EFL - External order off load 6: RTC - Retransfer 7: PRI - Priority 8: SS1 - Validation Stabilization source 1 9: SS2 - Validation Stabilization source 2 10: AL1 - Alarm 1 11: AL2 - Alarm 2 12: FT1 - Fault 1 13: FT2 - Fault 2 14: MSR - Power priority 15: OA1 - Override source 1 available 16: OA2 - Override source 2 available 17: RST - Reset faults state 18: LSI - Load shedding 19: TR1 - Time Range1 Validate 20: TR2 - Time Range2 Validate 21: TR3 - Time Range3 Validate 22: TR4 - Time Range4 Validate	enum
23060	5A14	1	In 7 state (only with 2IN2OUT module #1) 0: NO 1: NC	enum
23061	5A15	1	In 8 state (only with 2IN2OUT module #1) 0: NO 1: NC	enum
23062	5A16	1	In 9 state (only with 2IN2OUT module #2) 0: NO 1: NC	enum
23063	5A17	1	In 10 state (only with 2IN2OUT module #2) 0: NO 1: NC	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23064	5A18	1	In 11 state (only with 2IN2OUT module #3) 0: NO 1: NC	enum
23065	5A19	1	In 12 state (only with 2IN2OUT module #3) 0: NO 1: NC	enum
23066	5A1A	1	In 13 state (only with 2IN2OUT module #4) 0: NO 1: NC	enum
23067	5A1B	1	In 14 state (only with 2IN2OUT module #4) 0: NO 1: NC	enum
23068	5A1C	1	Out 1 Ext display connector board relay output function 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23069	5A1D	1	Out 1 Ext display connector board relay output state 0: NO 1: NC	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23070	5A1E	1	Out 2 function (only with 2IN2OUT module #1) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23071	5A1F	1	Out 3 function (only with 2IN2OUT module #1) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23072	5A20	1	Out 4 function (only with 2IN2OUT module #2) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23073	5A21	1	Out 5 function (only with 2IN2OUT module #2) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23074	5A22	1	Out 6 function (only with 2IN2OUT module #3) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23075	5A23	1	Out 7 function (only with 2IN2OUT module #3) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23076	5A24	1	Out 8 function (only with 2IN2OUT module #4) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23077	5A25	1	Out 9 function (only with 2IN2OUT module #4) 0: --- - None 1: S1A - Source 1 available 2: S2A - Source 2 available 3: SCA - Any source available 4: CA1 - Source 1 closed 5: CA2 - Source 2 closed 6: CA0 - Both sources opened 7: LO1 - Source 1 closed and available 8: LO2 - Source 2 closed and available 9: LSC - Load shedding 10: FLT - Faults active 11: POP - Product operational 12: C01 - In 1 copy 13: C02 - In 2 copy 14: C03 - In 3 copy 15: C04 - In 4 copy 16: C05 - In 5 copy 17: C06 - In 6 copy 18: C07 - In 7 copy 19: C08 - In 8 copy 20: C09 - In 9 copy 21: C10 - In 10 copy 22: C11 - In 11 copy 23: C12 - In 12 copy 24: C13 - In 13 copy 25: C14 - In 14 copy 26: LCK - Product locked 27: PTS - Power threshold exceeded 28: EES - Battery charger 29: COM - Set by Modbus	enum
23078	5A26	1	Out 2 state (only with 2IN2OUT module #1) 0: NO 1: NC	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23079	5A27	1	Out 3 state (only with 2IN2OUT module #1) 0: NO 1: NC	enum
23080	5A28	1	Out 4 state (only with 2IN2OUT module #2) 0: NO 1: NC	enum
23081	5A29	1	Out 5 state (only with 2IN2OUT module #2) 0: NO 1: NC	enum
23082	5A2A	1	Out 6 state (only with 2IN2OUT module #3) 0: NO 1: NC	enum
23083	5A2B	1	Out 7 state (only with 2IN2OUT module #3) 0: NO 1: NC	enum
23084	5A2C	1	Out 8 state (only with 2IN2OUT module #4) 0: NO 1: NC	enum
23085	5A2D	1	Out 9 state (only with 2IN2OUT module #4) 0: NO 1: NC	enum

Annexe III - 22. Communication settings

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23296	5B00	1	Jbus Address	-
23297	5B01	1	UART Baud Rate 2: 9600 bps 3: 19200 bps 4: 38400 bps	enum
23298	5B02	1	UART Parity 0: none 1: even 2: odd	enum
23299	5B03	1	UART Stop bit number 1: 1 stop bit 2: 2 stop bits	enum
23300	5B04	2	IP Product	-
23302	5B06	2	IP Mask	-
23304	5B08	2	IP Gateway	-
23306	5B0A	1	DHCP Enabled 0: No 1: Yes	enum
23307	5B0B	8	Product identification	-

Annexe III - 23. Product counters

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23552	5C00	1	Total Cycles counter	nb of cycles
23553	5C01	1	Total Position 0 switches counter	nb of operations
23554	5C02	1	Total Position 1 switches counter	nb of operations
23555	5C03	1	Total Position 2 switches counter	nb of operations
23556	5C04	1	Total switches counter	nb of operations
23557	5C05	1	Cycles in auto mode (including control mode) counter	nb of cycles
23558	5C06	1	Position 0 switches in auto mode (including control mode) counter	nb of operations
23559	5C07	1	Position 1 switches in auto mode (including control mode) counter	nb of operations
23560	5C08	1	Position 2 switches in auto mode (including control mode) counter	nb of operations
23561	5C09	1	Total switches in auto mode (including control mode) counter	nb of operations
23562	5C0A	1	Cycles in manual mode counter	nb of cycles
23563	5C0B	1	Position 0 switches in manual mode counter	nb of operations
23564	5C0C	1	Position 1 switches in manual mode counter	nb of operations
23565	5C0D	1	Position 2 switches in manual mode counter	nb of operations
23566	5C0E	1	Total switches in manual mode counter	nb of operations
23567	5C0F	1	Cycles in control mode counter	nb of cycles
23568	5C10	1	Position 0 switches in control mode counter	nb of operations
23569	5C11	1	Position 1 switches in control mode counter	nb of operations
23570	5C12	1	Position 2 switches in control mode counter	nb of operations
23571	5C13	1	Total switches in control mode counter	nb of operations
23572	5C14	2	Product power on time	s
23574	5C16	1	Start order activation counter	nb of operations
23575	5C17	2	Start order active duration	s
23577	5C19	2	Secondary source presence duration	s
23579	5C1B	2	Secondary source active (i.e. present and switch position at secondary source) duration	s
23581	5C1D	2	Source 1 load supplied duration	s
23583	5C1F	2	Source 2 load supplied duration	s

Annexe III - 24. Output set

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23632	5C50	1	OUT1 - Option Module1 Output1 logical state <i>0: Not active</i> <i>1: Active</i>	enum
23633	5C51	1	OUT2 - Option Module1 Output2 logical state <i>0: Not active</i> <i>1: Active</i>	enum
23634	5C52	1	OUT3 - Option Module2 Output1 logical state <i>0: Not active</i> <i>1: Active</i>	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23635	5C53	1	OUT4 - Option Module2 Output2 logical state 0: Not active 1: Active	enum
23636	5C54	1	OUT5 - Option Module3 Output1 logical state 0: Not active 1: Active	enum
23637	5C55	1	OUT6 - Option Module3 Output2 logical state 0: Not active 1: Active	enum
23638	5C56	1	OUT7 - Option Module4 Output1 logical state 0: Not active 1: Active	enum
23639	5C57	1	OUT8 - Option Module4 Output2 logical state 0: Not active 1: Active	enum
23640	5C58	1	OP1 - External Board Output logical state 0: Not active 1: Active	enum
23641	5C59	1	Pulse Output1 logical state 0: Not active 1: Active	enum
23642	5C5A	1	Pulse Output2 logical state 0: Not active 1: Active	enum

Annexe III - 25. Input state

Function 3 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23808	5D00	1	In 7 - Option Module1 Input1 logical state 0: Not active 1: Active	enum
23809	5D01	1	In 8 - Option Module1 Input2 logical state 0: Not active 1: Active	enum
23810	5D02	1	In 9 - Option Module2 Input1 logical state 0: Not active 1: Active	enum
23811	5D03	1	In 10 - Option Module2 Input2 logical state 0: Not active 1: Active	enum
23812	5D04	1	In 11 - Option Module3 Input1 logical state 0: Not active 1: Active	enum
23813	5D05	1	In 12 - Option Module3 Input2 logical state 0: Not active 1: Active	enum
23814	5D06	1	In 13 - Option Module4 Input1 logical state 0: Not active 1: Active	enum
23815	5D07	1	In 14 - Option Module4 Input2 logical state 0: Not active 1: Active	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23816	5D08	1	In 5 - STO Board Input1 logical state 0: Not active 1: Active	enum
23817	5D09	1	In 6 - STO Board Input2 logical state 0: Not active 1: Active	enum
23818	5D0A	1	In 1 - External Display Board Input1 logical state 0: Not active 1: Active	enum
23819	5D0B	1	In 2 - External Display Board Input2 logical state 0: Not active 1: Active	enum
23820	5D0C	1	In 3 - External Display Board Input3 logical state 0: Not active 1: Active	enum
23821	5D0D	1	In 4 - External Display Board Input4 logical state 0: Not active 1: Active	enum

Annexe III - 26. Setup pulse and 0/4-20mA option modules

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
23888	5D50	1	OUT 1 pulse output allocation 0: kWh+ 1: kvarh + 2: kVAh 3: kWh - 4: kvarh - 5: Command	enum
23889	5D51	1	OUT 1 pulse output value 0: 0,1 kWh/kvarh 1: 1 kWh/kvarh 2: 10 kWh/kvarh 3: 100 kWh/kvarh 4: 1000 kWh/kvarh 5: 10000 kWh/kvarh	enum
23890	5D52	1	OUT 1 pulse output duration 0: 100ms 1: 200ms 2: 300ms 3: 400ms 4: 500ms 5: 600ms 6: 700ms 7: 800ms 8*: 900ms	enum
23891	5D53	1	OUT 2 pulse output allocation 0: kWh+ 1: kvarh + 2: kVAh 3: kWh - 4: kvarh - 5: Command	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23892	5D54	1	OUT 2 pulse output value 0: 0,1 kWh/kvarh 1: 1 kWh/kvarh 2: 10 kWh/kvarh 3: 100 kWh/kvarh 4: 1000 kWh/kvarh 5: 10000 kWh/kvarh	enum
23893	5D55	1	OUT 2 pulse output duration 0: 100ms 1: 200ms 2: 300ms 3: 400ms 4: 500ms 5: 600ms 6: 700ms 7: 800ms 8: 900ms	enum
23894	5D56	1	Type of analog output OUT 1 0: 0/20 mA 1: 4/20 mA 2: 30 V	enum
23895	5D57	1	Output allocation analog OUT1 0: U12 (V) 1: U23 (V) 2: U31 (V) 3: V1 (V) 4: V2 (V) 5: V3 (V) 6: I1 (A) 7: I2 (A) 8: I3 (A) 9: In (A) 10: F (Hz) 11: $\sum P$ (W) 12: $\sum Q$ (var) 13: $\sum S$ (VA) 14: $\sum PFL$ (%) 15: $\sum PFC$ (%)	enum
23896	5D58	1	Value at 0 or 4 mA from analog output OUT 1 (-20000 to +20000)	-
23897	5D59	1	Unit at 0 or 4 mA from analog output OUT1 0: / 1: k 2: M	enum
23898	5D5A	1	Value at 20 mA from analog output OUT 1 (-20000 to +20000)	-
23899	5D5B	1	Unit at 20 mA from analog output OUT1 0: / 1: k 2: M	enum
23900	5D5C	1	Type of analog output OUT 2 0: 0/20 mA 1: 4/20 mA 2: 30 V	enum

Dec. Address	Hex. Address	Words count	Description	Unit
23901	5D5D	1	Output allocation analog OUT2 0: U12 (V) 1: U23 (V) 2: U31 (V) 3: V1 (V) 4: V2 (V) 5: V3 (V) 6: I1 (A) 7: I2 (A) 8: I3 (A) 9: In (A) 10: F (Hz) 11: $\sum P$ (W) 12: $\sum Q$ (var) 13: $\sum S$ (VA) 14: $\sum PFL$ (%) 15: $\sum PFC$ (%)	enum
23902	5D5E	1	Value at 0 or 4 mA from analog output OUT 2 (-20000 to +20000)	-
23903	5D5F	1	Unit at 0 or 4 mA from analog output OUT2 0: / 1: k 2: M	enum
23904	5D60	1	Value at 20 mA from analog output OUT 2 (-20000 to +20000)	-
23905	5D61	1	Unit at 20 mA from analog output OUT2 0: / 1: k 2: M	enum

Annexe III - 27. Setup custom time

Function 3, 6 and 16 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
24064	5E00	1	Custom1 Mode 0: Not Used 1: For TOL 2: For TOF	enum
24065	5E01	1	Custom1 Validation Type 0: By Jbus 1: By Input 2: Auto	enum
24066	5E02	1	Custom1 Frequency 0: Daily 1: Weekly 2: Bi Weekly 3: Monthly 4: Yearly 5: Non Cyclic	enum
24067	5E03	4	Custom1 Start Time	Date Time
24071	5E07	4	Custom1 End Time	Date Time
24075	5E0B	1	Custom2 Mode 0: Not Used 1: For TOL 2: For TOF	enum
24076	5E0C	1	Custom2 Validation Type 0: By Jbus 1: By Input 2: Auto	enum

Dec. Address	Hex. Address	Words count	Description	Unit
24077	5E0D	1	Custom2 Frequency 0: Daily 1: Weekly 2: Bi Weekly 3: Monthly 4: Yearly 5: Non Cyclic	enum
24078	5E0E	4	Custom2 Start Time	Date Time
24082	5E12	4	Custom2 End Time	Date Time
24086	5E16	1	Custom3 Mode 0: Not Used 1: For TOL 2: For TOF	enum
24087	5E17	1	Custom3 Validation Type 0: By Jbus 1: By Input 2: Auto	enum
24088	5E18	1	Custom3 Frequency 0: Daily 1: Weekly 2: Bi Weekly 3: Monthly 4: Yearly 5: Non Cyclic	enum
24089	5E19	4	Custom3 Start Time	Date Time
24093	5E1D	4	Custom3 End Time	Date Time
24097	5E21	1	Custom4 Mode 0: Not Used 1: For TOL 2: For TOF	enum
24098	5E22	1	Custom4 Validation Type 0: By Jbus 1: By Input 2: Auto	enum
24099	5E23	1	Custom4 Frequency 0: Daily 1: Weekly 2: Bi Weekly 3: Monthly 4: Yearly 5: Non Cyclic	enum
24100	5E24	4	Custom4 Start Time	Date Time
24104	5E28	4	Custom4 End Time	Date Time
24108	5E2C	1	Genset Idle Timeout	Min

Annexe III - 28. Custom time validate

Function 6 Codes

Dec. Address	Hex. Address	Words count	Description	Unit
24144	5E50	1	Custom Time1 Validate 1: Validate	enum
24145	5E51	1	Custom Time2 Validate 1: Validate	enum
24146	5E52	1	Custom Time3 Validate 1: Validate	enum
24147	5E53	1	Custom Time4 Validate 1: Validate	enum

Annexe III - 28.1. Detailed events

Function 6 and 16 Codes

- Command Zone R1

Dec. Address	Hex. Address	Words count	Description	Unit
24320	5F00	1	Action <i>0x0001: Reset read pointer</i> <i>0xFFFE: Get next data</i>	enum
24321	5F01	1	Filtering action - If not written, no filtering is done <i>To use filtering, entire table should be written in one time with function 16</i> <i>0x00XX: only get events in the form XXyy</i> <i>0xFFFF: no filter</i>	bitfield

Function 3 Codes

- Data Zone R2

Dec. Address	Hex. Address	Words count	Description	Unit
24336	5F10	1	record count <i>If record count == 0xFFFF, it means that filtering process is not done now, so the reader has to re-read the table to get the values.</i>	
24337	5F11	1	record size <i>If record size == 0xFFFF, it means that filtering process is not done now, so the reader has to re-read the table to get the values.</i>	nb words
		120	8 * Event data record	

Function 3 Codes

- Data record description

Dec. Address	Hex. Address	Words count	Description	Unit
0	0	1	Event ID 0x8000: Power On 0x8001: Power Off 0x8002: Power Off prevent 0x8003: Power main overvoltage 0x8004: Power main undervoltage 0x8005: Power aux overvoltage 0x8006: Power aux undervoltage 0x8100: Configuration changed 0x8101: Configuration save failed 0x8102: Configuration load failed 0x8105: Configuration date saved 0x8106: Configuration date save failed 0x8107: Configuration date read failed 0x8110: Configuration calibration read failed 0x8300: User reset 0x8301: Watchdog reset 0x8302: Date resynchronized 0xFF00: Software version changed 0x0001: Source 1 Lost 0x0002: Source 1 comes back 0x0003: Source 1 not started (1ST / 2ST) 0x0004: Source 1 Undervoltage 0x0005: Source 1 Overvoltage 0x0006: Source 1 Unbalanced 0x0007: Source 1 Underfrequency 0x0008: Source 1 Overfrequency 0x0009: Source 1 Rotation fault 0x000A: Source 1 Neutral fault 0x000B: External fault with zero return source 1 0x000C: External fault without zero return source 1 0x000D: Source 1 Overload 0x0101: Source 2 Lost 0x0102: Source 2 comes back 0x0103: Source 2 not started (1ST / 2ST) 0x0104: Source 2 Undervoltage 0x0105: Source 2 Overvoltage 0x0106: Source 2 Unbalanced 0x0107: Source 2 Underfrequency 0x0108: Source 2 Overfrequency 0x0109: Source 2 Rotation fault 0x010A: Source 2 Neutral fault 0x010B: External fault with zero return source 2 0x010C: External fault without zero return source 2 0x010D: Source 2 Overload 0x0201: Test on load start 0x0202: Test on load end 0x0203: Test on load failed 0x0204: Test off load start 0x0205: Test off load end 0x0206: Test off load failed 0x0207: External order on load start 0x0208: External order on load end 0x0209: External order on load failed 0x020A: External order off load start 0x020B: External order off load end 0x020C: External order off load failed 0x020D: Battery charger start 0x020E: Battery charger end 0x020F: Unlimited TOF/TOL stopped because of communication timeout 0x0301: Automatic switch to position 0 0x0302: Automatic switch to position 1 0x0303: Automatic switch to position 2 0x0304: Manual switch to position 0	enum

Dec. Address	Hex. Address	Words count	Description	Unit
0	0	1	0x0305: Manual switch to position 1 0x0306: Manual switch to position 2 0x0307: Remote controlled switch to position 0 0x0308: Remote controlled switch to position 1 0x0309: Remote controlled switch to position 2 0x030A: Operating Factor Fault 0x030B: Position 0 not reached 0x030C: Position 1 not reached 0x030D: Position 2 not reached 0x030E: Unexpected switch to pos 0 when in auto mode 0x030F: Unexpected switch to pos 1 when in auto mode 0x0310: Unexpected switch to pos 2 when in auto mode 0x0311: Unexpected switch to pos 0 when in locked mode 0x0312: Unexpected switch to pos 1 when in locked mode 0x0313: Unexpected switch to pos 2 when in locked mode 0x0401: Input/Output configuration changed 0x0402: Application/Timers configuration changed 0x0403: Sources (thresholds) configuration changed 0x0404: Communication configuration changed 0x0405: HMI configuration changed 0x0406: Network configuration changed 0x0407: Option modules configuration changed 0x0408: Date/Time configuration changed 0x0409: Default configuration loaded 0x040A: User backup configuration loaded 0x040B: User backup configuration saved 0x040C: Product autoconfiguration requested 0x040D: Product autoconfiguration done 0x040E: Product autoconfiguration failed 0x0501: SFT1 - Primary Source fail timer 0x0502: SAT1 - Primary Source availability/stabilization timer 0x0503: LAT1 - Primary Source maintain request timer (cooldown timer) 0x0504: ORT1 - Primary Source return to 0 timer 0x0505: FST1 - Primary Source wait for start timer 0x0506: EET1 - Primary Source battery charger timeout 0x0507: EDT1 - Primary Source battery charger duration 0x0508: SFT2 - Secondary Source fail timer 0x0509: SAT2 - Secondary Source availability/stabilization timer 0x050A: LAT2 - Secondary Source maintain request timer (cooldown timer) 0x050B: ORT2 - Secondary Source return to 0 timer 0x050C: FST2 - Secondary Source wait for start timer 0x050D: EET2 - Secondary Source battery charger timeout 0x050E: EDT2 - Secondary Source battery charger duration 0x050F: DBT - Dead band timer 0x0510: TOL - Test on load duration timer 0x0511: T3T - Test on load end timer 0x0512: TOF - Test off load duration timer 0x0513: STOLT - Time before external order on load 0x0514: ETOLT - Time after external order on load 0x0515: EOLTOT - External order on load duration 0x0516: STOFT - Time before external order off load 0x0517: ETOFT - Time after external order off load 0x0518: EOFTOF - External order off load duration 0x0519: LS_ON - LoadShedding_On Timer 0x051A: LS_OFF - LoadShedding_Off Timer 0x051B: LSB (between 100 ms and 9999 ms) 0x051C: StartGen idle timer 0x0608: Product becomes available 0x0609: Product becomes unavailable 0x060A: Product becomes inhibited 0x060B: Product no more inhibited 0x0701: Source 1 EA+ counter reset 0x0702: Source 1 EA- counter reset 0x0703: Source 1 EQ+ counter reset 0x0704: Source 1 EQ- counter reset 0x0705: Source 1 ES counter reset 0x0706: Source 1 Time meter reset	

Dec. Address	Hex. Address	Words count	Description	Unit
0	0	1	0x0707: Source 2 EA+ counter reset 0x0708: Source 2 EA- counter reset 0x0709: Source 2 EQ+ counter reset 0x070A: Source 2 EQ- counter reset 0x070B: Source 2 ES counter reset 0x070C: Source 2 Time meter reset 0x070D: Start order count reset 0x070E: Start order active duration reset 0x070F: Secondary source duration reset 0x0710: Secondary source active duration reset 0x0711: Source 1 load supplied duration reset 0x0712: Source 2 load supplied duration reset 0x0801: Load shedding request activated 0x0802: Load shedding request deactivated 0x0901: Time range 1 active 0x0902: Time range 1 validated 0x0903: Time range 2 active 0x0904: Time range 2 validated 0x0905: Time range 3 active 0x0906: Time range 3 validated 0x0907: Time range 4 active 0x0908: Time range 4 validated 0x1001: Read indus area failure 0x1002: Write indus area failure 0x1003: Read serial number failure 0x1004: Write serial number failure 0x1101: Customization load error 0x1102: BET in default 0x1103: BET not present 0x1104: Load context failure 0x1105: StartGen relay fault 0x1106: RTC fault 0x1107: Internal display board detection error 0x1108: External display board detection error 0x1109: 2IN/2OUT option module #1 no more detected 0x110A: 2IN/2OUT option module #2 no more detected 0x110B: 2IN/2OUT option module #3 no more detected 0x110C: 2IN/2OUT option module #4 no more detected 0x110D: External display detection error 0x110E: I2C Fault	
1	1	1	Type 0: State 1: Edge 2: System	enum
2	2	1	Severity 0: none 1: information 2: warning 3: default	enum
3	3	1	Satus 0: non active 1: active 2: finished 3: new & checked 4: finished & checked	enum
4	4	4	Start Date	ms since 1 jan 2000
8	8	2	Duration	ms
10	A	1	Cause	-
11	B	2	Value 1	-
13	D	2	Value 2	-

Socomec worldwide

IN WESTERN EUROPE

BELGIUM

B - 1070 Bruxelles
Tel. +32 2 340 02 30
info.be@socomec.com

FRANCE

F - 94132 Fontenay-sous-Bois Cedex
Tel. +33 1 45 14 63 30
info.scp.fr@socomec.com

GERMANY

D - 76275 Ettlingen
Tel. +49 7243 65292 0
info.scp.de@socomec.com

ITALY

I - 20098 San Giuliano Milanese (MI)
Tel. +39 02 98 49 821
info.scp.it@socomec.com

NETHERLANDS

NL - 3991 CD Houten
Tel. +31 30 760 0900
info.nl@socomec.com

SPAIN

E - 08329 Teià (Barcelona)
Tel. +34 93 540 75 75
info.es@socomec.com

UNITED KINGDOM

Hitchin Hertfordshire SG4 0TY
Tel. +44 1462 440 033
info.scp.uk@socomec.com

IN EASTERN EUROPE, MIDDLE EAST, AFRICA

POLAND

01-625 Warszawa
Tel. +48 91 442 64 11
info.scp.pl@socomec.com

ROMANIA

023383 Bucharest
Tel. +40 21 319 36 88
info.ro@socomec.com

RUSSIA

125167 - Moscow
Tel. +7 495 775 19 85
info.ru@socomec.com

SLOVENIA

SI - 1000 Ljubljana
Tel. +386 1 5807 860
info.si@socomec.com

TURKEY

34775 Istanbul
Tel. +90 216 540 71 20-21-22
info.tr@socomec.com

UNITED ARAB EMIRATES

Dubai, U.A.E.
Tel. +971 4 29 98 441
info.ae@socomec.com

IN ASIA

CHINA

P.R.C 200052 Shanghai - China
Tel. +86 21 52 98 95 55
info.cn@socomec.com

INDIA

122001 Gurgaon, Haryana - India
Tel. +91 124 4027210
info.scp.in@socomec.com

SINGAPORE

Singapore 408723
Tel. +65 6506 7600
info.sg@socomec.com

IN NORTH AMERICA

USA, CANADA & MEXICO

Cambridge, MA 02142 USA
Tel. +1 617 245 0447
info.us@socomec.com

HEAD OFFICE

SOCOMECH GROUP

S.A. SOCOMECH capital 10 816 800 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex - FRANCE



www.socomec.com

INTERNATIONAL SALES DEPARTMENT

SOCOMECH

1, rue de Westhouse - B.P. 60010
F - 67235 Benfeld Cedex - FRANCE
Tel. +33 (0)3 88 57 41 41
Fax +33 (0)3 88 74 08 00
info.scp.isd@socomec.com

YOUR DISTRIBUTOR

